



E-01 SHROUD ASSY

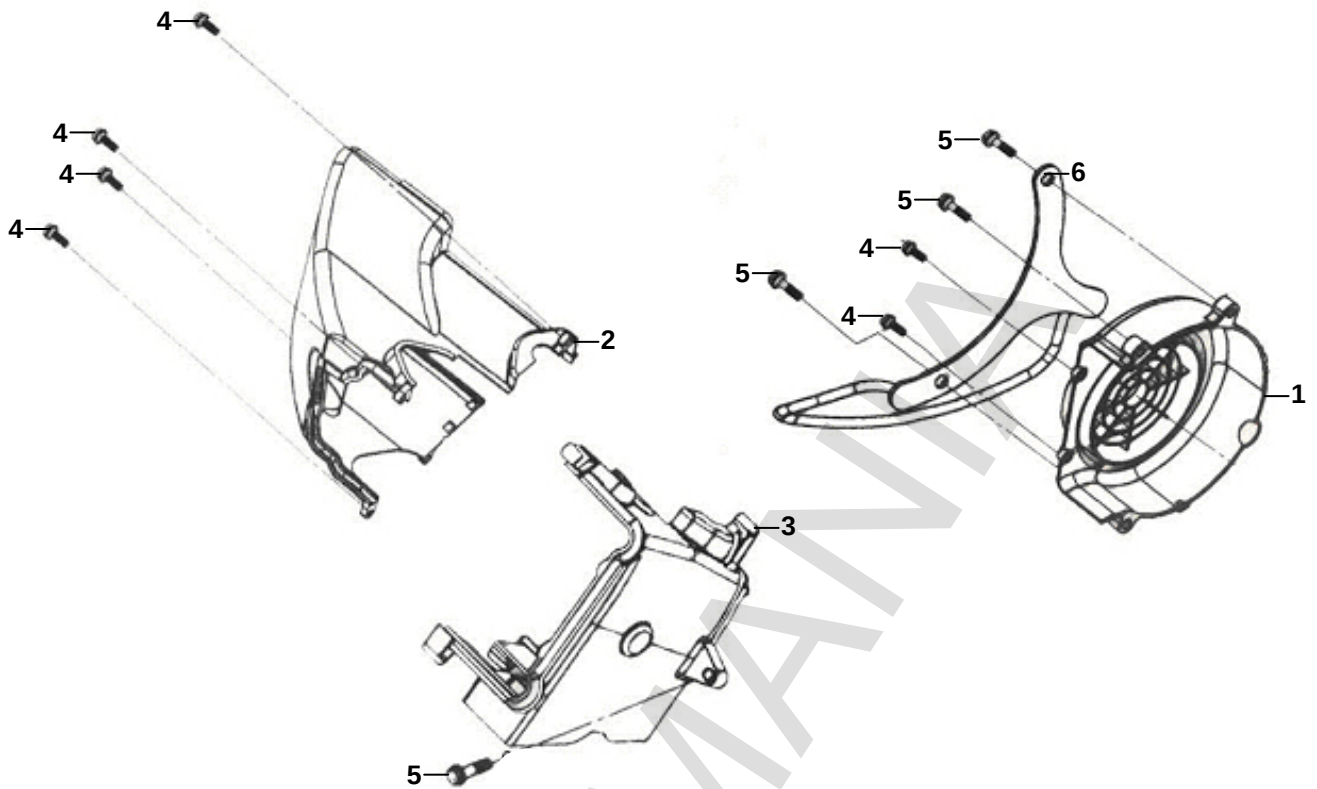


Ref. No	Part Number	Description	Reqd. No.
1	19610-F6A-0004	Fan cover COMP.	1
2	1962A-AFA-0000	Shroud A ASSY.	1
3	1963A-F6A-0001	Shroud B ASSY.	1
4	93904-35380	Tapping screw 5*16	6
5	96001-06028-08	SH. flange bolt 6*28	4
6	18241-H4C-0000	EXH. pipe protector	1

E-02 CYLINDER HEAD

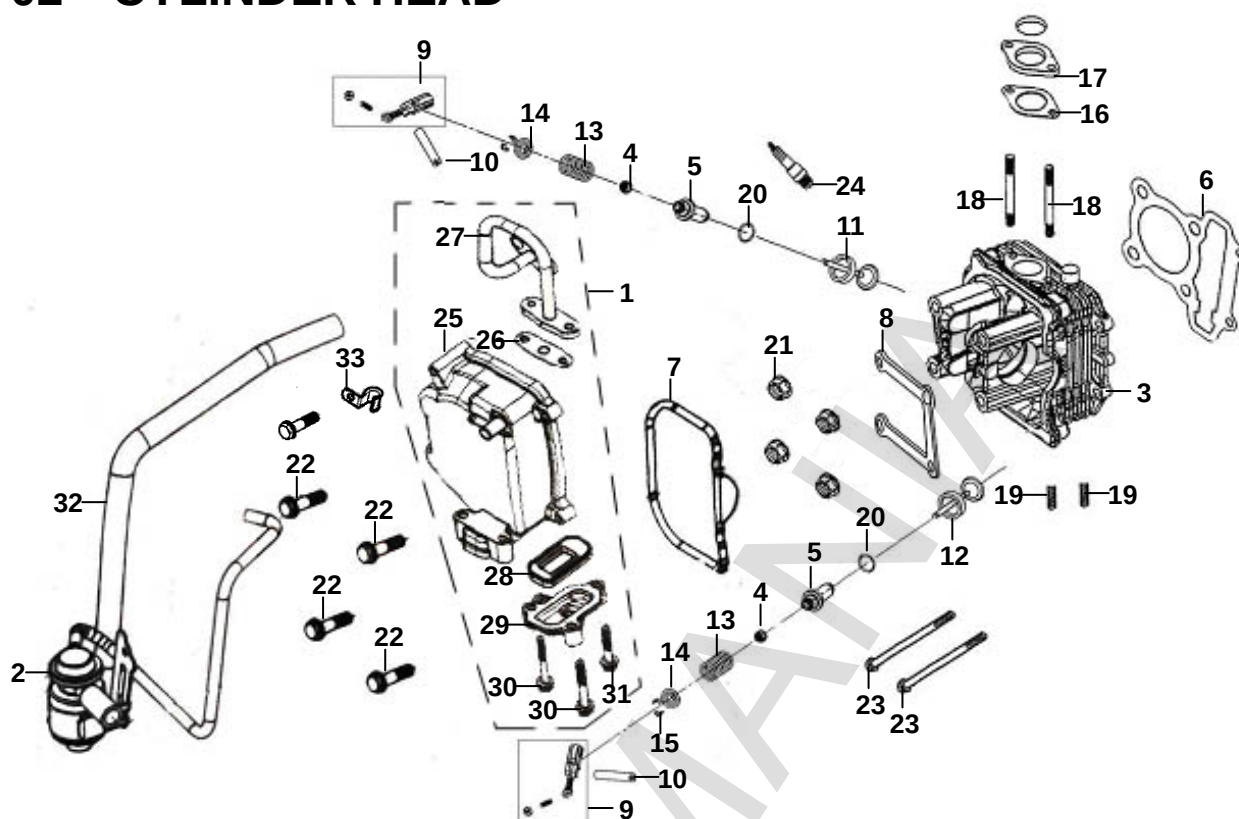


Ref.No	Part Number	Description	Reqd. No.
1	1230A-ARA-0012	Cylinder head cover ASSY.	1
2	1865A-ANA-0002	A.I.C.V. ASSY.	1
3	12200-ARA-0005	Cylinder head COMP.	1
4	12209-H6B-9000	Valve stem seal	2
5	12237-F6A-3000	Valve guide	2
6	12251-H6B-0002	Cylinder head gasket	1
7	12391-ARA-0100	Head cover packing	1
8	12392-ARA-0002	Cylinder head stay	1
9	1443A-F6A-0002	Valve rocker arm ASSY.	2
10	14451-H6B-0000	IN. rocker arm shaft	2
11	14711-F6A-0000	IN. valve	1
12	14721-F6A-0000	EXH. valve	1
13	14751-ARA-0000	Valve spring	2
14	14771-F6C-A000	Retainer valve spring	2
15	14781-A01-A000	Valve cotter	4
16	16201-M92-0002	CARB. insulator gasket	1
17	16211-M92-0002	CARB. insulator	1
18	90034-ABA-0000	Stud bolt 6*65	2
19	90034-HMA-0001	Special stud bolt 8*40	2

E-02-1 CYLINDER HEAD

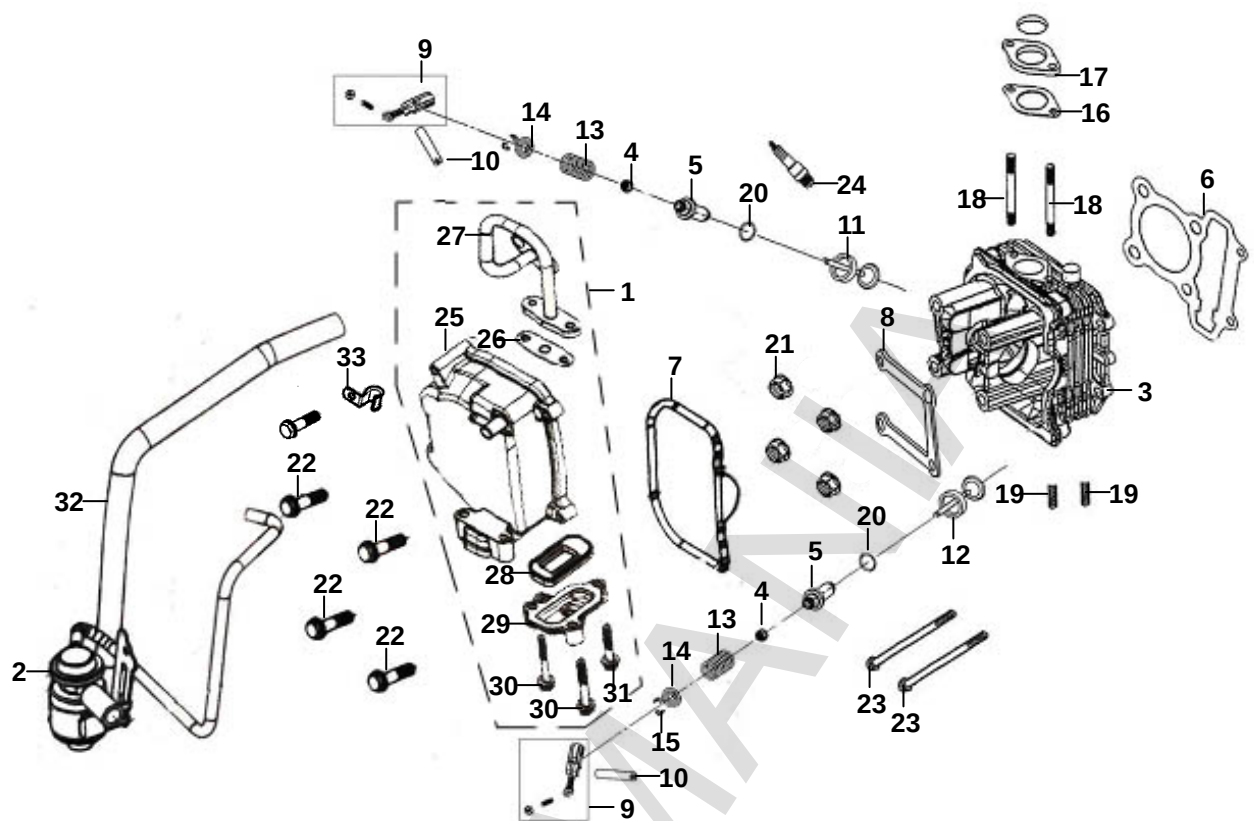


Ref.No	Part Number	Description	Reqd. No.
20	91305-M9Q-0001	O-ring 9*1.6	2
21	94050-08080	Nut flange 8MM	4
22	96001-06025-08	SH. flange bolt 6*25	4
23	96001-06095-08	Flange SH bolt 6*95	2
24	98056-57718-NGK	PLUG. spark(NGK CR7HSA)	1
25	12310-ARA-0011	Cylinder head cover COMP	1
26	18645-M9Q-0000	A/I pipe gasket	1
27	18647-ARA-0000	Air pipe COMP.	1
28	18601-MJ1-7901	Reed valve COMP.	1
29	18612-H66-0002	Reed valve cover	1
30	95701-06040-00	Flange bolt 6*40	2
31	95701-06025-00	Flange bolt 6*25	1
32	18860-H6H-9103	Aicv tube ASSY	1
33	32921-ARA-0000	Vacuum tube clip	1

E-03 CAM SHAFT&CYL. HEAD L. SIDE COVER

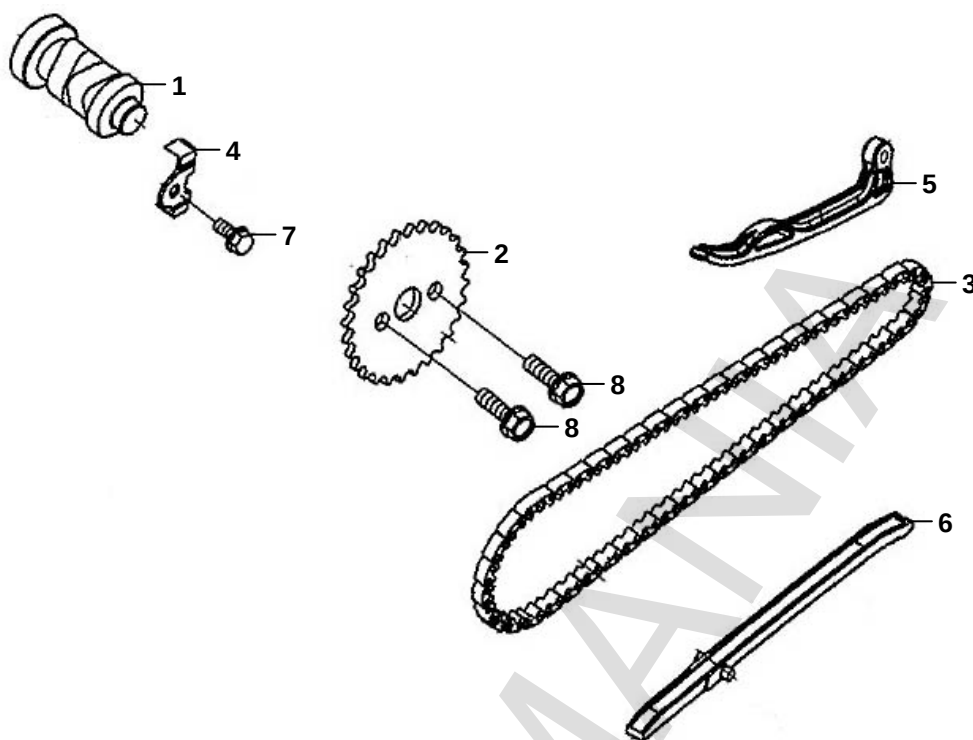


Ref. No	Part Number	Description	Reqd. No.
1	14100-ARA-0002	Cam shaft COMP.	1
2	14105-F6A-0000	Cam sprocket	1
3	14401-F6A-0000	Cam chain	1
4	14457-F6A-0000	Cam shaft setting plate	1
5	14510-F6A-0000	Cam chain tensioner	1
6	14610-F6A-0100	Cam chain guide	1
7	96001-06016-08	SH. flange bolt 6*16	1
8	90083-B12-0000	Knock bolt 6MM	2

E-04 R CRANK CASE&OIL PUMP ASSY

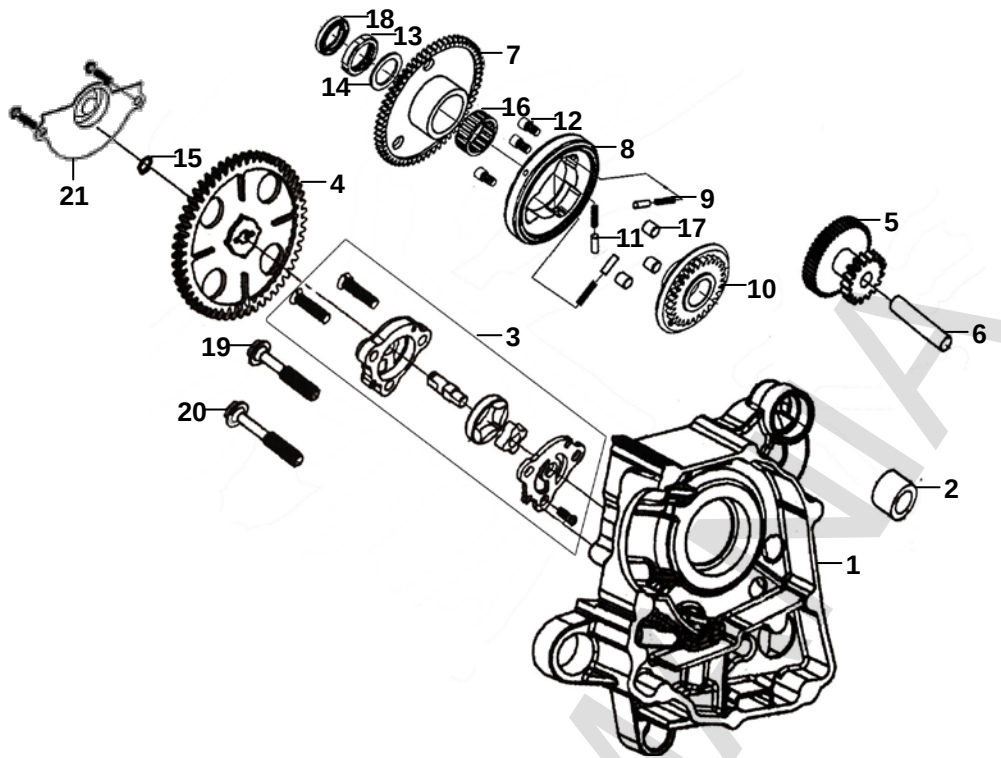


Ref. No	Part Number	Description	Reqd. No.
1	11100-ARA-0004	R. crank case COMP.	1
2	11102-M9Q-3000	ENG. hanger rubber bush	1
3	15100-F6C-0001	Oil pump ASSY.	1
4	15133-F6C-0001	Oil pump driven gear	1
5	28101-GY6-9000	Starter reduction gear	1
6	28102-GY6-9000	Start. red. gear shaft	1
7	28110-M9Q-0002	Start. clutch gear COMP	1
8	28120-M9Q-0007	Starting clutch outer COMP.	1
9	28124-H6T-0000	Starter clutch roller spring	3
10	28125-M92-0002	Starting clutch flange COMP.	1
11	28126-M9Q-0000	Starting roller spring cap	3
12	90002-M9Q-0001	Socket bolt 6*10	3
13	90201-GY6-9000	Lock nut 22MM	1
14	90403-M92-0000	Thrust washer 22.2*31*1.5	1
15	90602-N01-0000	C-clip 8mm	2
16	91104-M9Q-0000-M2	Needle bearing 28*32*17	1
17	91105-M9Q-0002	Roller 10*10	3
18	91201-GY6-9031	Oil seal 19.8*30*5R	1
19	96001-06045-08	Flange bolt 6*45	1
20	96001-06055-08	Flange bolt 6*55	1
21	15711-M92-0001	Oil pump separator	1

E-05 CYLINDER

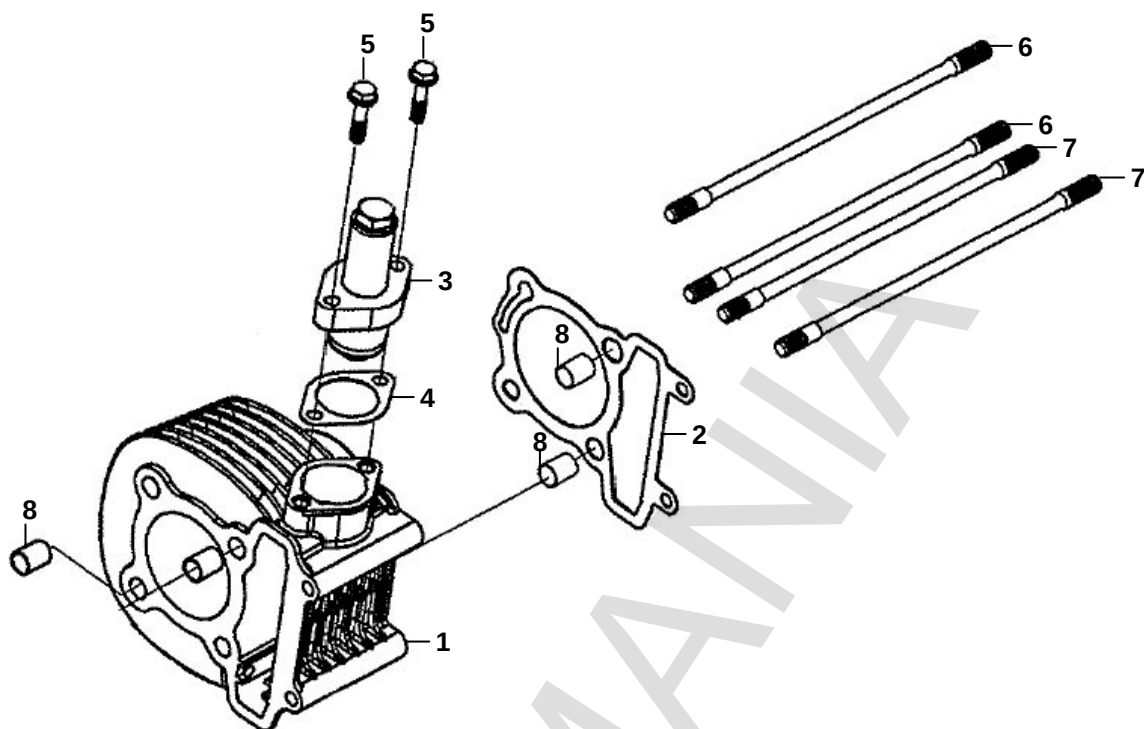


Ref. No	Part Number	Description	Reqd. No.
1	12101-ARB-0000	Cylinder	1
2	12191-F6C-0000	Cylinder gasket	1
3	14520-GY6-9011	Tensioner lifter ASSY.	1
4	14523-GY6-9000	Tensioner lifter gasket	1
5	90001-M9Q-0000	SH. flange bolt 6*22	2
6	90031-M92-0001	Cylinder stud bolt A	2
7	90032-A6A-0000	Cylinder stud bolt B	2
8	90703-M8Q-0003	Dowel pin 10*14	4

E-06 R. CRANK CASE COVER

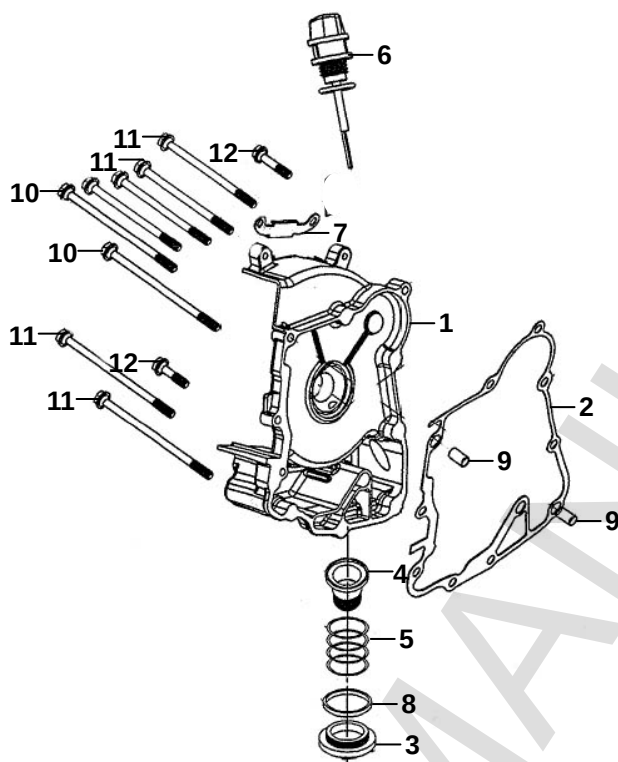


Ref. No	Part Number	Description	Reqd. No.
1	11331-ARB-0002	R. crank case cover	1
2	11394-F6C-0000	R. cover gasket	1
3	12361-M9Q-0001	Tappet adjusting hole cap	1
4	15421-H66-0000	Oil filter screen	1
5	15426-M9Q-0000	Oil fillter screen SPG.	1
6	15651-F6A-0000	Oil level gauge	1
7	32961-ARA-0000	ACG cord clammer	1
8	91302-M9T-0002	O-ring 30.8MM	1
9	94301-08140	Dowel pin 8*14	2
10	96001-06100-08	SH flange bolt 6*100	2
11	96001-06095-08	Flange sh bolt 6*95	6
12	96001-06030-08	SH. flange bolt 6*30	2

E-07 AC GEN. ASSY

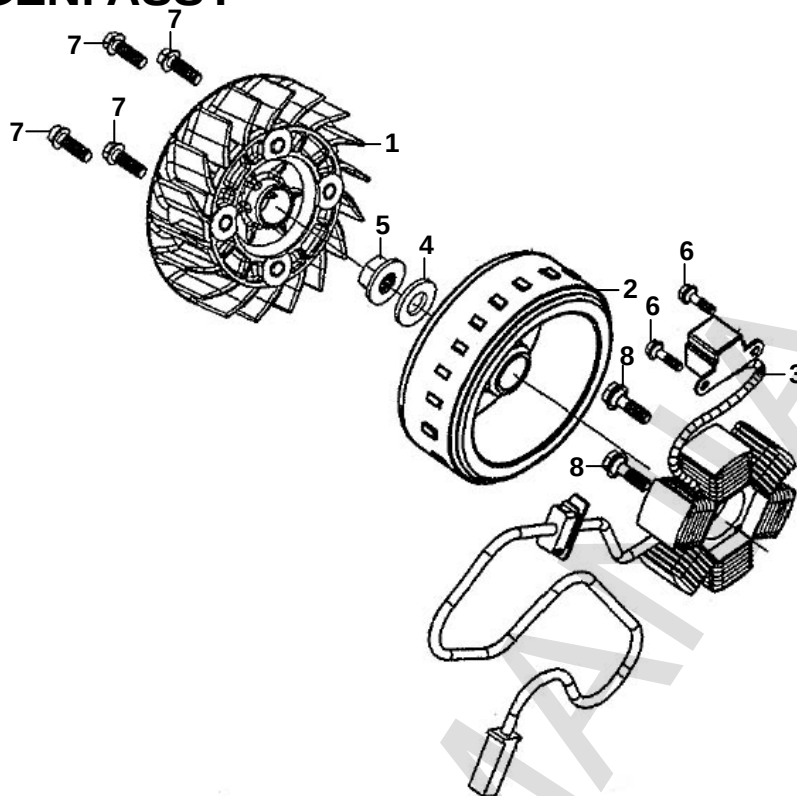


Ref. No	Part Number	Description	Reqd. No.
1	19510-F6A-0102	Cooling fan COMP.	1
2	31110-X1A-0000	Flywheel COMP	1
3	31120-X1A-0000	Stator COMP.	1
4	90440-166-0000	Plain washer 12MM	1
5	94050-12000	Flange nut 12MM	1
6	92101-05012-0A	HEX bolt 5*12mm	2
7	96001-06018-08	Flange bolt 6*18	4
8	96001-06028-08	SH. flange bolt 6*28	2

E-08 L. CRANK CASE COVER

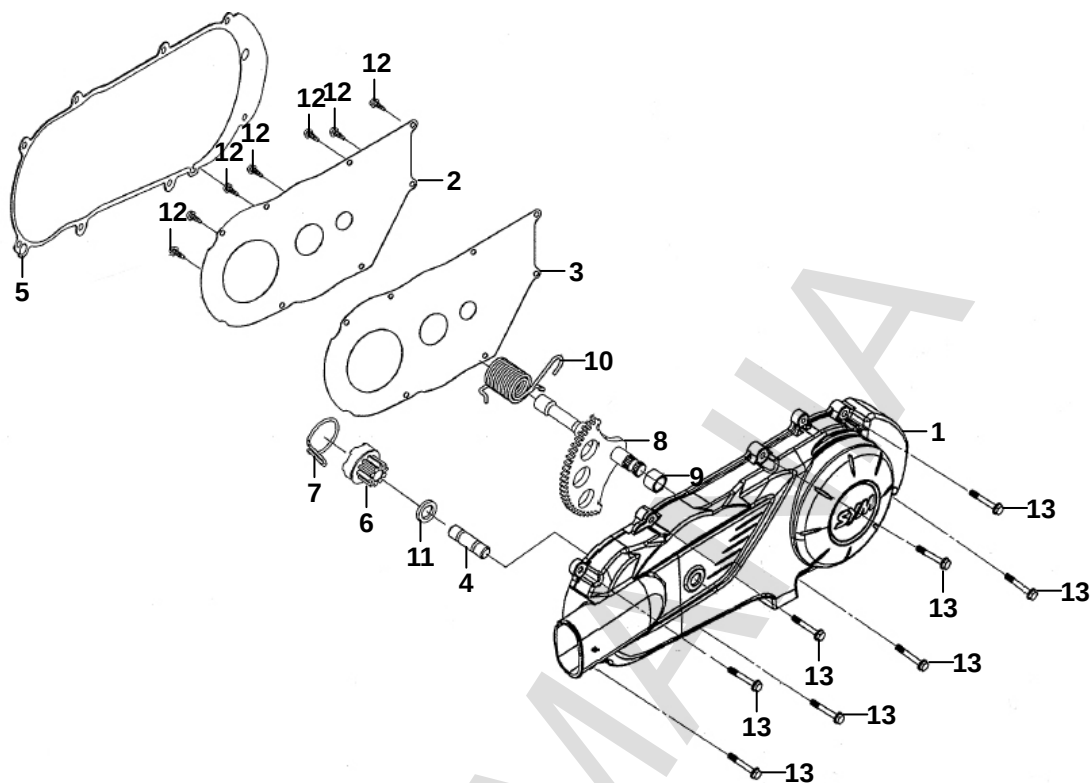


Ref. No	Part Number	Description	Reqd. No.
1	11341-ANA-0001	L. crank case cover	1
2	11342-ANA-0001	L. side cover plate	1
3	11343-ANA-0001	L. side cover plate gasket	1
4	11360-M92-3000	Kick starter driven shaft	1
5	11395-ANA-0000	L. cover gasket	1
6	28230-H6T-0000	Kick driven gear COMP.	1
7	28233-M92-0001	Kick starter friction SPG	1
8	28250-ARA-0000	Kick starter spindle COMP.	1
9	28254-KG8-910A	Kick spindle bush 14*18*16	1
10	28281-ARA-0000	Kick return spring	1
11	90452-M9Q-0000	Thrust washer 12MM	1
12	93500-05012-0H	Pan screw 5*12mm	7
13	96001-06028-00	Flange bolt SH 6*28	8

E-09 MOVABLE DRIVE FACE ASS'Y

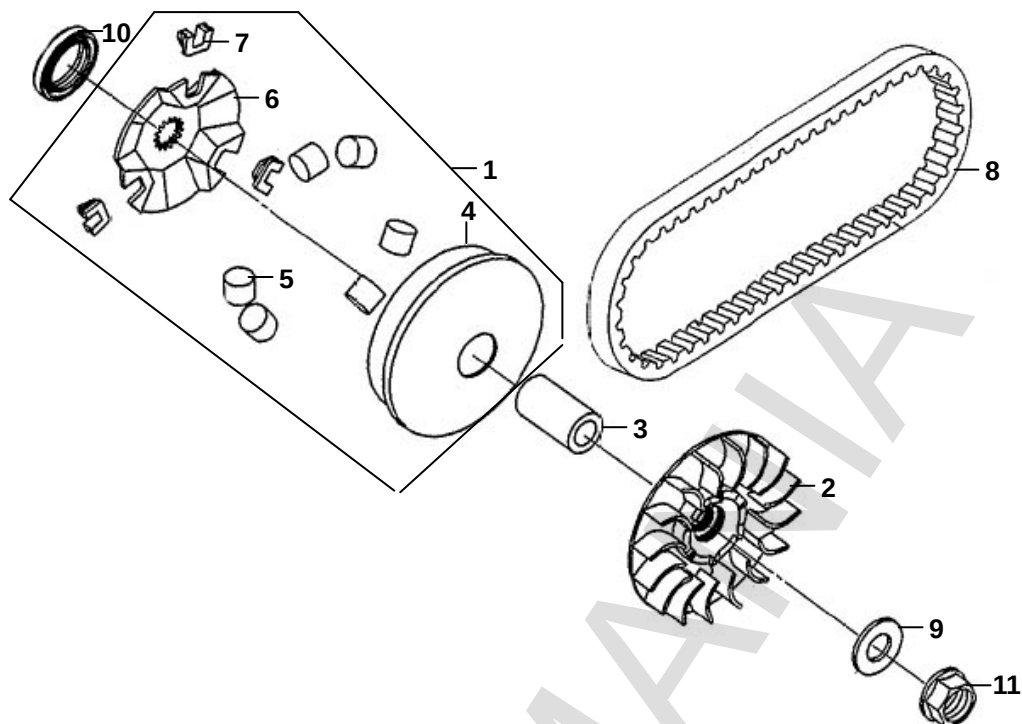


Ref. No	Part Number	Description	Reqd. No.
1	2211A-ARA-0000	Movable drive face ASSY.	1
2	22102-M92-0004	Drive face COMP.	1
3	22105-M92-0000	Drive face boss	1
4	22110-H5B-0001	Movable drive face COMP.	1
5	22121-HKE-0000	Weight roller COMP.	6
6	22131-M92-0002	Ramp plate	1
7	22132-ARA-0000	Slide piece	3
8	23100-ANA-0100	Drive belt	1
9	90440-166-0000	Plain washer 12MM	1
10	91202-A6A-0000	Oil seal 25*40*7	1
11	94050-12000	Flange nut 12MM	1

E-10 DRIVEN PULLEY ASS'Y

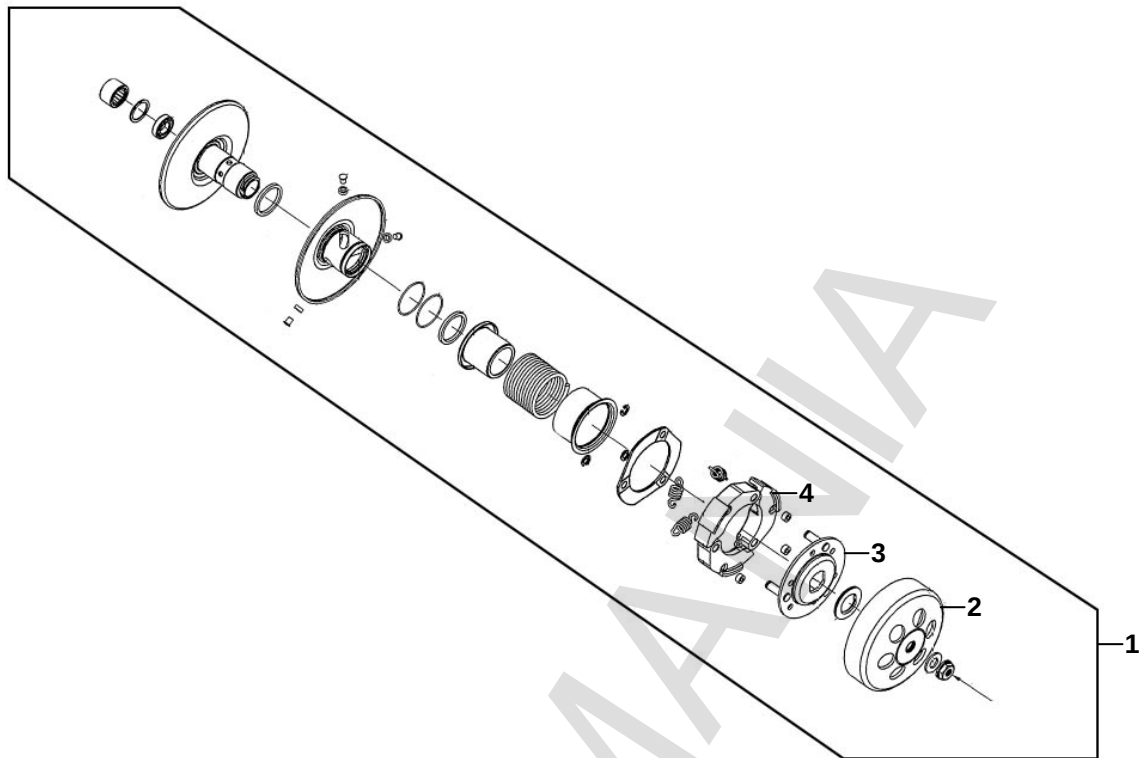


Ref. No	Part Number	Description	Reqd. No.
1	2301A-F6C-0000	Driven pulley set	1
2	22101-M9Q-0003	Clutch outer	1
3	22350-HKE-0001	Drive plate COMP.	1
4	22530-F6C-0000	Clutch weight	1

E-11 MISSION CASE&DRIVE SHAFT

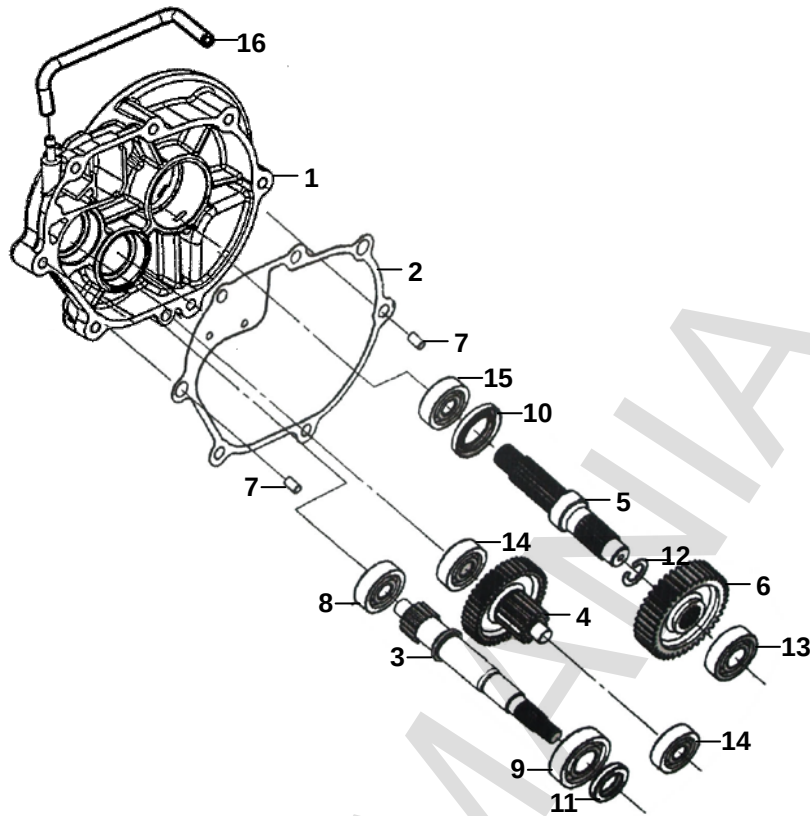


Ref. No	Part Number	Description	Reqd. No.
1	21200-AFA-0001	Mission case COMP.	1
2	21395-ABA-0000	Mission cover gasket	1
3	23411-ANA-0001	Drive shaft	1
4	23420-HHA-0100	Counter shaft COMP.	1
5	23431-ABA-0000	Final shaft	1
6	23432-HHA-0100	Final gear 43T	1
7	90703-M8Q-0003	Dowel pin 10*14	2
8	91003-M8Q-0000	Radial ball BRG. CSB301	1
9	91104-KN7-6700-M2	Radial ball BRG. CSB204	1
10	91201-HHA-3001	Oil seal 32*47*7	1
11	91202-KJ9-0030-M1	Oil seal 20*32*6	1
12	94510-22000	EX. cir-clip 22MM	1
13	96100-62033-10	Radial ball BRG. 6203	1
14	96100-63013-00	Radial ball BRG 6301	2
15	96150-62043-10	Ball radial bearing 6204	1
16	11221-ABA-0000	Mission breather tube	1

E-12 L. CRANK CASE

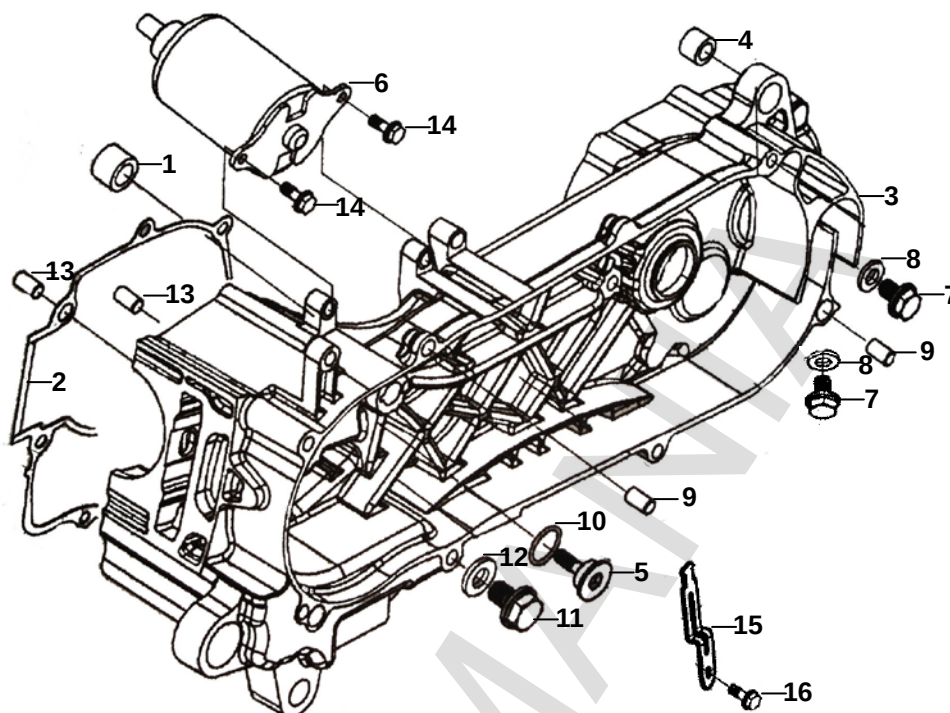


Ref. No	Part Number	Description	Reqd. No.
1	11102-M9Q-3000	ENG. hanger rubber bush	1
2	11192-F6C-0000	R. crank case gasket	1
3	11200-ANA-0100	L. crank case COMP.	1
4	11203-M9Q-3000	RR. CUSH. UN. rubber bush	1
5	14531-M9Q-0000	Cam chain tensioner pivot	1
6	31200-F6C-A000	Start motor ASSY.	1
7	90103-ANA-0001	Special bolt 8MM	2
8	90474-333-0000	Washer 8MM	2
9	90703-M8Q-0003	Dowel pin 10*14	2
10	91304-M9Q-0000	O-ring 15.2*1.5	1
11	92800-12000	Drain plug bolt 12MM	1
12	94109-12000	Plug drain washer 12mm	1
13	94301-08140	Dowel pin 8*14	2
14	96001-06016-08	SH. flange bolt 6*16	2
15	11225-ABA-0001	AIR/C duct stay	1
16	96001-06012-08	SH. flange bolt 6X12	1

E-13 CRANK SHAFT

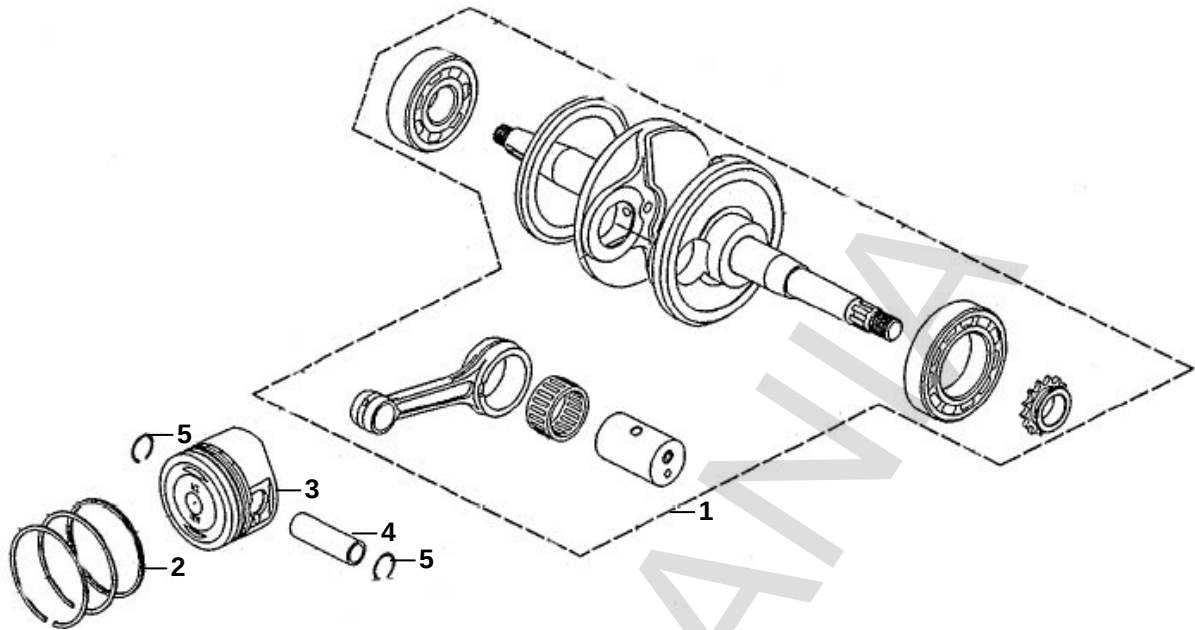


Ref. No	Part Number	Description	Reqd. No.
1	13000-ARA-0005	Crank shaft COMP	1
2	13010-U3A-0000	Piston ring set	1
3	13101-F6C-0000	Piston	1
4	13111-ARA-0000	Piston pin	1
5	94601-15000	Piston pin clip	2

E-14 Carburetor

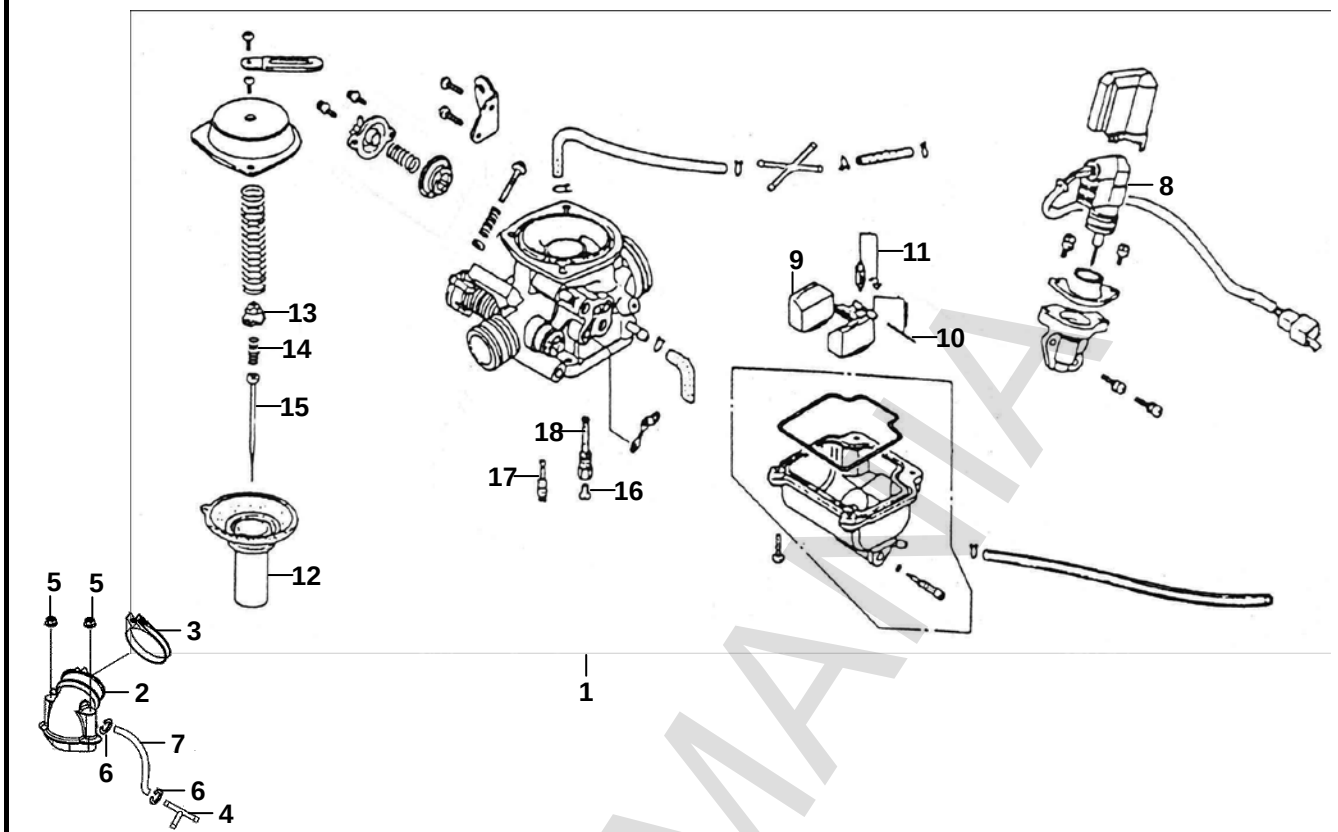


Ref. No	Part Number	Description	Reqd. No.
1	16100-ANA-0100	Carburetor ASS'Y	1
2	17110-ANA-0000	Inlet pipe COMP.	1
3	17256-M9Q-0000	Insulator band	1
4	18670-S6N-0000	3-way joint ASSY	1
5	94050-06000	Flange nut 6MM	2
6	95002-02070	Tube clip B7	2
7	95005-35110-50	Tube 3.5*110	1
8	16101-ANA-0000	Auto-by start	1
9	16120-ANA-0000	Float COMP.	1
10	16121-ANA-0000	Arm pin	1
11	16122-ANA-0000	Float valve COMP.	1
12	16142-ANA-0000	Vacuum piston COMP.	1
13	16143-ANA-0000	Valve plate	1
14	16144-ANA-0000	SPG. COMP	1
15	16145-ANA-0000	Needle jet	1
16	16180-ANA-0000	Main jet	1
17	16181-ANA-0000	Slow jet COMP.	1
18	16182-ANA-0000	Needle jet holder	1

F-01 Head Light

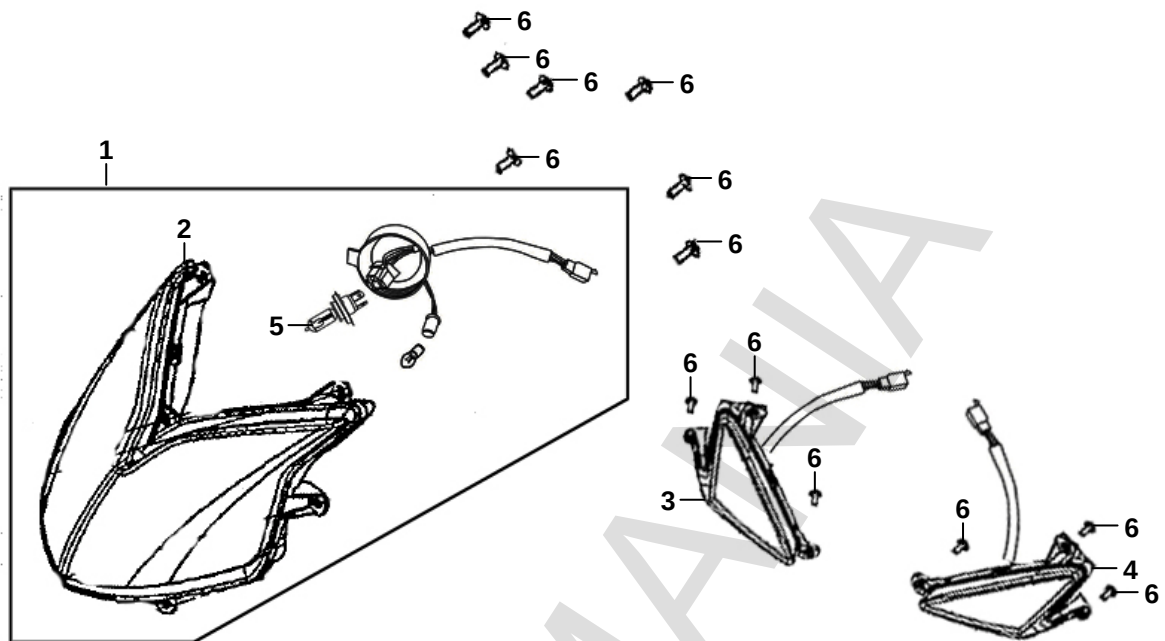


Ref. No	Part Number	Description	Reqd. No
1	33100-ATA-0200	Head light ASSY	1
2	33101-ATA-0200	Head light lens	1
3	33400-ATA-0100	FR. R winker ASSY	1
4	33450-ATA-0100	FR. L winker ASSY	1
5	34901-X06-0000	Head light bulb	1
6	93903-35340	Tapping screw 5X16	13

F-02 Speed Meter

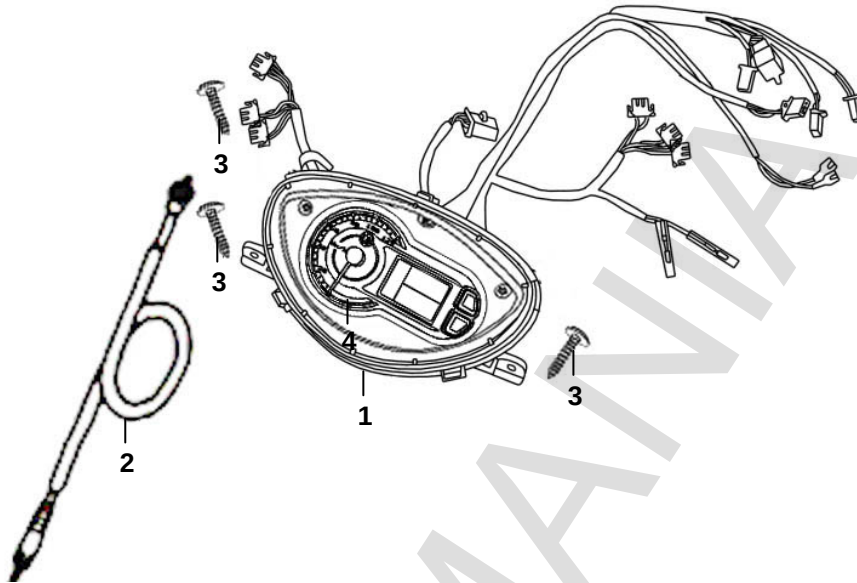


Ref. No	Part Number	Description	Reqd. No
1	37200-ANA-0101	Speedometer ASSY	1
2	44830-ABA-0001	Speedometer cable COMP	1
3	93903-35340	Tapping screw 5X16	3
4	37204-ARB-0000	Meter lens	1

F-03 Cable • Switch • Handle Lever

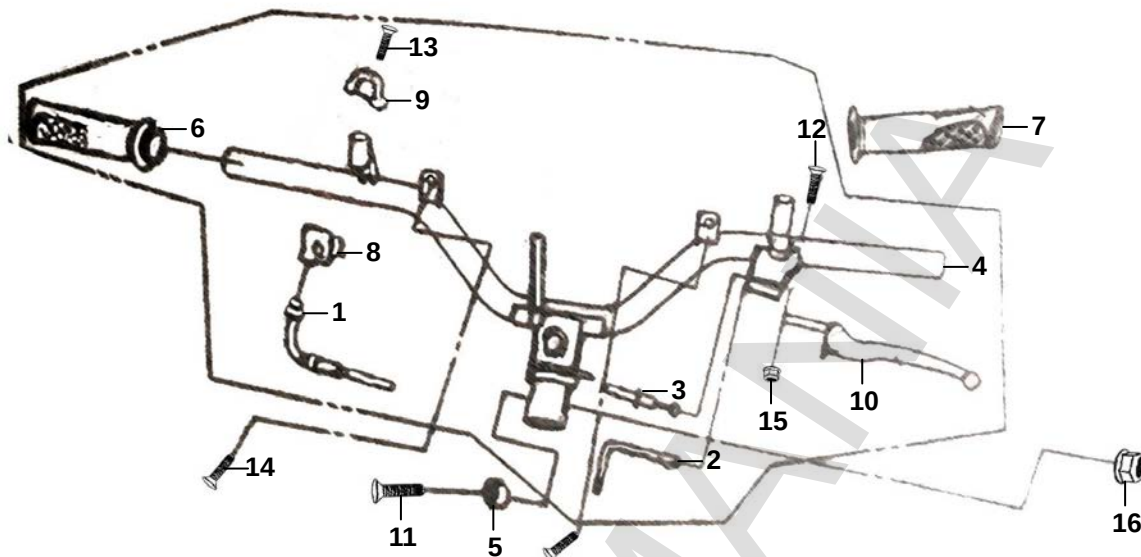


Ref. No	Part Number	Description	Reqd. No
1	17910-ANA-0002	Throt cable COMP	1
2	35340-M92-0001	FR. Stop SW. ASSY	1
3	43450-ANA-0000	RR. brake cable COMP	1
4	53100-ANA-0001	STRG. handle	1
5	53125-M9Q-0000	HNDL. set collar	1
6	53140-S1F-H001	RH. HNDL. grip	1
7	53166-S1F-H001	LH. HNDL. grip	1
8	53167-H09-9001	THROT. UND. housing	1
9	53168-H09-0001	Up thort housing	1
10	53178-T6V-0000	L. STRG. handle lever	1
11	90106-ABA-0000	Flange bolt 10X55	1
12	90115-M9Q-0000	Screw handle lever pivot	1
13	93500-05025-04	Pan screw 5*25	1
14	93903-35340	Tapping screw 5X16	1
15	94001-05040-0S	Hex nut 5MM	1
16	90304-AAA-0000	Flange U nut 10MM	1

F-04 Front Brake Master Cylinder

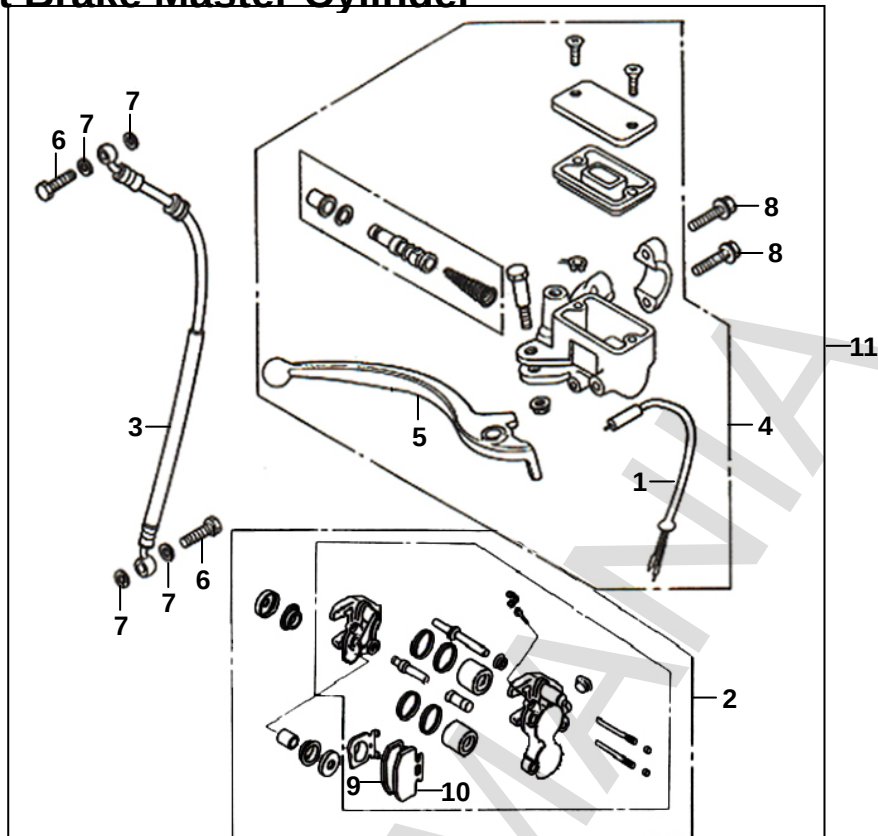


Ref. No	Part Number	Description	Reqd. No
1	35342-M9Q-0000	FR. stop SW. ASSY	1
2	45100-ATA-0000	Caliper ASSY	1
3	45126-ATA-0001	FR. brake hose ASSY	1
4	45500-AAG-0000	FR. master cylinder	1
5	53175-T6V-0000	R. Steering handle lever	1
6	90145-M9Q-0000	Oil bolt M10x22	2
7	90545-M9Q-0000	Oil bolt washer	4
8	95801-06022-04	Flange bolt 6*22	2
9	45105-APA-0000	Pad A COMP	1
10	45106-APA-0000	Pad B COMP	1
11	4550A-ATA-0003	FR. brake ASSY	1

F-06 Handle Pipe • Handle Cover

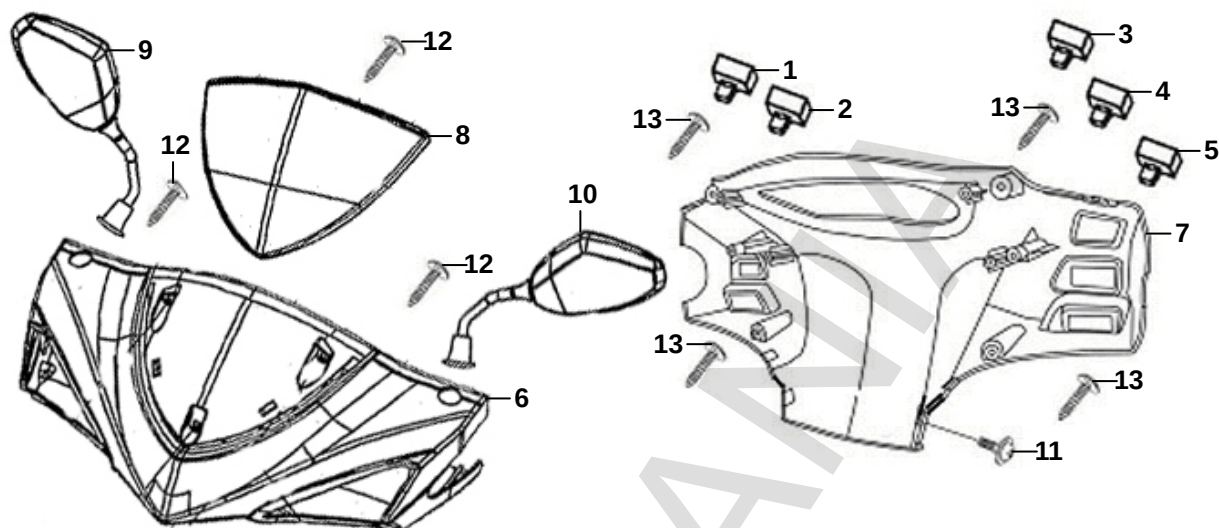


F e	Part Number	Description	Reqd. No
	135150-M9F-A000	Lighting SW. UNIT	1
	235160-M9Q-0002	Start SW. UNIT	1
	335170-M9Q-0002	Dimmer and open SW. UNIT	1
	435180-M9Q-0002	Horn SW. UNIT	1
	535200-M9Q-0001	Winker SW. UNIT	1
	653205-ATA-0000-BP	FR. handle cover ASSY (blue)	1
	653205-ATA-0000-K	FR. handle cover ASSY (black)	1
	653205-ATA-0000-RI	FR. handle cover ASSY (red)	1
	653205-ATA-0000-Y	FR. handle cover ASSY (yellow)	1
	753206-APA-0000	RR. handle cover	1
	853270-ATA-0000	Handle visor	1
	988110-ANA-0000	R. back mirror ASSY	1
	188120-ANA-0000	L. back mirror ASSY	1
	193891-05018-07	Washer screw 5X18	1
	193903-34380	Tapping screw 4.2X12	3
	193903-35320	Tapping screw 5X16	4

F-07 Front Cover • Front Inner Box

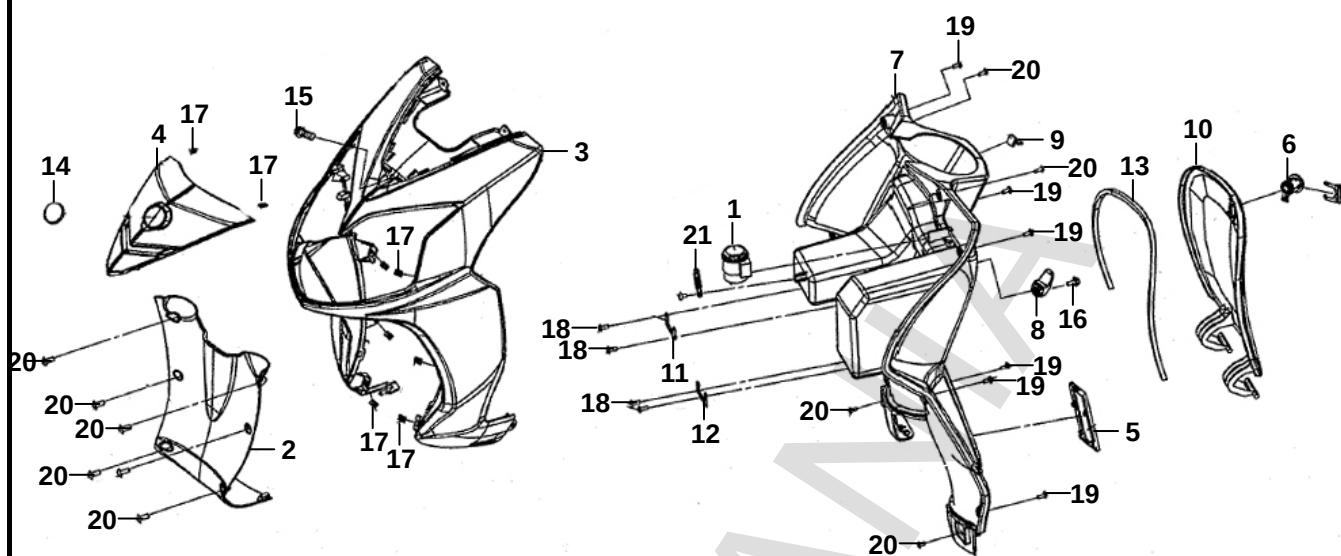


Ref. No	Part Number	Description	Reqd. No
1	38300-T40-0101	Winker relay	1
2	64300-ATA-0001-BP/K/RI/Y	Under spoiler(blue/black/red/yellow)	1
3	64301-ATA-0002-BP/K/RI/Y	FR cover(blue/black/red/yellow)	1
4	64302-ATA-0001-BP/K/RI/Y	Top cover(blue/black/red/yellow)	1
5	64318-ALA-0000	Frame number lid	1
6	77233-M9Q-0000	Inner box lock ASSY	1
7	81131-ATA-0001	Inner box	1
8	81132-M7Q-0001	Luggage hook	1
9	81133-ABA-0000	Luggage stopper	1
10	81141-ATA-0000	Inner box lid	1
11	81142-APA-0000	RH. inner box lid plate	1
12	81142-APA-0000	LH. inner box lid plate	1
13	81146-APA-0000	Inner box seal	1
14	87123-ATC-0000	S logo	1
15	90164-AAA-0000	Special screw 6X14	1
16	90115-ATA-0000	Bolt 6X16	1
17	90308-X04-0000	Spring nut 5MM	8
18	93903-34320	Tapping screw 4X12	4
19	93903-35380	Tapping screw 5X16	6
20	93903-45380	Tapping screw 5X16	10
21	94591-21000	Clip 2X100	1

F-08 Floor Panel • Center Cover

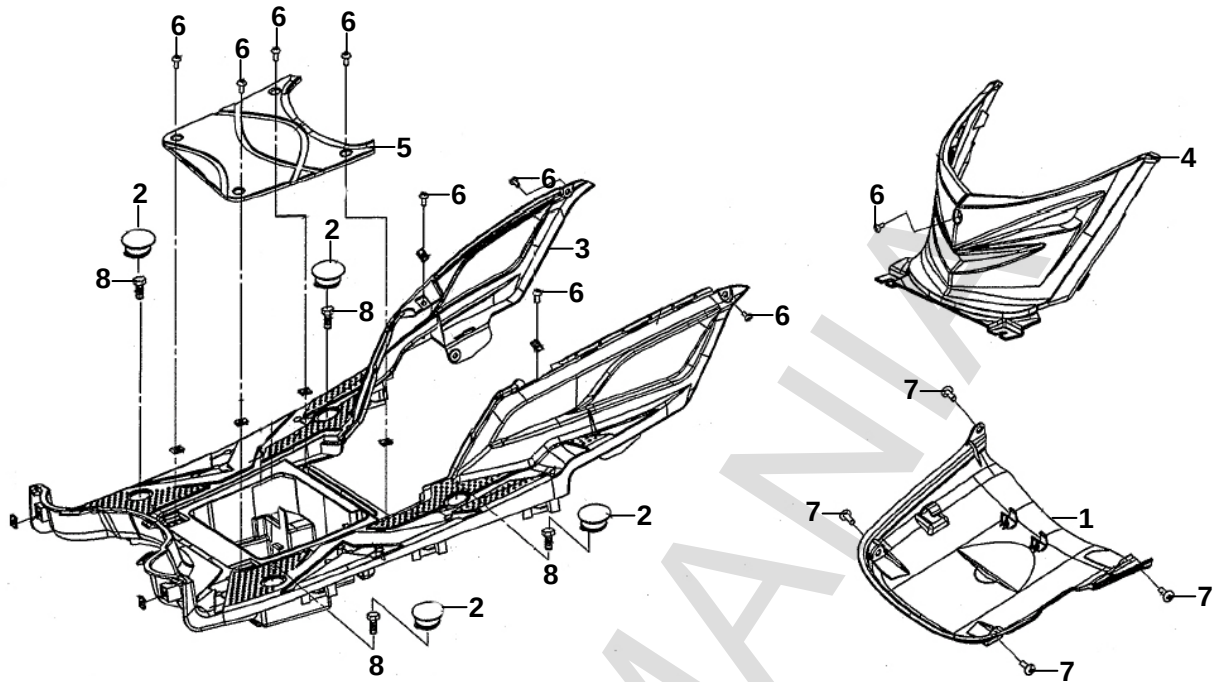


Ref. No	Part Number	Description	Reqd. No
1	50612-APA-0000	Under cover	1
2	50612-APA-0000	Floor step lap A	4
3	64310-ATA-0001	Floor panel 脚踏板	1
4	80151-ATA-0000	Center cover	1
5	50326-AAA-0000	Battery cover	1
6	93903-45380	Tapping screw 5X16	9
7	93404-06016-07	Washer bolt 6X16	4
8	90111-M9Q-8000	Flange bolt 6MM	4

F-09 Body Cover

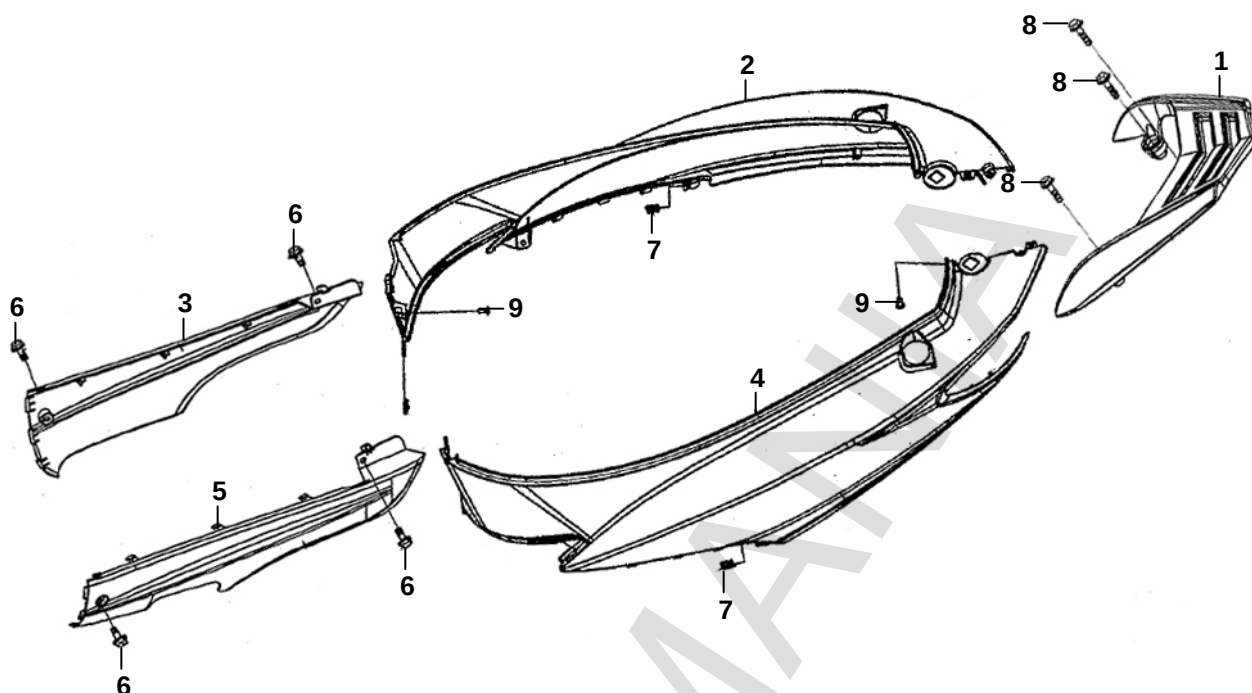


Ref. No	Part Number	Description	Reqd. No
1	81200-ATA-0001	RR carrier	1
2	83500-ATA-0001-BP	RH. body cover (BLUE)	1
2	83500-ATA-0001-K	RH. body cover (BLACK)	1
2	83500-ATA-0001-RI	RH. body cover (RED)	1
2	83500-ATA-0001-Y	RH. body cover (YELLOW)	1
3	83520-ATA-0001-BP	RH. side cover (BLUE)	1
3	83520-ATA-0001-K	RH. side cover (BLACK)	1
3	83520-ATA-0001-RI	RH. side cover (RED)	1
3	83520-ATA-0001-Y	RH. side cover (YELLOW)	1
4	83600-ATA-0001-BP	LH. body cover (BLUE)	1
4	83600-ATA-0001-K	LH. body cover (BLACK)	1
4	83600-ATA-0001-RI	LH. body cover (RED)	1
4	83600-ATA-0001-Y	LH. body cover (YELLOW)	1
5	83620-ATA-0001-BP	LH. side cover (BLUE)	1
5	83620-ATA-0001-K	LH. side cover (BLACK)	1
5	83620-ATA-0001-RI	LH. side cover (RED)	1
5	83620-ATA-0001-Y	LH. side cover (YELLOW)	1
6	90118-ALA-0000	Washer bolt 5X14	4
7	90308-X04-0000	Spring nut 5MM	2
8	93401-HKD-0001	Washer bolt 8X30	3
9	93903-35320	Tapping screw 5X16	2

F-10 Steering Stem • Front Cushion

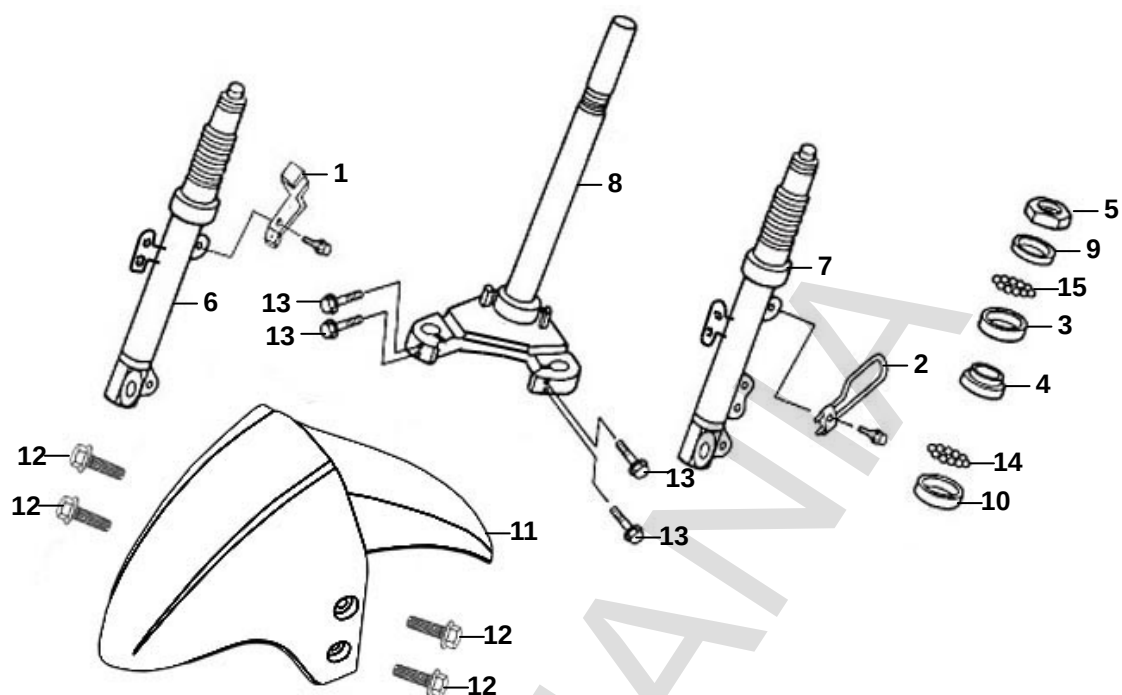


Ref. No	Part Number	Description	Reqd. No
1	45156-AAA-0000	FR. brake cable	1
2	45465-AAA-0000	Cable guide	1
3	50301-M9Q-0002	STRG.up ball race	1
4	50302-M9Q-0000	Race STRG.bot ball	1
5	50306-M9Q-0000	STRG. stem lock nut	1
6	51400-ATA-0001	R.FR. cushion	1
7	51500-ATA-0001	L.FR. cushion	1
8	53200-AAA-0003	Steeting stem	1
9	53211-M9Q-0000	STRG. top cone	1
10	53212-M9Q-0000	Cone STRG. bottom	1
11	61100-AAA-0000-BP	FR. Fender (BLUE)	1
11	61100-AAA-0000-K	FR. Fender (BLACK)	1
11	61100-AAA-0000-RI	FR. Fender (RED)	1
11	61100-AAA-0000-Y	FR. Fender (YELLOW)	1
12	90111-AAA-0000	Flange bolt 6MM	4
13	95801-08040-00	Flange bolt 8X40	4
14	96211-05000	Steel ball 5#	26
15	96211-08000	Steel ball 8#	19

F-11 Front Wheel

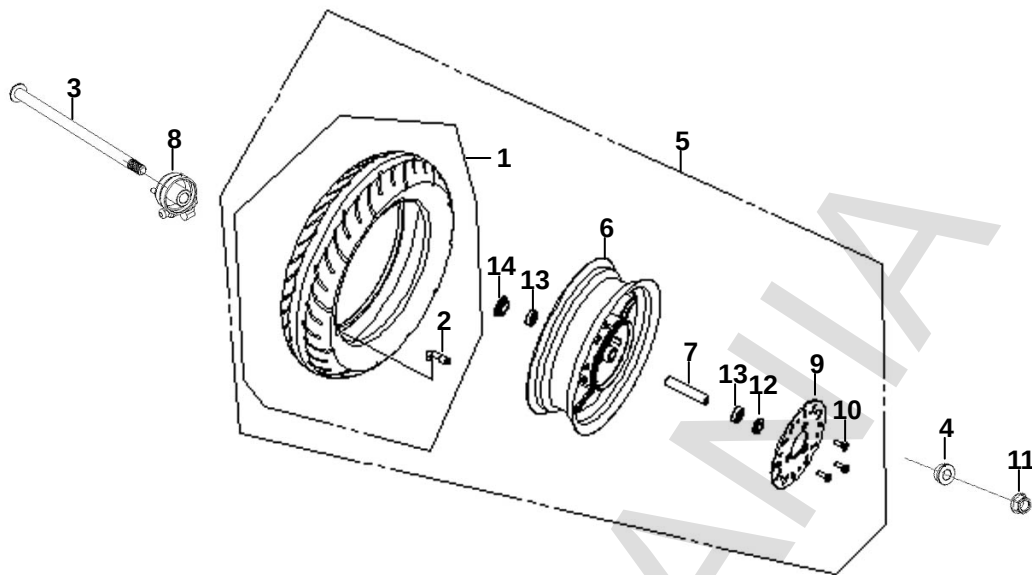


Ref. No	Part Number	Description	Reqd. No
1	44710-ATA-9000	Tire ASS'Y	1
2	42753-ABA-0000	Rim valve	1
3	44301-AAA-0000	FR. wheel axle 10*172	1
4	44311-AAA-0000	Collar fr wheel side	1
5	44600-ATE-0001	FR. wheel ASS'Y	1
6	44601-ATA-0001	FR. cast wheel	1
7	44620-AAA-0000	FR. axle dist collar	1
8	44800-G22-0005	SPDMT gear box ASS'Y	1
9	45121-ATE-0000	FR. brake disk	1
10	90105-KR3-000A	FR. disk bolt 8*26	3
11	90306-M9Q-0001	Self-lock nut 12MM	1
12	90754-M9Q-0000-M1	Dust seal 20*32*5	1
13	90912-M9Q-0000	Bearing 6201(U) (NTN)	2
14	91258-M9Q-0000	SPDMT. gear box seal	1

F-12 Rear Wheel

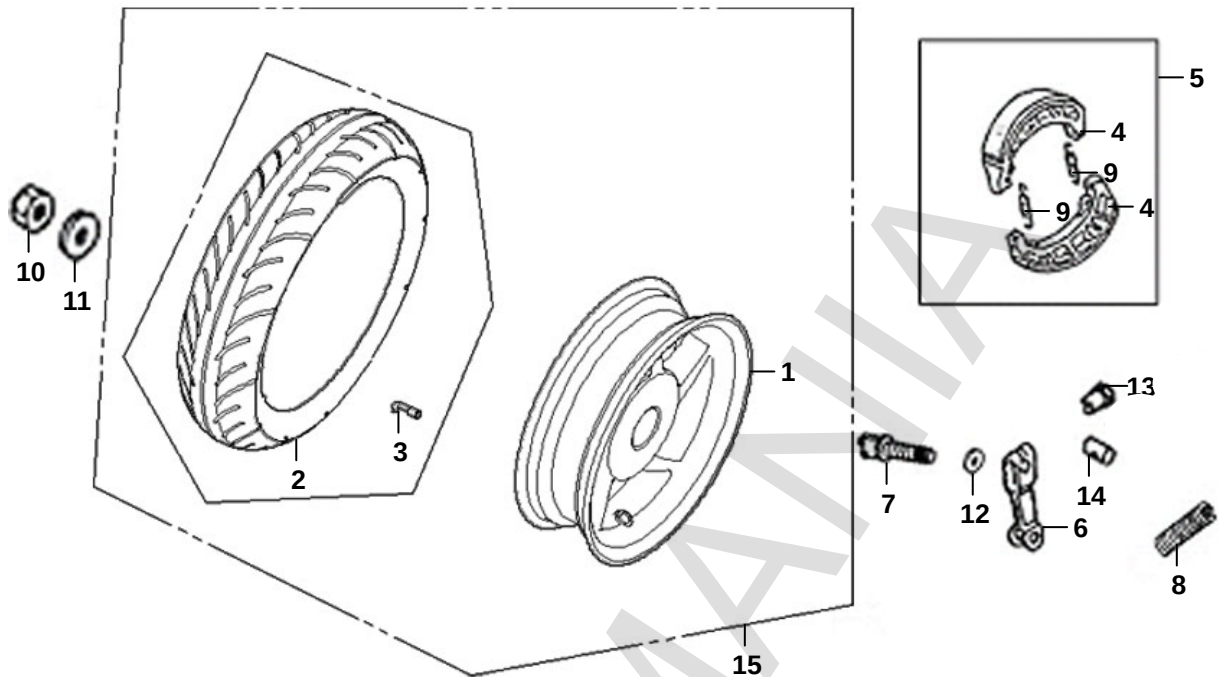


Ref. No	Part Number	Description	Reqd. No
1	42601-ABA-0003	RR. wheel hub COMP	1
2	42710-AAT-0000	RR. tire ASSY	1
3	42753-ABA-0000	Rim valve	1
4	43120-E18-0002	Brake shoe COMP	1
5	4312A-H1A-0000	RR. brake shoe ASSY	1
6	43410-ALG-0000	RR. brake arm	1
7	43141-KAA-0001	RR. brake cam	1
8	43472-ABA-0000	RR. BRK. Arm return SRG.	1
9	45133-B08-0005	Brake shoe spring	2
10	90305-M9Q-9001	Self-lock nut 16MM	1
11	90501-M9Q-0000	16MM washer	1
12	91352-M9Q-0000-M1	O ring 11.3X1.3	1
13	95015-32001	Brake arm joint B	1
14	95015-42000	Adjust nut B	1
15	42600-ANB-0002	RR wheel ASSY	1

F-13 Seat • Rear Grip

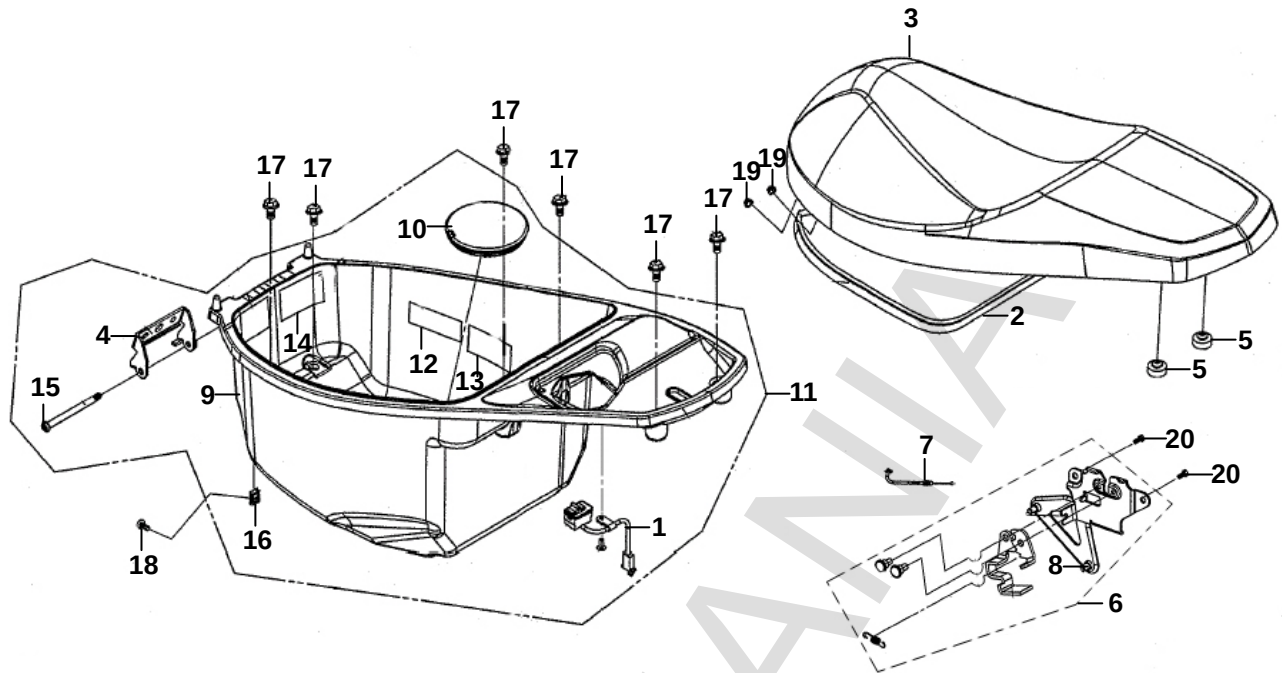


Ref. No	Part Number	Description	Reqd. No
1	36600-A1A-0101	ENG. start control SW.	1
2	77115-ATA-0000	Seal rubber	1
3	77200-ATE-0000	Double seat COMP	1
4	77201-AAA-0000	Seat hinge COMP	1
5	77206-N01-0000	Seat step rubber	2
6	77230-AKA-0001	Seat catch COMP	1
7	77240-ABA-0000	Seat lock cable	1
8	81205-AKA-0000	Seat catch BRKT COMP	1
9	81250-ATA-0003	Luggage box	1
10	81251-ALA-0000	CARB. maint cover	1
11	8125A-ANA-0006	Luggage box ASSY	1
12	87505-ATA-0000	Tire lable	1
13	87545-ANA-0000	Anti tampering control plate	1
14	87560-E21-0000	Drive caution mark	1
15	90105-HHA-0000	Seat hinge screw	1
16	90308-X04-0000	Spring nut	1
17	93404-06016-07	Washer bolt 6X16	6
18	93903-45380	Tapping screw 5X16	1
19	94050-06080	Flange nut 6MM	2
20	95801-06012-07	Flange bolt 6X12	2

F-14 Fuel Tank

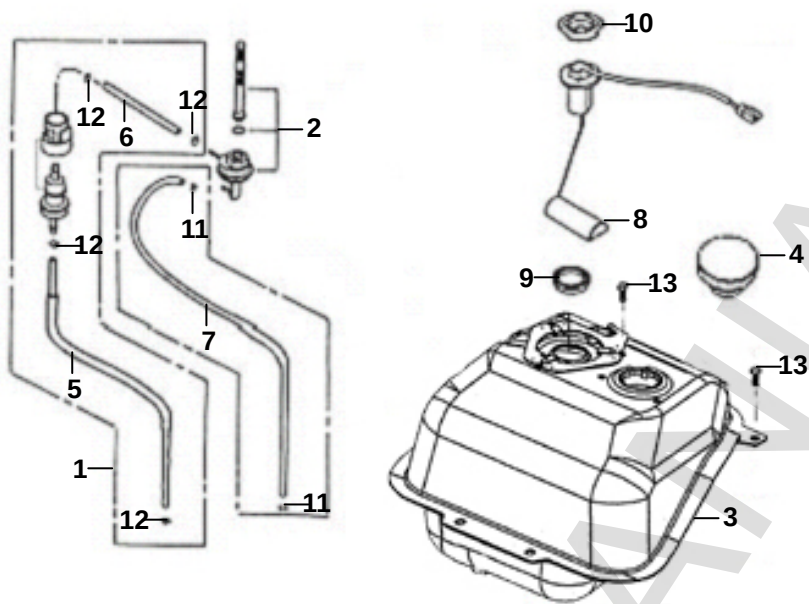


Ref. No	Part Number	Description	Reqd. No
1	1690A-ABA-0003	Fuel strainer ASSY	1
2	16950-M9Q-0001	Fuel cock ASSY	1
3	17500-AAA-0005	Fuel tank COMP	1
4	17620-CT1C-A000	Fuel filler cap COMP	1
5	17682-ABA-0002	Fuel tube (400MM)	1
6	17683-AAA-0001	Fuel tube (170MM)	1
7	17684-ABA-0000	Vacuum tube	1
8	37800-ABA-0001	Fuel unit	1
9	37801-M9Q-0001	Base packing	1
10	37802-M9Q-0000	Ret fuel unit	1
11	95002-02070	Tube clip B7	2
12	95002-02080-0A	Tube clip B8	4
13	95801-06012-08	Flange bolt 6X12	2

F-15 Battery • Tool Box

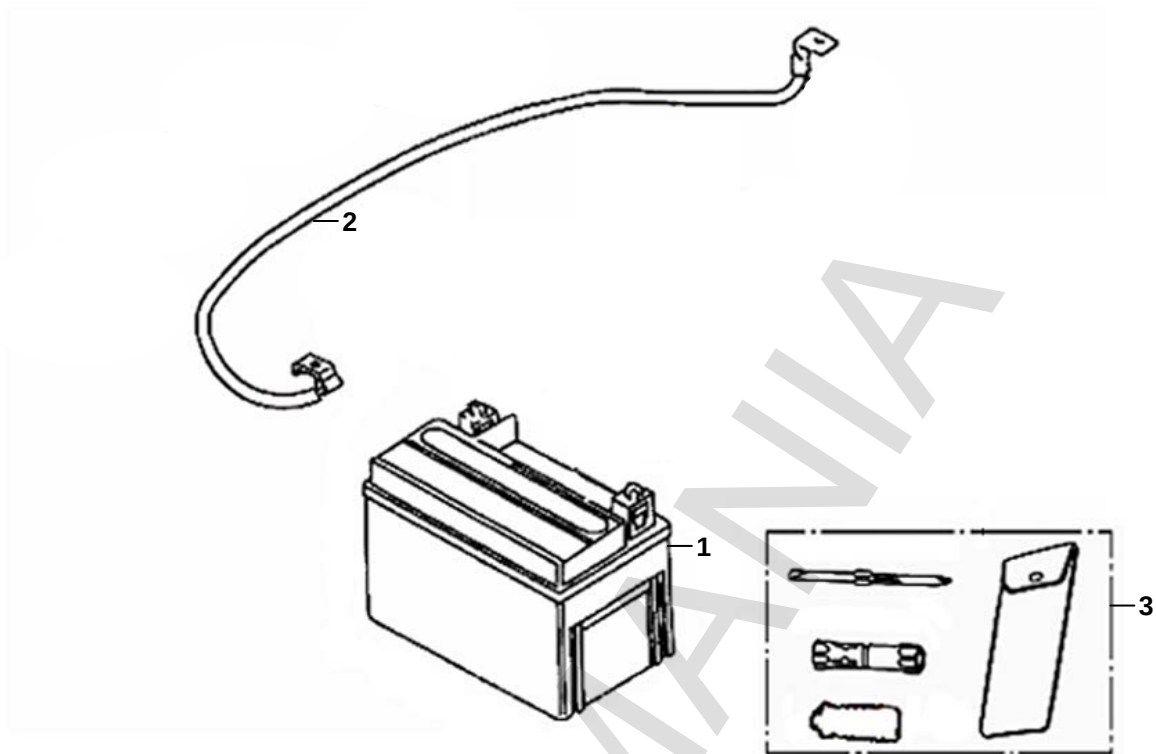


Ref. No	Part Number	Description	Reqd. No
1	31500-EG13-P000	Battery ASSY	1
2	32411-ARA-0100	Battery cable	1
3	89010-V1F-A001	Tool	1

F-16 Air Cleaner

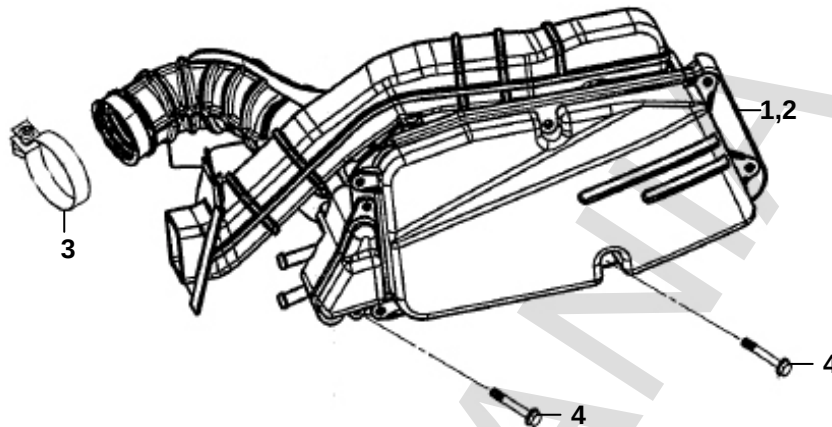


Ref. No	Part Number	Description	Reqd. No
1	17200-ANA-0001=	Air cleaner ASSY	1
2	17211-M9Q-0001	AIR/C. element COMP	1
3	90652-M9Q-0000	AIR/C. CONN. tube band 48	1
4	93404-06030-07	Washer bolt 6*30	2

F-17 Exhaust Muffler

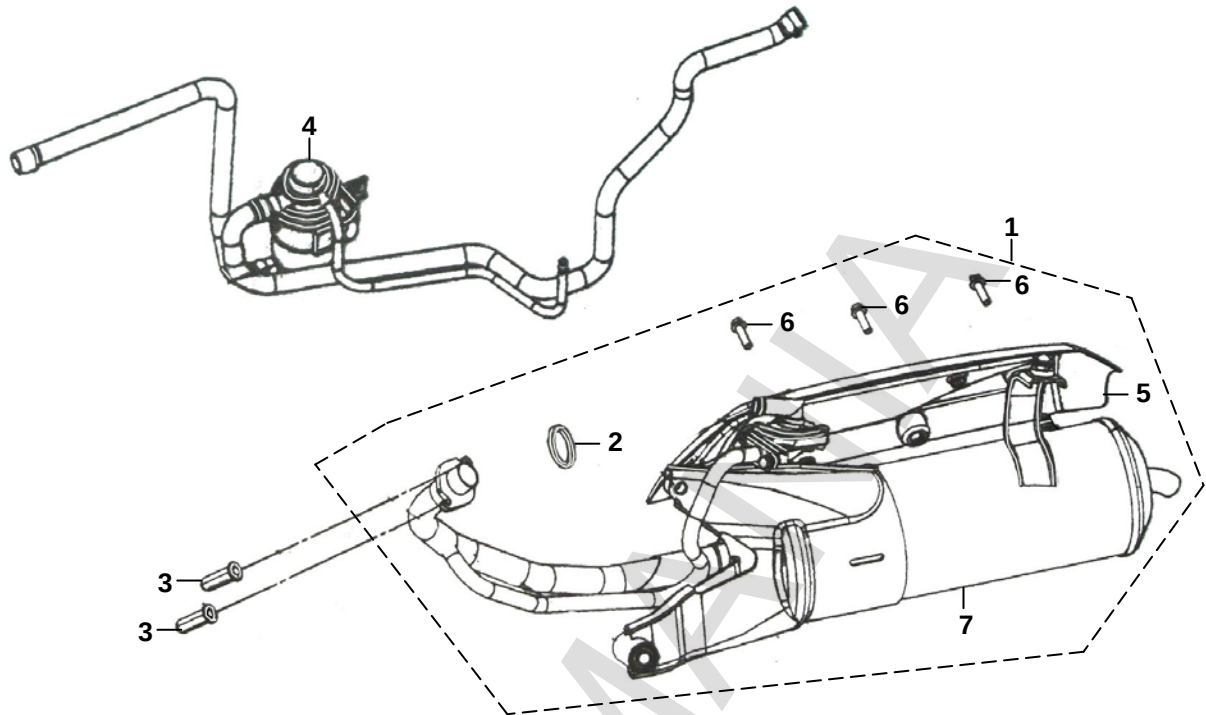


Ref. No	Part Number	Description	Reqd. No
1	18000-ANE-0000	EXH. muffler ASSY	1
2	18291-M9Q-0002	EXH. pipe gasket	1
3	90043-HMA-0000	Cap nut 8MM	2
4	1865A-ANA-0002	A.I.C.V. unit	1
5	18317-KAA-0000	Muffler protector COMP	1
6	96001-06022-49	Flange bolt SH 6*22	3
7	18300-ANE-0000	Exhaust muffler COMP	1

F-18 Main Stand • Kick Starter Arm

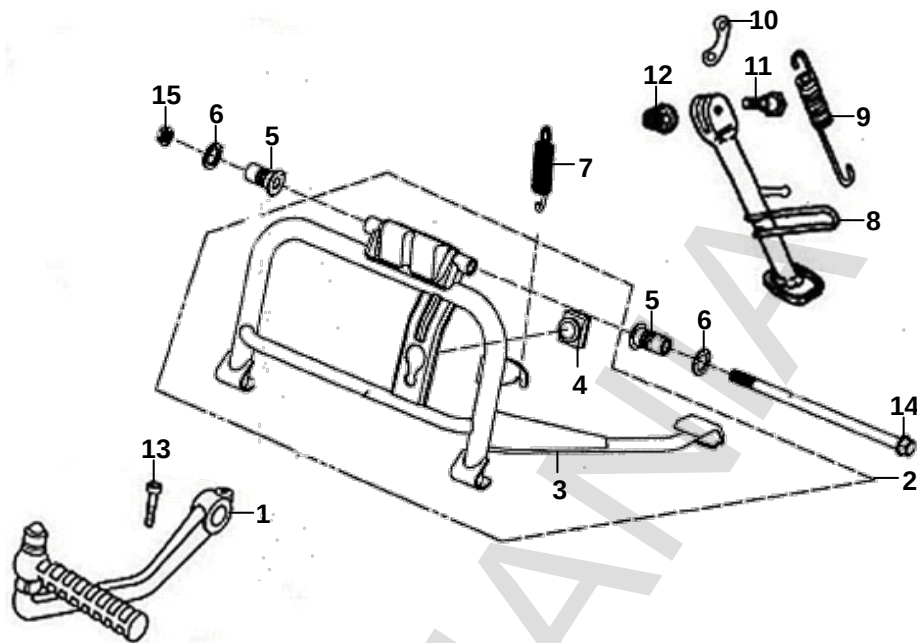


Ref. No	Part Number	Description	Reqd. No
1	28300-F6C-0000	Kick starter arm ASSY	1
2	5050A-ANA-0003	Main stand ASSY	1
3	50500-ANA-0003	Main stand COMP	1
4	50506-ABA-0000	Stand stop rubber	1
5	50504-Z6A-0000	Main stand collar	2
6	50503-F6B-0000	Main stand washer	2
7	5052A-APA-0001	Main stand spring ASSY	1
8	50530-ATA-0001	Side stand COMP	1
9	50535-E60-0003	Side stand SPG. ASSY	1
10	50542-E60-0001	Spring plate hook	1
11	90108-G03-0001	Side stand pivot screw bolt	1
12	94030-08000	HEX nut 8MM	1
13	95801-06022-07	Flange bolt 6X22	1
14	50512-ARA-0000	Flange bolt	1
15	90309-M9Q-0001-M2	Self-lock nut 8MM	1

F-19 Tail Light • RR. Cushion

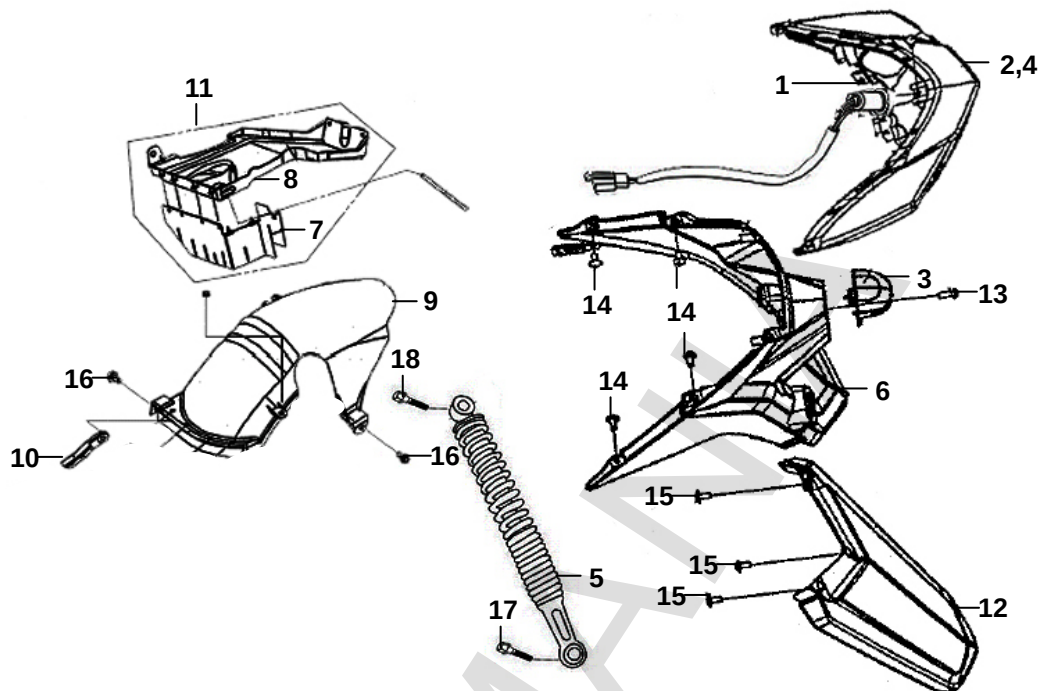


Ref. No	Part Number	Description	Reqd. No
1	33700-ATA-0200	Tail light ASSY	1
2	33701-ATA-0100	Tail light lens	1
3	33740-APA-0000	License light ASSY	1
4	34906-M9Q-0001	Tail light bulb	1
5	52400-ABA-0101	RR. cushion ASSY	1
6	80100-ATA-0001	RR. fender	1
7	80104-ABA-0000	Splash board plate	1
8	80106-AAA-0003	RR. inn fender	1
9	80107-ANA-0002	RR. mudguard	1
10	80109-ANA-0000	RR. mudguard stay	1
11	8010B-ABA-0003	Inner fender ASSY	1
12	80110-ATA-0000	RR. fender mudguard	1
13	93903-34480	Tapping screw 4X16	1
14	93903-35320	Tapping screw 5X16	4
15	93904-35380	Tapping screw 5X16	3
16	95801-06012-07	Flange bolt 6X12	2
17	95801-08035-00	Flange bolt 8X35	1
18	95801-10040-08	Flange bolt 10X40	1

F-20 Wire Harness

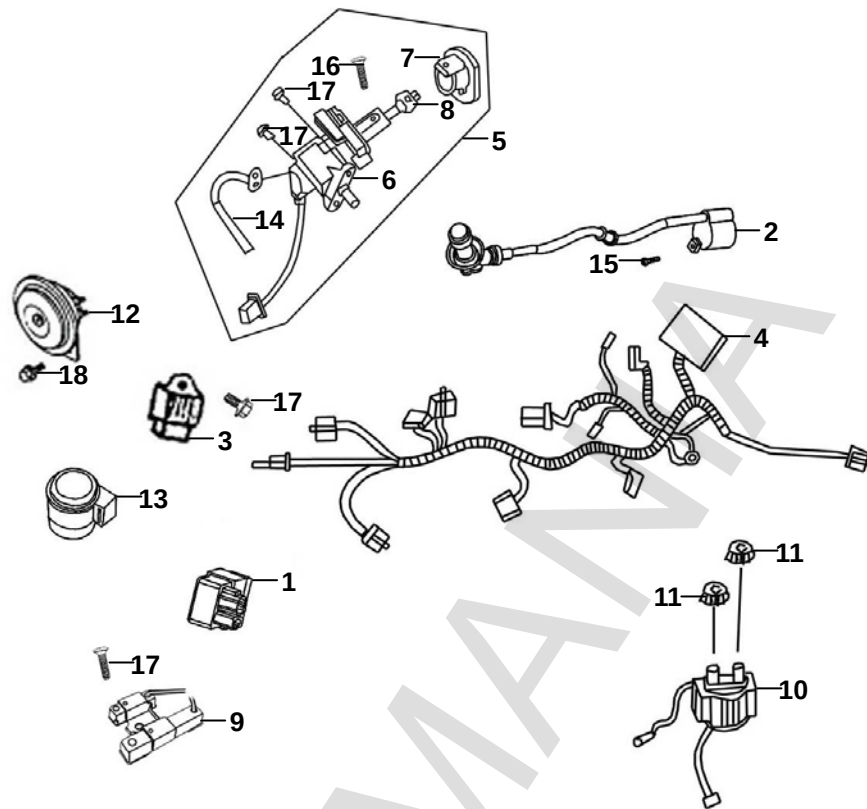

Ref. No	Part Number	Description	Reqd. No
1	30410-M92-0004	CDI. UNIT COMP	1
2	3051A-T7A-0000	IGN. COIL. ASSY	1
3	31600-ZDA-0001	REG. REC. COMP	1
4	32100-ANA-0101=	Wire harness	1
5	35010-Z6A-0100	Key set	1
6	35100-ALA-0100	Comb sw and lock ASSY	1
7	35114-ALA-0000	Cap	1
8	35111-AA3-A000	Key	1
9	35400-T3D-A001	Resistor COMP	1
10	35850-35A-A000	MAG. SW. COMP	1
11	35859-M9Q-0001	Start MAG. SW. NUT	2
12	38110-ABA-0001	Horn COMP	1
13	38300-T40-0101	Ap winker relay ASSY	1
14	77240-ABA-0000	Seat lock lable	1
15	90112-M9Q-0000	Flange bolt 5X22	1
16	93891-05018-07	Screw washer 5X18	1
17	95801-06016-08	Flange bolt 6X16	4
18	95801-08012-08	Flange bolt 8X12	1

F-21 Frame Body • Engine Hanger

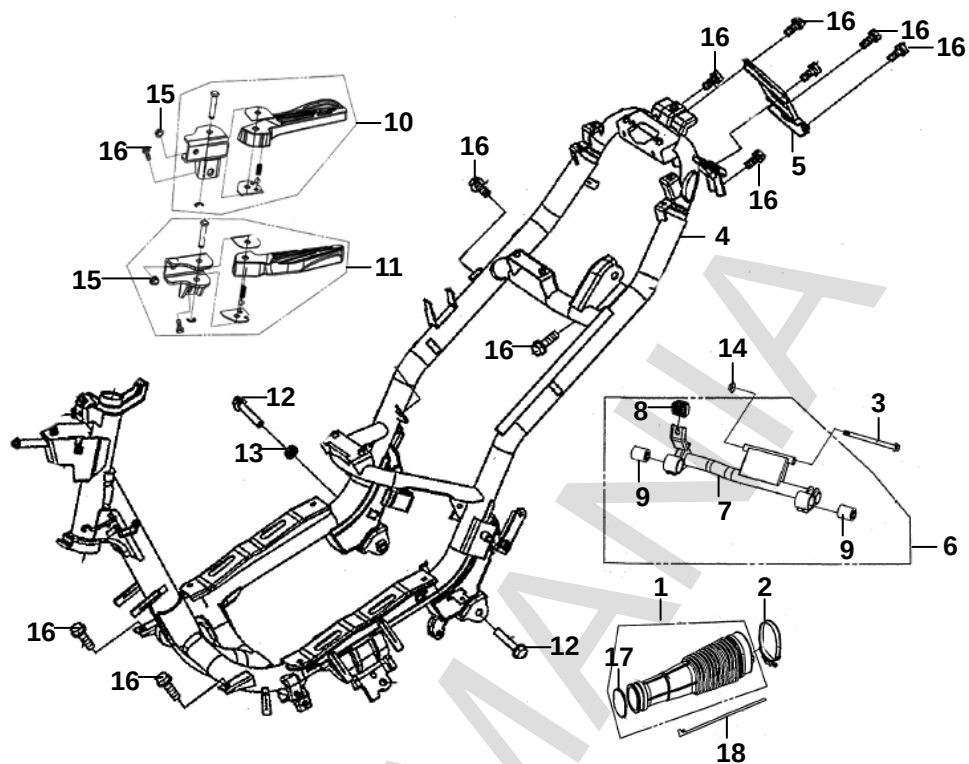

Ref. No	Part Number	Description	Reqd. No
1	11345-ABA-0005	L. cover duct	1
2	11346-ABA-0000	L. cover band	1
3	44301-AAA-0000=	Flange bolt 10X172	1
4	50100-ANK-0003	Frame body COMP	1
5	50109-ATA-3000	RR. fender stay COMP	1
6	50350-ANA-0100	ENG. hanger link ASSY	1
7	50351-ANA-0100	ENG. hanger link	1
8	50352-A1A-0000	Link stopper rubber	1
9	50353-M9Q-0000	Swing lock bush	2
10	50710-ATA-0001	RH. pillion step ASSY	1
11	50720-ATA-0001	LH. pillion step ASSY	1
12	90106-M9Q-9001	Flange bolt 10X55	2
13	90121-M9Q-0001	Distance collar	1
14	90304-M9Q-0000	Flange u nut 10MM	1
15	94050-06080	Flange nut 6MM	2
16	95801-06012-08	Flange bolt 6X12	10
17	17242-H6T-0000	AIR/C duct . element	1
18	32160-VS1-0000	Wire band 5X180	1

MOTOMANIA