 
 


E-01 Fan Cover • Engine Shroud

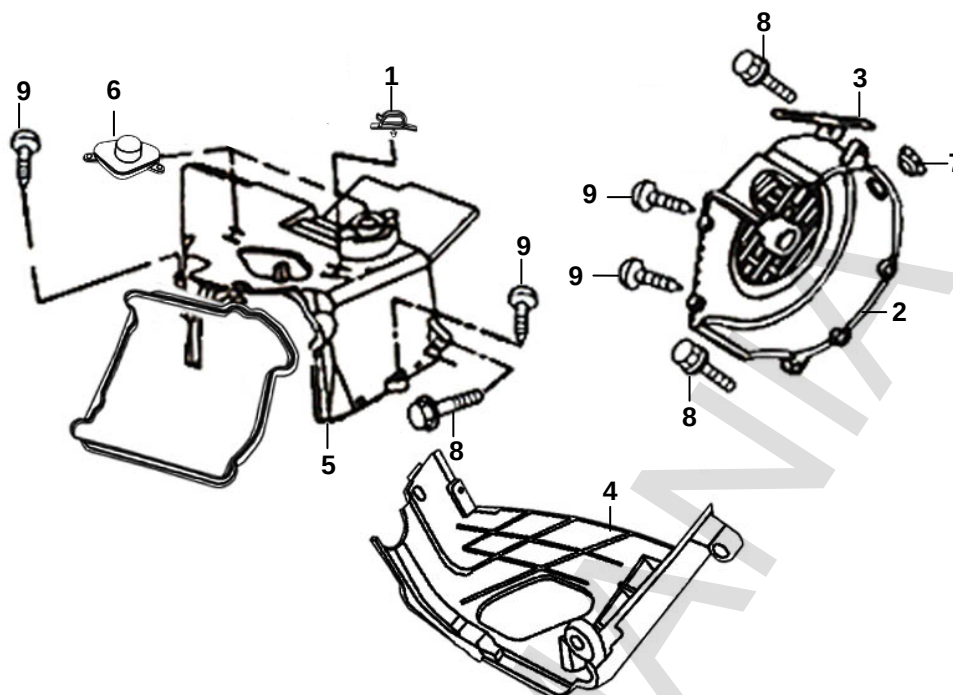


Ref. No	Part Number	Description		Reqd. No.
1	11384-BE2-A000	Breather tube clammer	通气管夹	1
2	1961A-BE2-A000	Fan cover COMP	风扇罩组	1
3	19613-GY6-9000	Starter motor cord clammer	起动马达导线夹	1
4	1962A-BE2-A001	Shroud A COMP	罩盖 A 组	1
5	1963A-BE2-A001	Shroud B COMP	罩盖 B 组	1
6	19633-BE2-A000	Shroud B grommet	链条调整器盖	1
7	70529-657-6700	Side panel grommet B	橡皮塞	1
8	93904-35380	Tapping screw 5x16	攻丝螺钉 5X16	3
9	96001-06025-08	SH. flange bolt 6x25	六角缘面螺栓 6X25	4

E-02 Cylinder Head Cover • Carburetor

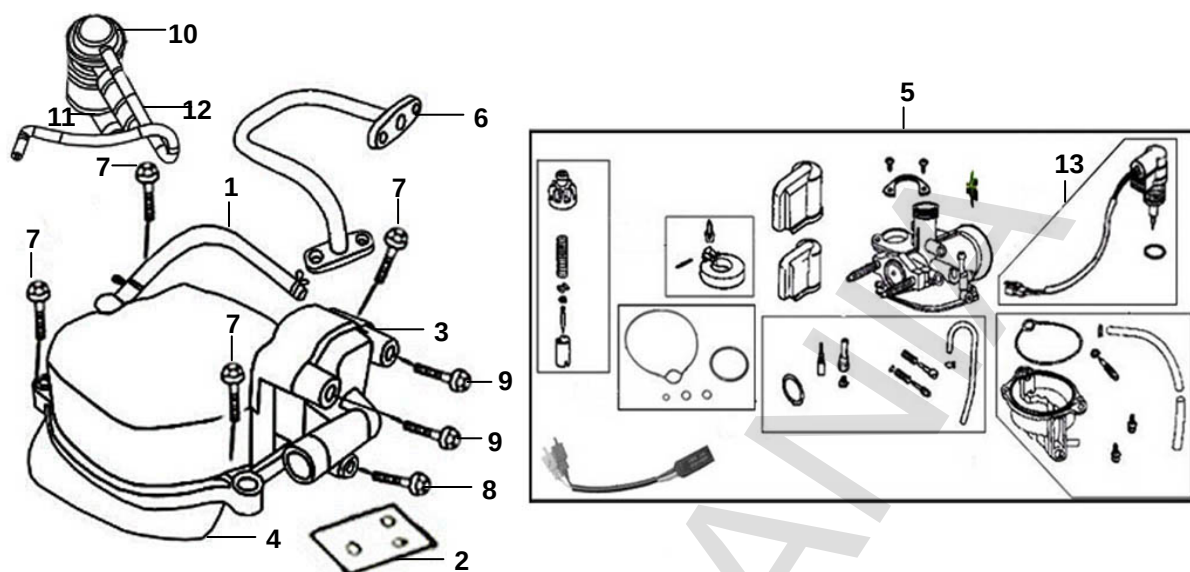


Ref.No	Part Number	Description		Reqd. No.
1	11211-AAA-0001	Breather tube ASSY	通气管总成	1
2	12302-BE2-A001	Breather cover	通气管盖	1
3	12310-BE2-0001	Head cover COMP	汽缸头盖组	1
4	12391-BE2-A000	Head cover gasket	汽缸头盖垫片	1
5	16100-AAA-0001	Carburetor ASSY	化油器总成	1
6	18647-GY6-9400	AI pipe	AI 管	1
7	95701-06025-08	SH.FLANGE BOLT M6X25	六角缘面螺栓 M6X25	4
8	96001-06022-08	SH.FLANGE BOLT M6X22	六角缘面螺栓 M6X22	1
9	96001-06025-08	SH. flange bolt 6x40	六角缘面螺栓 M6X40	2
10	1865A-AAA-0002	A.I.C.V. unit	AICV	1
11	18657-ALA-A000	A.I.C.V.-reed valve tube	AI 簧片管	1
12	18860-H6H-9103	AICV tube(IN)	簧片管	1
13	16101-AAA-A000	AUTO-BY START	起动加融器	1

 E-03 Cylinder Head • Hold

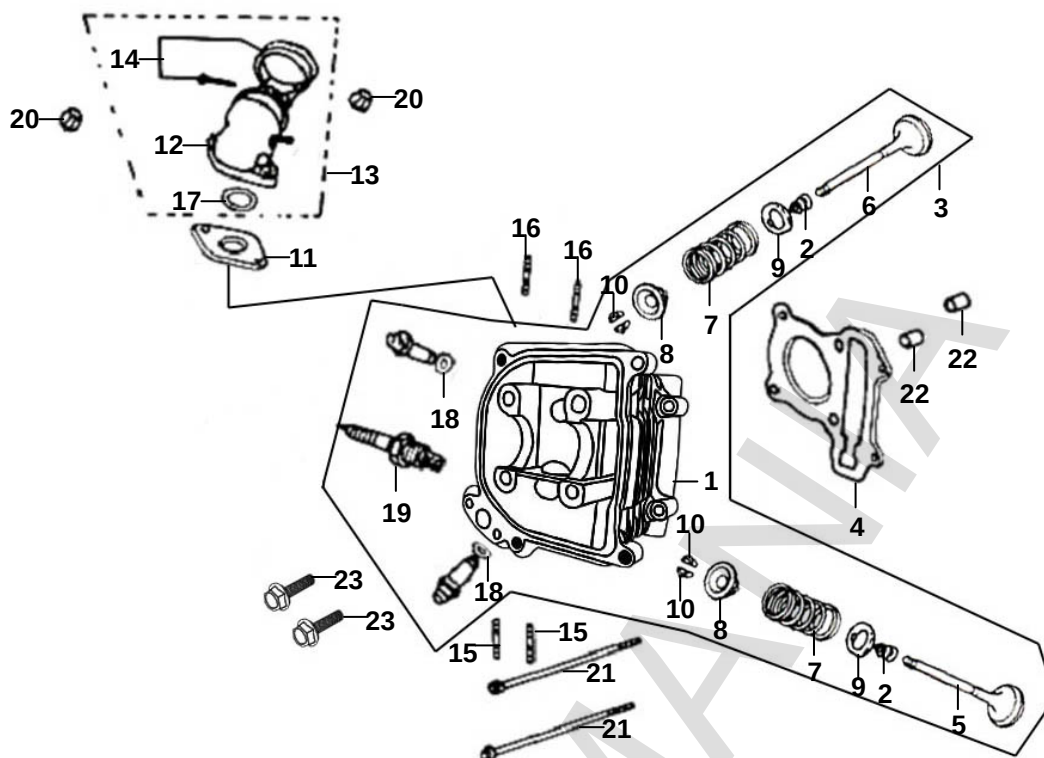


Ref. No	Part Number	Description	Reqd. No.
1	12200-BE2-A001	Cylinder head COMP	1
2	12209-H6B-9000	Valve stem seal	2
3	1220A-BE2-0004	Cylinder head ASSY	1
4	12251-BE2-A000	Cylinder head gasket	1
5	14711-BE2-A000	IN. valve	1
6	14721-BE2-A000	EX. valve	1
7	14751-GN5-9110	Valve outer spring	2
8	14771-M8Q-0000	Valve spring retainer	2
9	14775-M9Q-0000	Valve spring seat outer	2
10	14781-A01-A000	Valve cotter	4
11	16211-BE2-A000	Carburetor Insulator	1
12	17110-BE2-A001	IN. pipe COMP	1
13	1711A-BE2-A001	IN. pipe ASSY	1
14	17256-BE2-A000	Insulator band	1
15	90032-M9Q-3000	Stud bolt 6x32	2
16	90033-M9Q-0001	Stud bolt 6x50	2
17	91301-BE2-A000	O-Ring 21.5x2	1
18	91305-M9Q-0001	O-Ring 9x1.6	2
19	98056-56717-00	Spark plug (CR6HSA)	1
20	94050-06080	Flange nut 6mm	2

 E-03-1 Cylinder Head • Hold

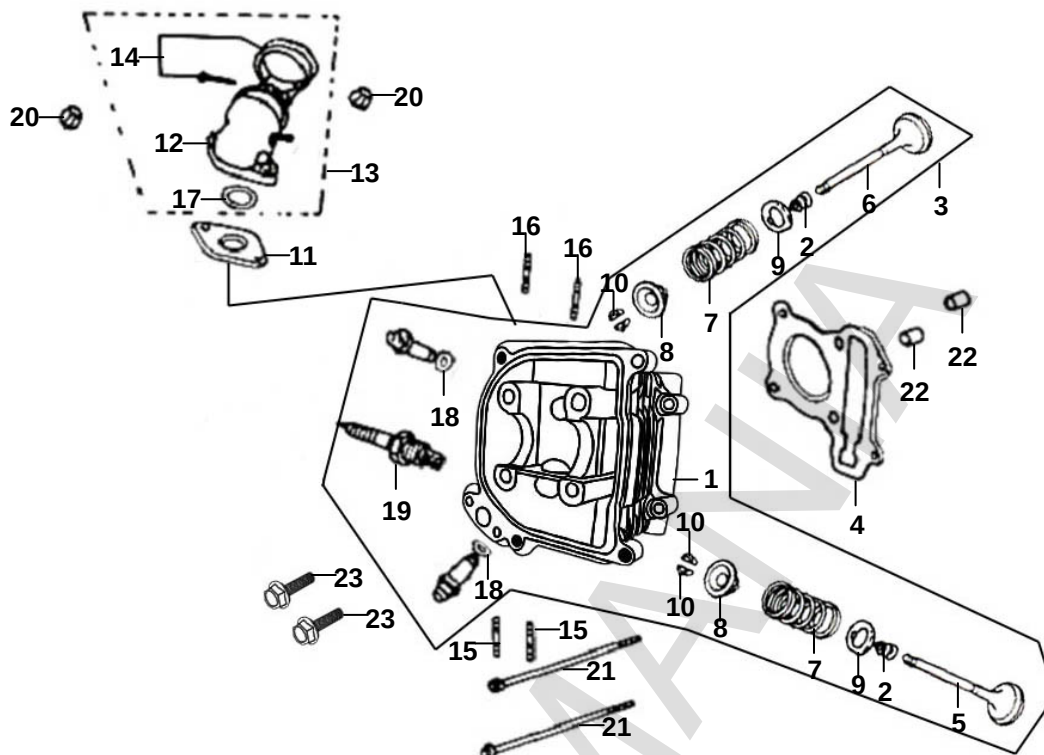


Ref. No	Part Number	Description	Reqd. No.
21	96001-06085-08	SH. flange bolt 6x85 六角缘面螺栓 6X85	2
22	90702-VA2-0001	DOWEL PIN8X14	2
23	90032-M9Q-3000	STUD BOLT 6*32	2

 E-04 Cam Shaft • Valve

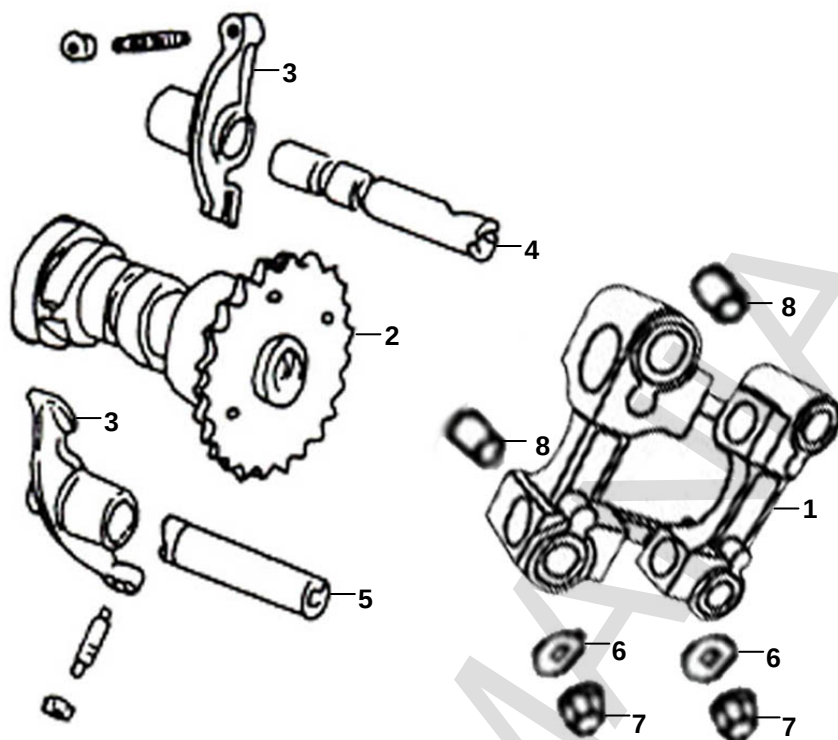


Ref. No	Part Number	Description		Reqd. No.
1	12211-BE2-A000	Cam shaft holder	凸轮轴固定座	1
2	14100-BE2-A000	Cam shaft COMP	凸轮轴组	1
3	14431-BE2-A000	Valve rocker arm	气门摇臂	2
4	14450-BE2-A000	IN. rocker arm shaft COMP	进气门摇臂轴组	1
5	14452-BE2-A000	EX. rocker arm shaft COMP	排气门摇臂轴组	1
6	90443-BE2-A000	Washer A	垫圈 A	4
7	94050-07080	Flange nut 7mm	六角缘面螺帽 7MM	4
8	90702-VA2-0001	Dowel pin 8x14	固定销 8X14	2

 E-05 Cam Chain • Tensioner

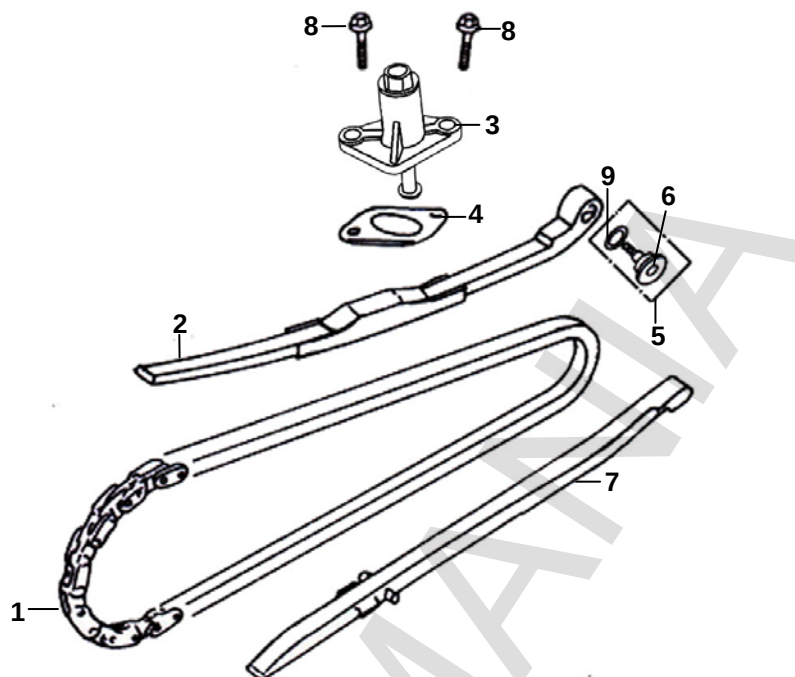


Ref. No	Part Number	Description		Reqd. No.
1	14401-BE2-A000	Cam chain	凸轮轴链条	1
2	14510-BE2-A000	Cam chain tensioner	凸轮链条张力器	1
3	14520-BE2-A000	Tensioner lifter ASSY	链条调整器总成	1
4	14523-BE2-A000	Tensioner lifter gasket	链条调整器垫片	1
5	1453A-V02-0001	Tensioner pivot ASSY	链条张力器枢轴螺丝总成	1
6	14531-GRO-000A	Tensioner pivot	链条张力器螺栓	1
7	14610-BE2-A000	Cam chain guide COMP	凸轮链条导具组	1
8	96001-06018-08	SH. flange bolt 6x18	六角缘面螺栓	2
9	91301-GRO-0030	O-Ring 15.2x1.5	O 型环 15.2X1.5	1

 E-06 Cylinder

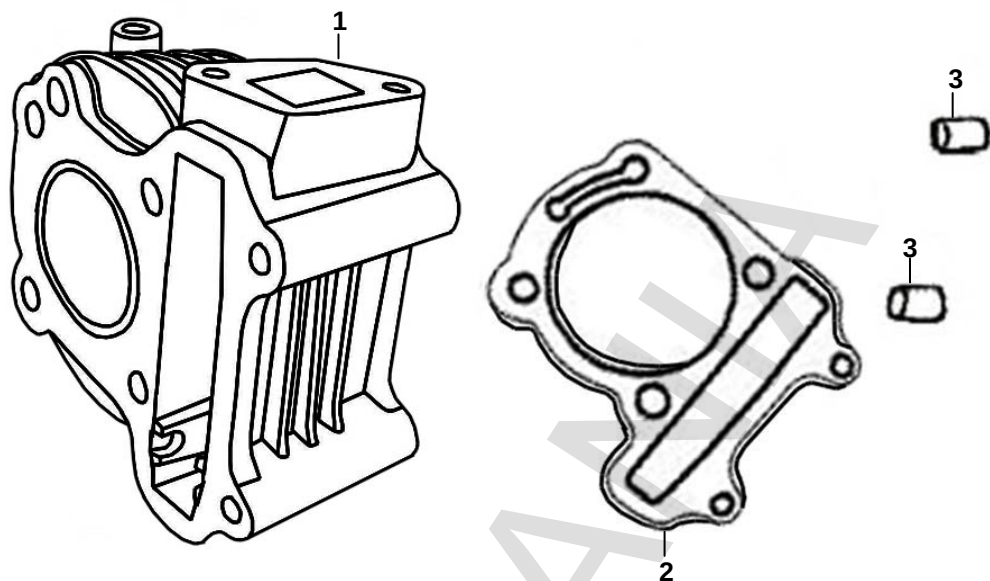


Ref. No	Part Number	Description		Reqd. No.
1	12101-BE2-A000	Cylinder	汽缸组	1
2	12191-BE2-A000	Cylinder gasket	汽缸垫片	1
3	90702-VA2-0001	Dowel pin 8X14	固定销 8X14	2

 E-07 Right Crank Case Cover

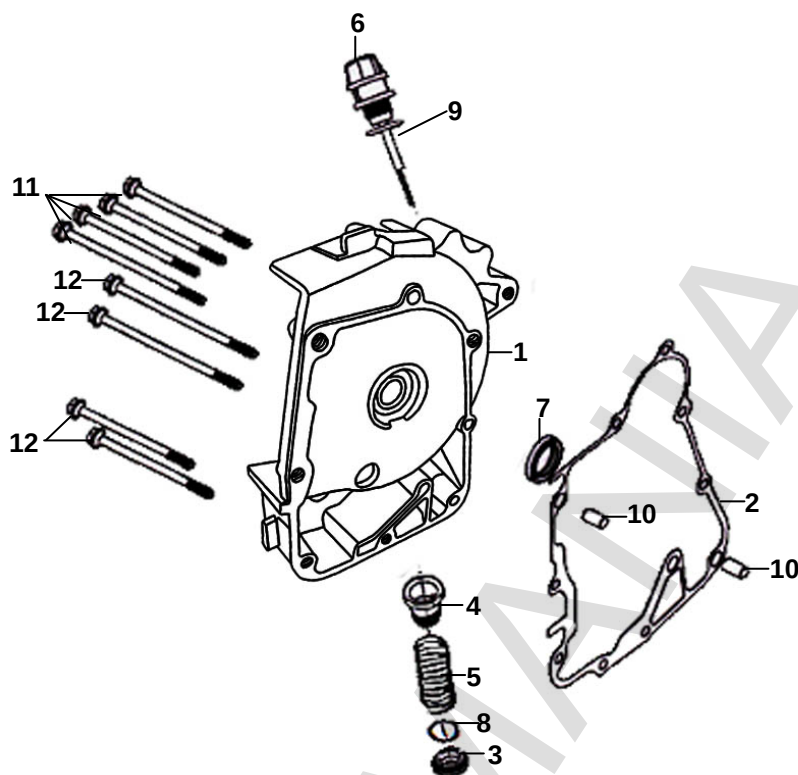


Ref. No	Part Number	Description	Reqd. No.
1	11331-BE2-0000	R. crank case cover 右曲轴箱盖	1
2	11394-BE2-A000	R. crank case cover gasket 右曲轴箱盖垫片	1
3	12361-M9Q-0001	Tappet adjust hole cap 滤油盖	1
4	15421-H66-0000	Oil filter screen 滤油网	1
5	15426-M9Q-0000	Oil filter screen spring 滤油网弹簧	1
6	15651-AAA-0000	Oil level gauge ASSY 机油尺总成	1
7	91201-BE2-A000	Oil seal 16.4X30X6 油封 16.4X30X6	1
8	91302-M9T-0002	O-Ring 30.8MMX3.2 O 型环 30.8MMX3.2	1
9	91307-035-0000	O-Ring 18x3 O 型环 18X3	1
10	94301-08140	Dowel pin 8x14 固定销	2
11	96001-06085-08	SH. flange bolt 6x85 六角缘面螺栓 6X85	4
12	96001-06100-08	SH. flange bolt 6x100 六角缘面螺栓 6X100	4

 E-08 Generator • Fly Wheel

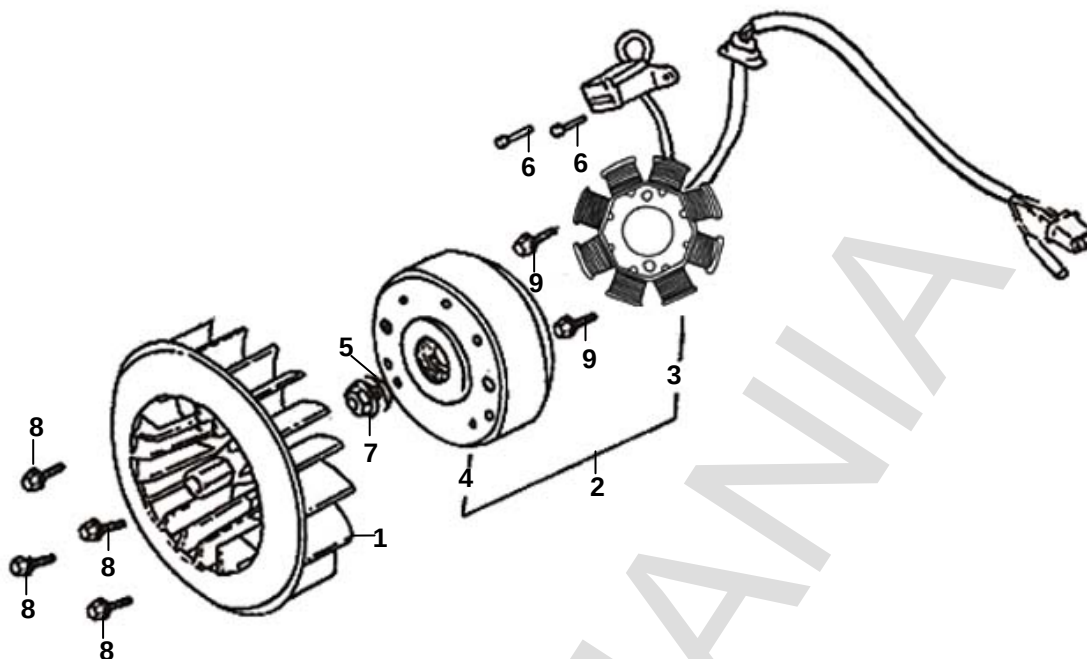


Ref. No	Part Number	Description		Reqd. No.
1	19510-BE2-A000	Cooling fan COMP	冷却风扇组	1
2	31100-AAA-A000	A. C. G. ASSY (CDI)	交流发电机总成	1
3	31120-AAA-A000	A. C. G. stator	发电线圈	1
4	31110-BE1-A000	A. C. G. flywheel	飞轮	1
5	90441-BE2-A000	Plain washer 10.2X20X2.0	平面垫圈 10.2X20X2.0	1
6	92101-05012-0A	HEX. bolt 5 x12	六角缘面螺栓 5X12	2
7	94050-10080	Flange nut 12MM	六角缘面螺帽	1
8	96001-06018-08	SH. flange bolt 6x18	六角缘面螺栓	4
9	96001-06020-08	SH. flange bolt 6x20	六角缘面螺栓	2

 E-09 Oil Pump

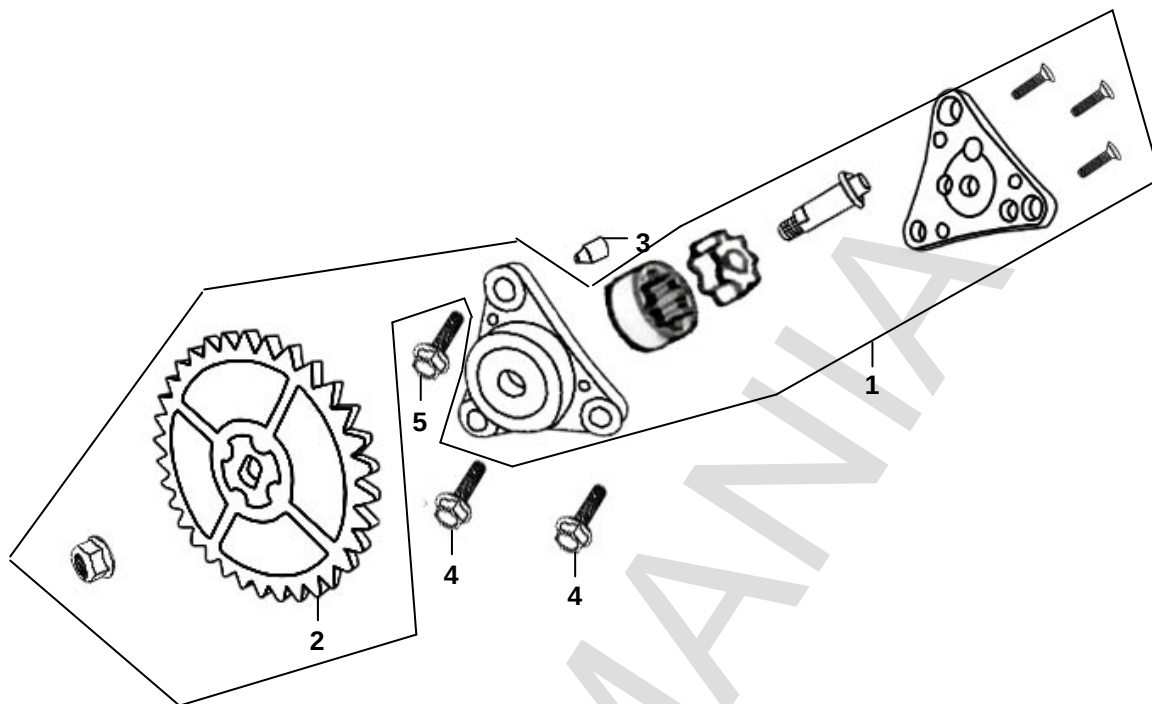


Ref. No	Part Number	Description		Reqd. No.
1	15100-BE2-A004	Oil pump ASSY	油泵总成	1
2	15131-BE2-A002	Oil pump driven gear	油泵传动链轮	1
3	94301-08110	Dowel pin 8x11	固定销 8X11	1
4	96001-06022-08	Flange bolt SH. 6*22	六角缘面螺栓 6*22	2
5	96001-06025-08	SH. flange bolt 6*25	六角圆面螺栓 6*25	1

 E-10 Starter Motor • Clutch Outer

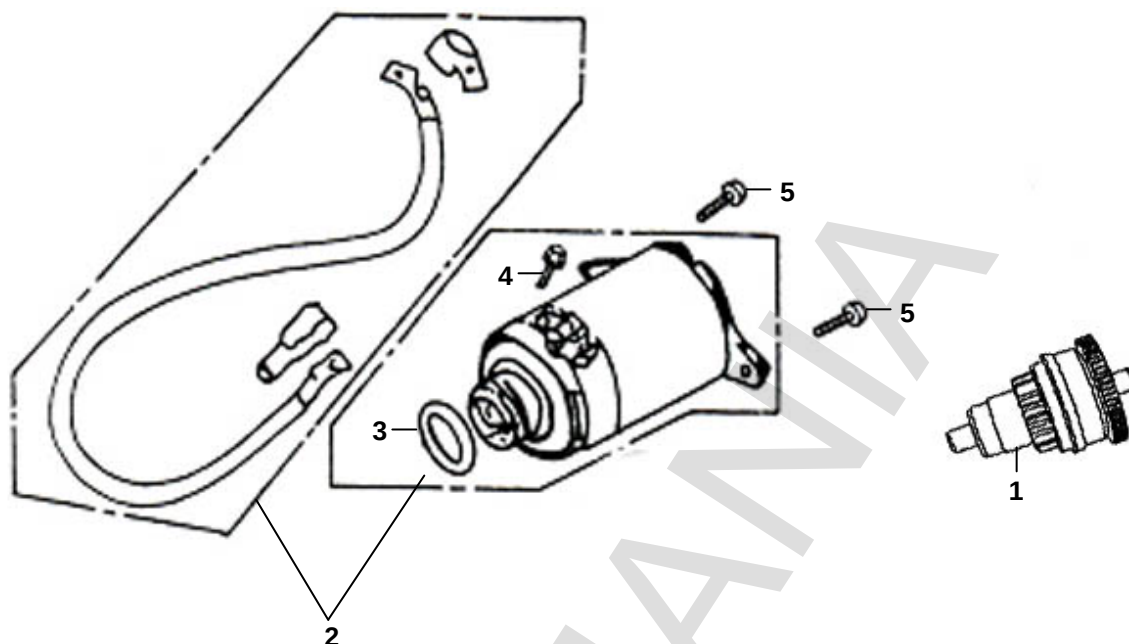


Ref. No	Part Number	Description		Reqd. No.
1	2812A-BE2-A001	START CLUTCH ASS'Y	单向离合器	1
2	31200-BE1-A000	Starter motor ASSY	起动机总成	1
3	91309-BE2-A000	O-Ring 20x2.2	O 型环 20X2.2	1
4	91981-KN7-6700	Washer screw 5x8	垫圈螺丝 5X8	1
5	96001-06022-08	SH. flange bolt 6x16	六角缘面螺栓 6X16	2

 E-11 Left Crank Case Cover

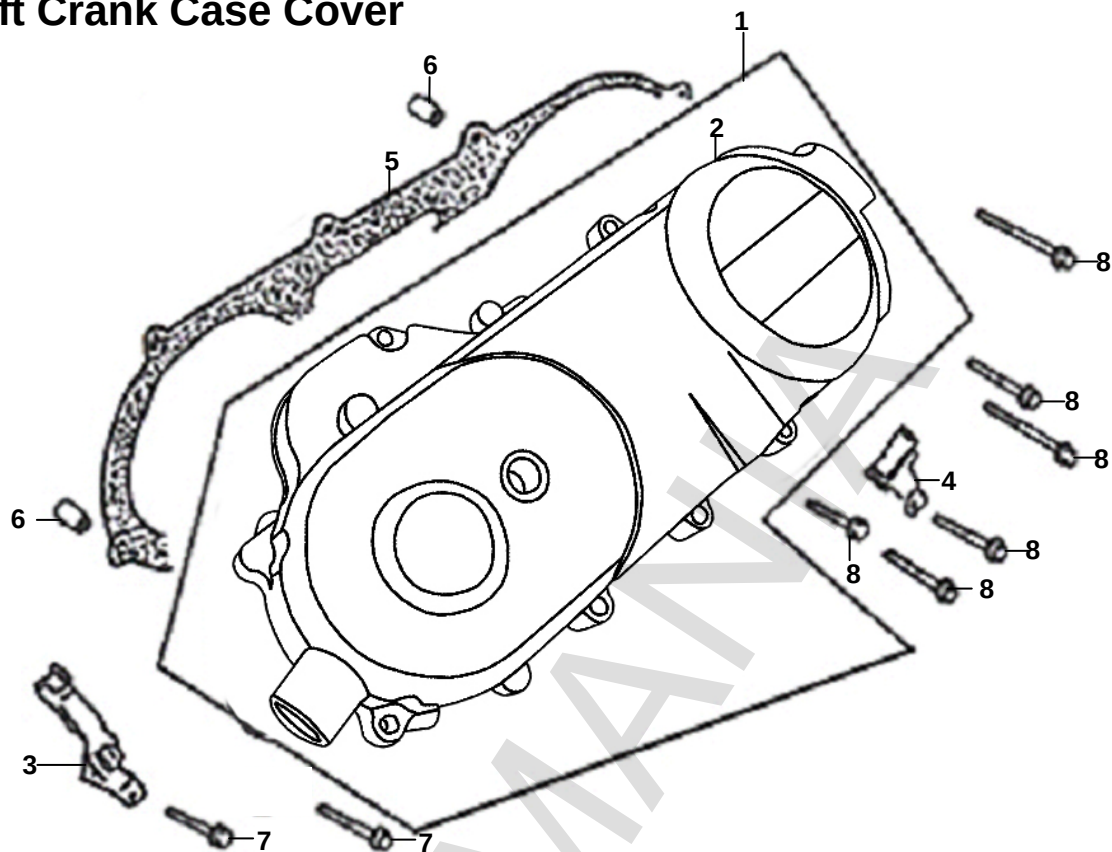


Ref. No	Part Number	Description		Reqd. No.
1	1134A-BE2-0000	L. cover ASSY	左曲轴箱盖总成	1
2	11341-BE2-A002	L. crank case cover	左曲轴箱盖	1
3	11381-GY6-940A	Throttle cable clamber	节流导线夹	1
4	11382-BE2-0000	Brake cable clamber	刹车导线夹	1
5	11395-BE2-A000	L cover gasket	左曲轴箱盖垫片	1
6	94301-08140	Dowel pin 8x14	固定销 8X14	2
7	96001-06040-08	SH. flange bolt 6x40	六角缘面螺栓 6X40	2
8	96001-06035-00	SH. flange bolt 6x35	六角缘面螺栓 6X35	8

 E-12 Drive Face • Kick Starter Spindle

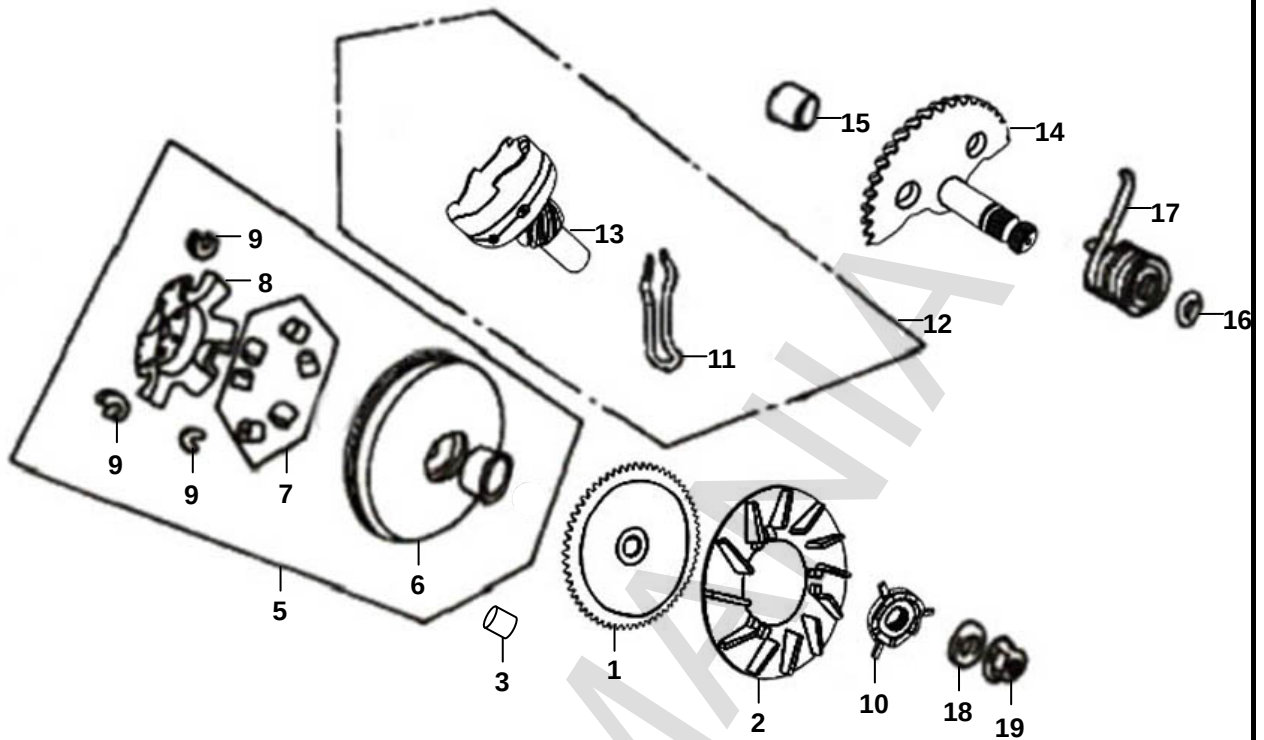


Ref. No	Part Number	Description	Reqd. No.
1	22102-BE2-A000	Drive face	1
2	22103-BE2-A000	DRIVEN GEAR SEAT	1
3	22105-BE2-A000	Drive face boss	1
5	2211A-BE2-0000	Movable drive face ASSY	1
6	22110-BE2-A001	Movable drive face COMP	1
7	22121-BE2-A000	Weight roller COMP	6
8	22131-BE2-0000	Ramp plate	1
9	22132-BE2-A000	Slide piece	3
10	28221-BE2-A000	Dick starter driven gear	1
11	28223-BE2-A100	Starter gear friction spring	1
12	2823A-BE2-A101	Starter idle gear ASSY	1
13	28230-BE2-A100	Starter idle gear COMP	1
14	28250-BE2-A100	Kick starter spindle COMP	1
15	28255-BE2-A000	Bush 34x38x5	1
16	28254-BE2-A100	Kick spindle bush	1
17	28281-BE2-A100	Kick starter spring	1
18	94102-12800	Plain washer 12MM	1
19	94001-12000	NUT 12MM	1

 E-13 Driven Pulley

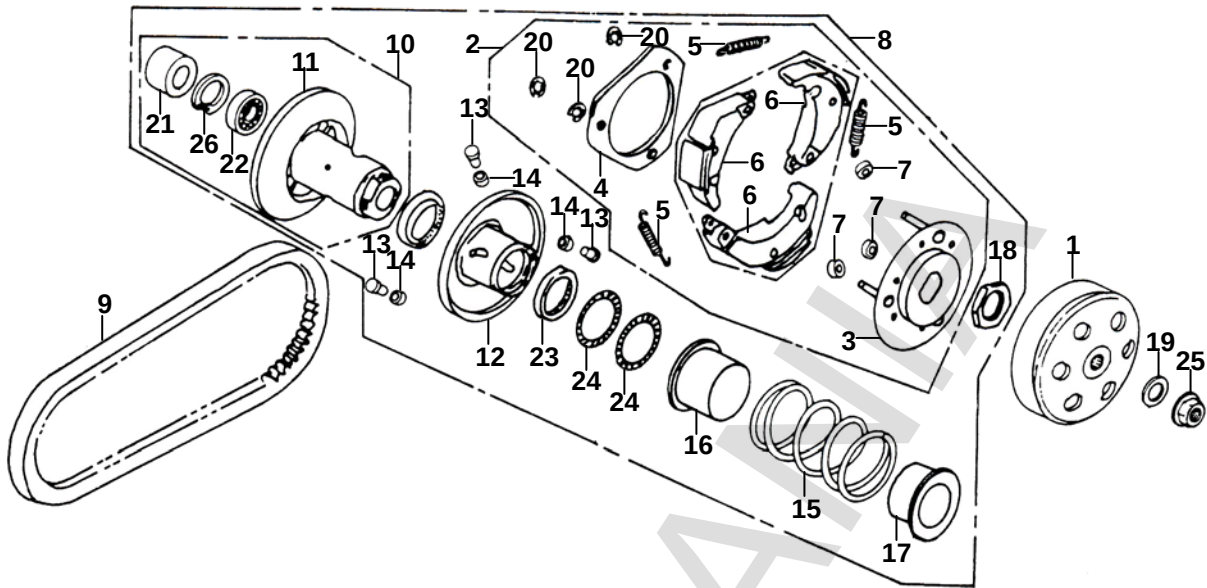


Ref. No	Part Number	Description		Reqd. No.
1	22101-BE2-0000	Clutch outer	离合器外套	1
2	22300-BE2-A100	Drive plate ASSY	驱动盘总成	1
3	22350-BE2-A000	Drive plate COMP	驱动板组	1
4	22361-BE2-A000	Clutch side plate	离合器侧板	1
5	22401-TAA-A001	Clutch spring	离合器弹簧	3
6	22530-BE2-A000	Clutch weight COMP	离合器片组	3
7	22804-BE2-A000	Clutch damper rubber	离合器防震橡胶	3
8	23010-BE2-0000	Driven pulley ASSY	传动皮带盘总成	1
9	23100-BE2-A000	Drive belt	传动皮带	1
10	23200-BE2-A001	Driven face ASSY	传动盘总成	1
11	23210-BE2-A000	Driven face COMP	传动盘组	1
12	23220-BE2-A000	Movable driven face COMP	滑动传动盘组	1
13	23225-BE2-A000	Roller guide pin	滚子导销	3
14	22121-BE2-A000	WEIGHT ROLLER COMP	滚子	3
15	23233-BE2-A000	Driven face spring	驱动弹簧	1
16	23237-BE2-A000	Seal collar	油封存轴环	1
17	23238-BE2-A000	Spring collar	弹簧轴环	1
18	90202-187-0000	Special nut 28MM	特殊螺帽 28MM	1
19	90441-BE2-A000	Plain washer 10.2X20X2.0	平垫圈 10.2X29X2.0	1
20	90605-BE2-A000	Cir clip 7MM	环夹 7MM	3

 E-13-1 Driven Pulley

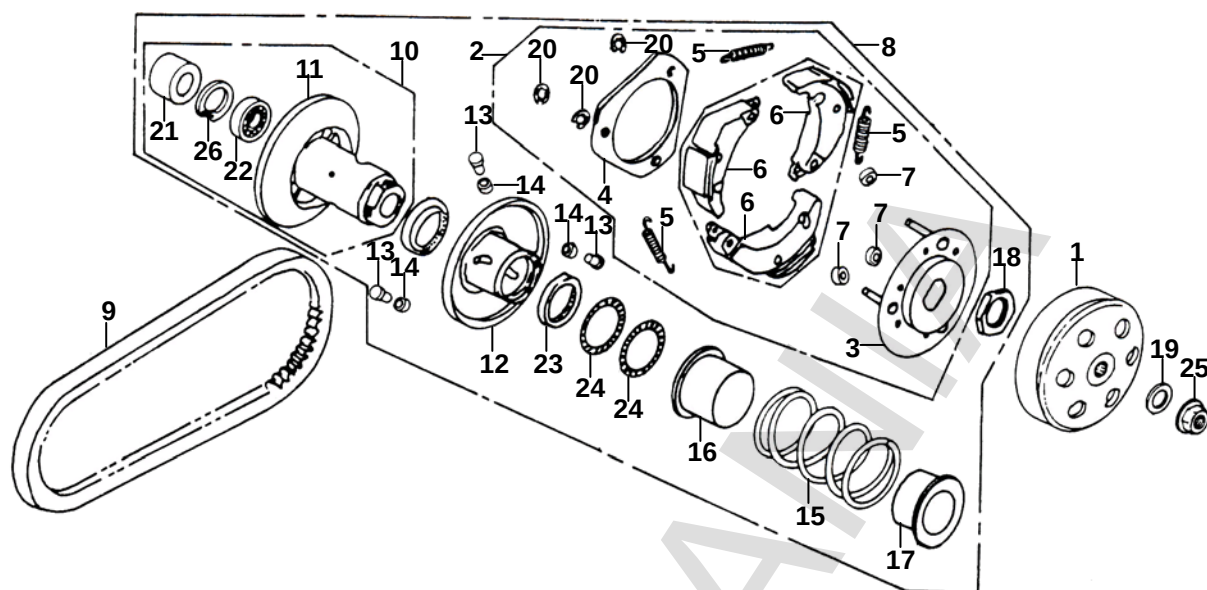


Ref. No	Part Number	Description		Reqd. No.
21	91001-BE2-A000	Needle bearing 17X25X18	滚针轴承 17X25X18	1
22	91002-BE2-A001	Radial ball bearing 6902U	轴承	1
23	91211-BE2-A000	Driven face seal 34x41x4	传动盘油封 34X41X4	2
24	91384-BE2-A000	O-Ring 38.8x1.9	O 环 38.8X1.9	2
25	94050-10080	Flange nut 10MM	六角螺帽 10MM	1
26	94520-24000	Cir clip 24MM	环夹 24MM	1

 E-14 Transmission

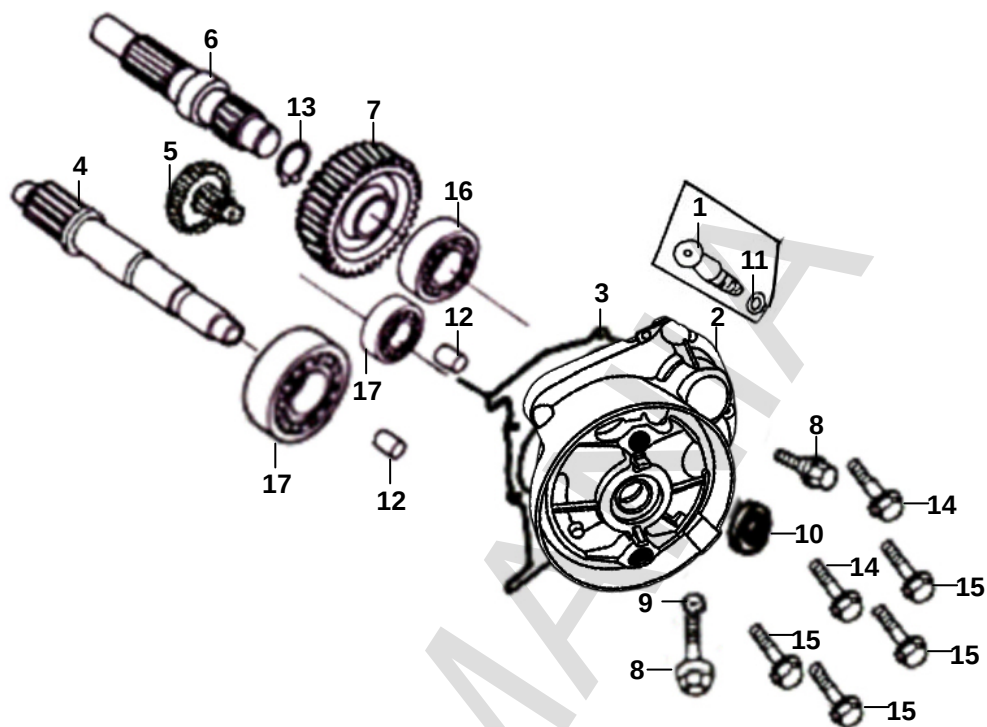


Ref. No	Part Number	Description		Reqd. No.
1	11203-M9Q-3000	Brake shoe anchor pin	刹车片固定销	1
2	21301-BE2-A003	Mission cover	变速箱盖	1
3	21395-BE2-A000	Mission cover gasket	变速箱盖垫片	1
4	23411-BE2-A000	Drive shaft	驱动轴	1
5	23420-BE2-0000	Counter shaft COMP	副轴组	1
6	23431-BE2-A000	Final shaft	最终轴	1
7	23432-BE2-0000	Final gear COMP	最终齿轮组	1
8	90103-KN8-000A	Special bolt 8MM	特殊螺栓 8MM	2
9	90474-333-0000	Washer 8MM	垫圈 8MM	2
10	91202-BE2-A000	Oil seal 20x32x6	油封 20X32X6	1
11	91301-BE2-A000	O-Ring 7.5x1.5	O 环 7.5X1.5	1
12	94301-10160	Dowel pin10x16	固定销 10X16	2
13	94510-20000	EX. cir clip 20MM	外环夹 20MM	1
14	95701-08035-00	SH. flange bolt 8x35	六角缘面螺栓 8X35	2
15	96001-08040-08	SH. flange bolt 8x40	六角缘面螺栓 8X40	5
16	96100-60040-00	Radial ball bearing 6004	轴承 6004	1
17	96100-62010-00	Radial ball bearing 6201	轴承 6201	2

 E-15 Crank Case

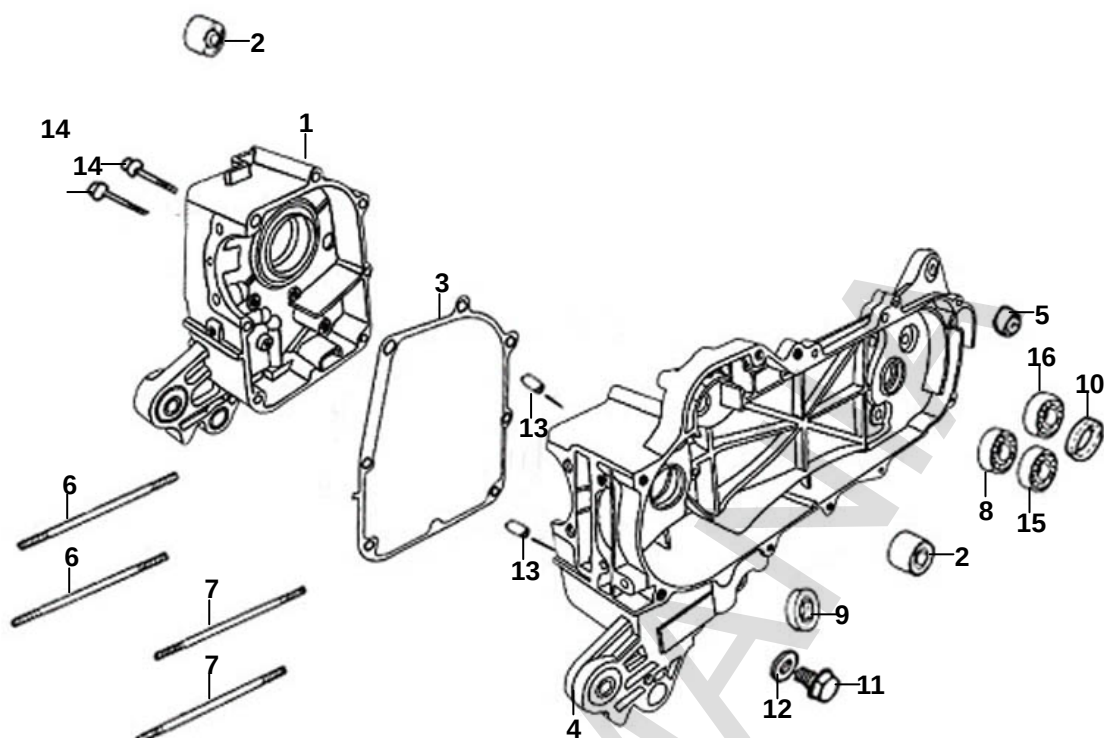


Ref. No	Part Number	Description	Reqd. No.
1	11100-BE2-0000	R. crank case	1
2	11102-BE2-A000	Engine hanger rubber bush	2
3	11192-BE2-A000	Crank case gasket	1
4	11200-BE2-A004	L. crank case COMP	1
5	11203-M9Q-3000	RR. cushion under rubber bush	1
6	90031-BE2-A000	Cylinder stud bolt A 7x167	2
7	90032-BE2-A000	Cylinder stud bolt B 7x167	2
8	96100-62010-00	Radial ball bearing 6201	1
9	91201-GY6-9031	Oil seal 19.8x30x5	1
10	91255-GE0-0030-M1	Oil seal 27x42x7	1
11	92800-12000	Drain plug bolt 12MM	1
12	94109-12000	Drain plug washer	1
13	94301-08140	Dowel pin 8x14	2
14	96001-06050-08	SH. flange bolt 6x50	2
15	96100-62030-00	Ball bearing 6203	1
16	96100-63030-00	Ball bearing 6303	1

 E-16 Crank Shaft • Piston

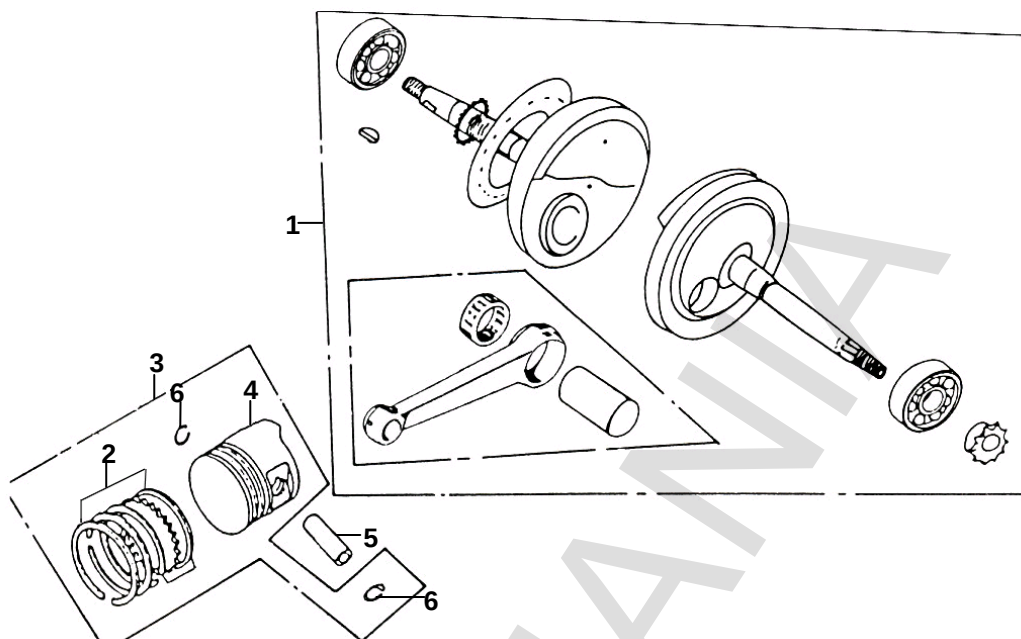


Ref. No	Part Number	Description		Reqd. No.
1	13000-BE2-A003	Crank shaft COMP	曲轴组	1
2	13010-BE2-A000	Piston ring set	活塞环	1
3	1310A-BE2-A002	Piston ASSY	活塞总成	1
4	13101-BE2-A000	Piston	活塞	1
5	13111-BE2-A000	Piston pin	活塞销	1
6	94601-13000-01	Piston pin clip 15	活塞销夹	2

 F-01Head Light

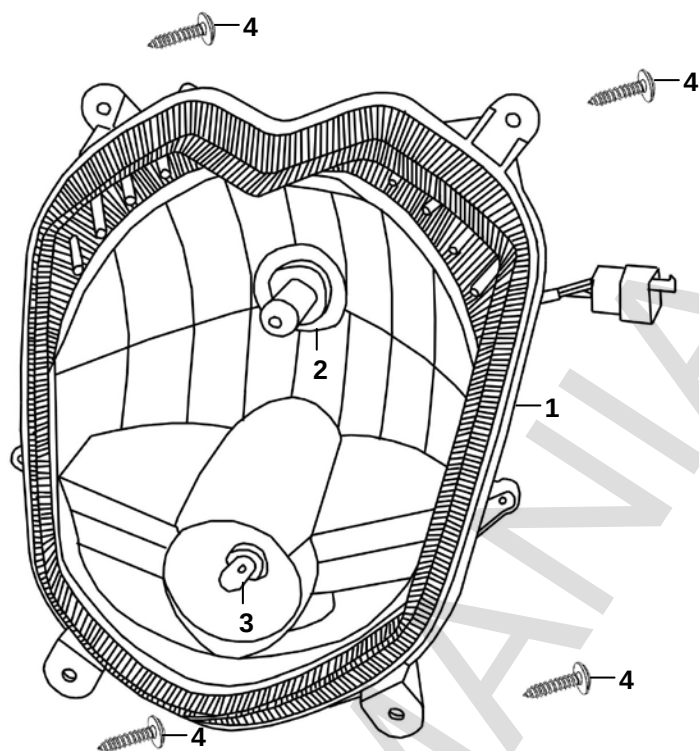


Ref. No	Part Number	Description		Reqd. No
1	33100-ABA-0001	Head light ASSY	头灯总成	1
2	34901-X06-0000	Head light bulb	头灯灯泡	1
3	34908-M9Q-2000	Wedge base bulb	定位灯总成	1
4	90109-48168	Tapping screw 4.8X16	自攻螺丝 4.8*16	4

 F-02 Speed Meter

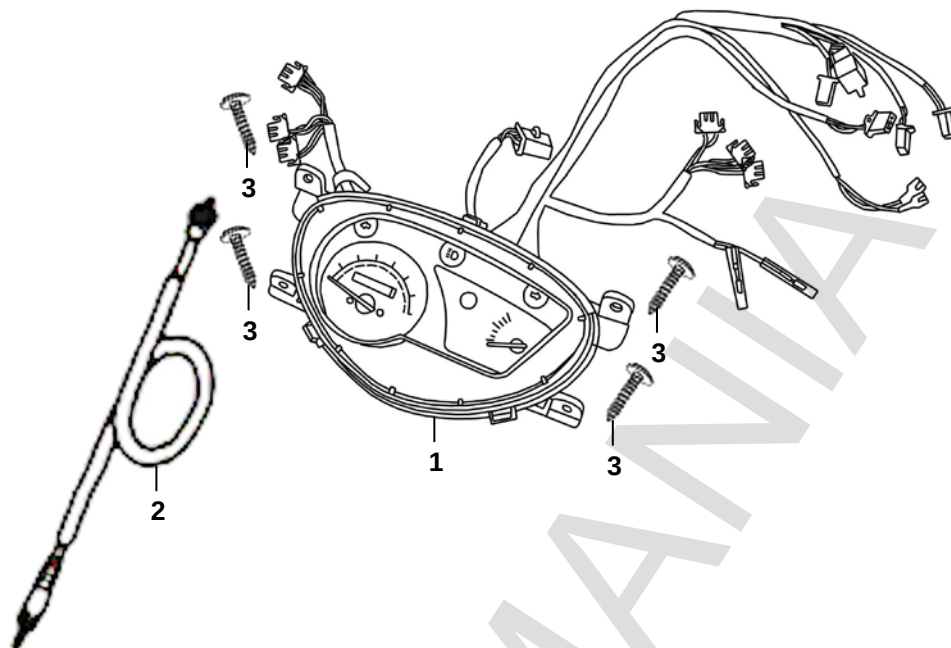


Ref. No	Part Number	Description		Reqd. No
1	37200-AAP-0000	Speedometer ASSY	速度表总成	1
2	44830-ABA-0001	Speedometer cable COMP	速度表导线总成	1
3	90109-48168	Tapping screw 4.8X16	攻丝螺钉 5X16	4

 F-03 Cable • Switch • Handle Lever

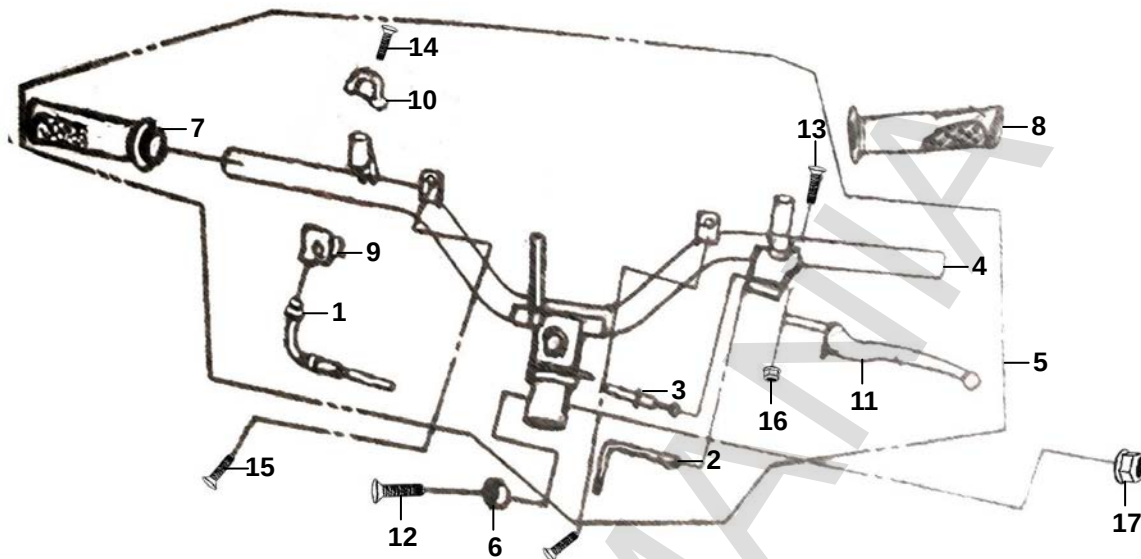


Ref. No	Part Number	Description		Reqd. No
1	17910-AAA-0003	Throt cable COMP	节流导线夹	1
2	35340-M92-0001	FR. Stop SW. ASSY	前刹车开关	1
3	43450-AAA-0001	RR. brake cable COMP	后刹车导线组	1
4	53100-AAA-0000	STRG. handle	把手	1
5	5310A-AAP-0009	Handle set	把手总成	1
6	53125-M9Q-0000	HNDL. set collar	把手套环	1
7	53140-S1F-H001	RH. HNDL. grip	右把手节流管	1
8	53166-S1F-H001	LH. HNDL. grip	左把手节流管	1
9	53167-H09-9001	THROT. UND. housing	节流管下固定座	1
10	53168-H09-0001	Up throt housing	节流管上固定座	1
11	5317A-GAK-V000	L. STRG. handle lever	左把手拉杆	1
12	90106-AAA-0000	Flange bolt 10X50	缘面螺栓 10*50	1
13	90115-M9Q-0000	Screw handle lever pivot	把手拉杆螺栓	1
14	93500-05025-08	Hex nut 5MM	螺母 5MM	1
15	93903-35320	Tapping screw 5X16	自攻螺丝 5*16	2
16	94001-05070-0S	Hex nut 5MM	螺母 5MM	1
17	90304-M9Q-0000	Flange nut 10MM	缘面螺母 10MM	1

 F-04 Front Brake Master Cylinder

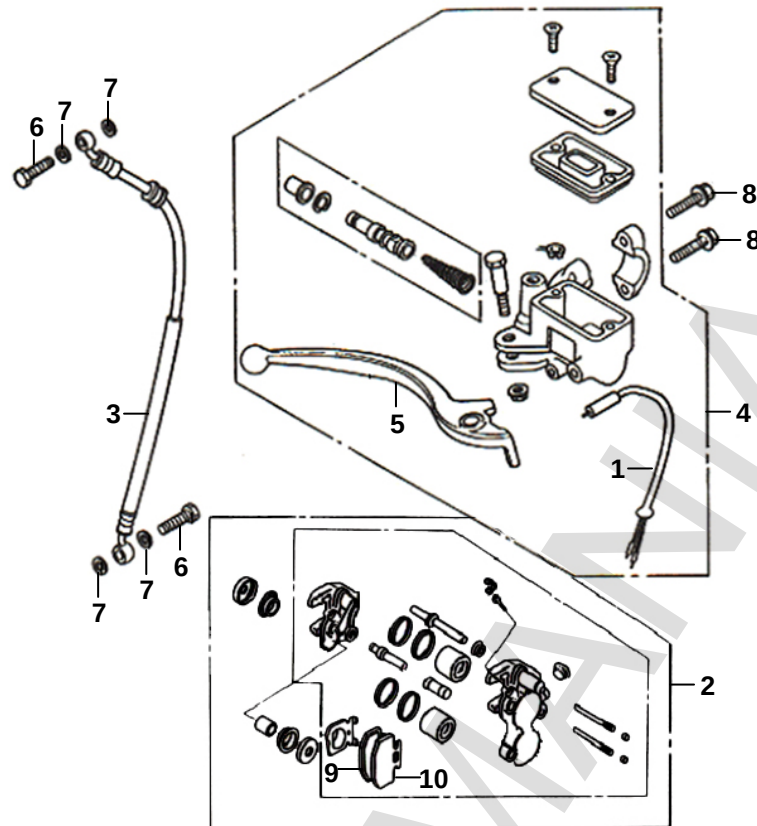


Ref. No	Part Number	Description	Reqd. No
1	35342-M9Q-0000	FR. stop SW. ASSY 前刹车开关总成	1
2	45100-T6R-9002	Caliper ASSY 夹具组	1
3	45126-AAA-0000	FR. brake hose ASSY 前刹车导管总成	1
4	45500-AAA-0000==	FR. master cylinder ASSY 前碟刹泵总成	1
5	5317A-GAK-V000	L. STRG. handle LEVER 把手拉杆	1
6	90145-M9Q-0000	Oil bolt M10x22 螺栓 M10X22	2
7	90545-M9Q-0000	Oil bolt washer 螺栓垫圈	4
8	95801-06022-07	Flange bolt 8*30 六角缘面螺栓 M8*30	2
9	45105-G22-9000	Pad A COMP 来令片 A 组	1
10	45106-G22-9000	Pad B COMP 来令片 B 组	1

 F-06 Handle Pipe • Handle Cover

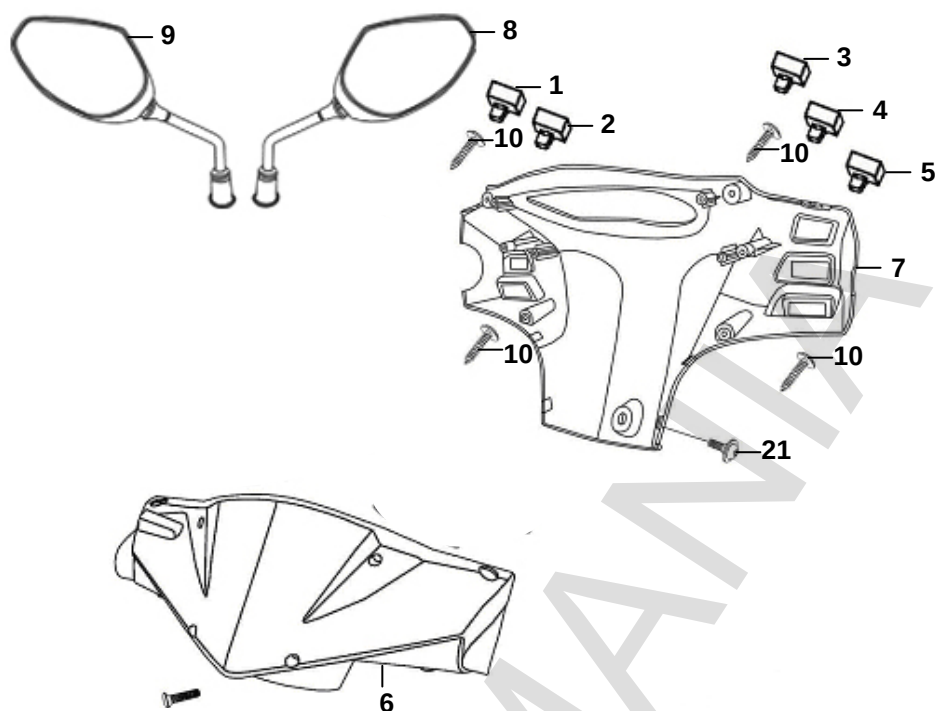


Ref. No	Part Number	Description		Reqd. No
1	35150-M9F-A000	Lighting SW. UNIT	头灯开关	1
2	35160-M9Q-0002	Start SW. UNIT	起动开关	1
3	35170-M9Q-0002-E2	Dimmer and open SW. UNIT	远近灯开关	1
4	35180-M9Q-0002	Horn SW. UNIT	喇叭开关	1
5	35200-M9Q-0001	Winker SW. UNIT	方向灯开关	1
6	53205-AAA-0001	FR. handle cover ASSY	前把手盖总成	1
7	53206-AAA-0001	RR. handle cover	后把手盖	1
8	88110-KAA-0000	R. back mirror ASSY	右后视镜总成	1
9	88120-KAA-0000	L. back mirror ASSY	左后视镜总成	1
10	90109-48168	Tapping screw 4.8X16	自攻螺丝 4.8*16	4

 F-07 Front Cover • Front Inner Box

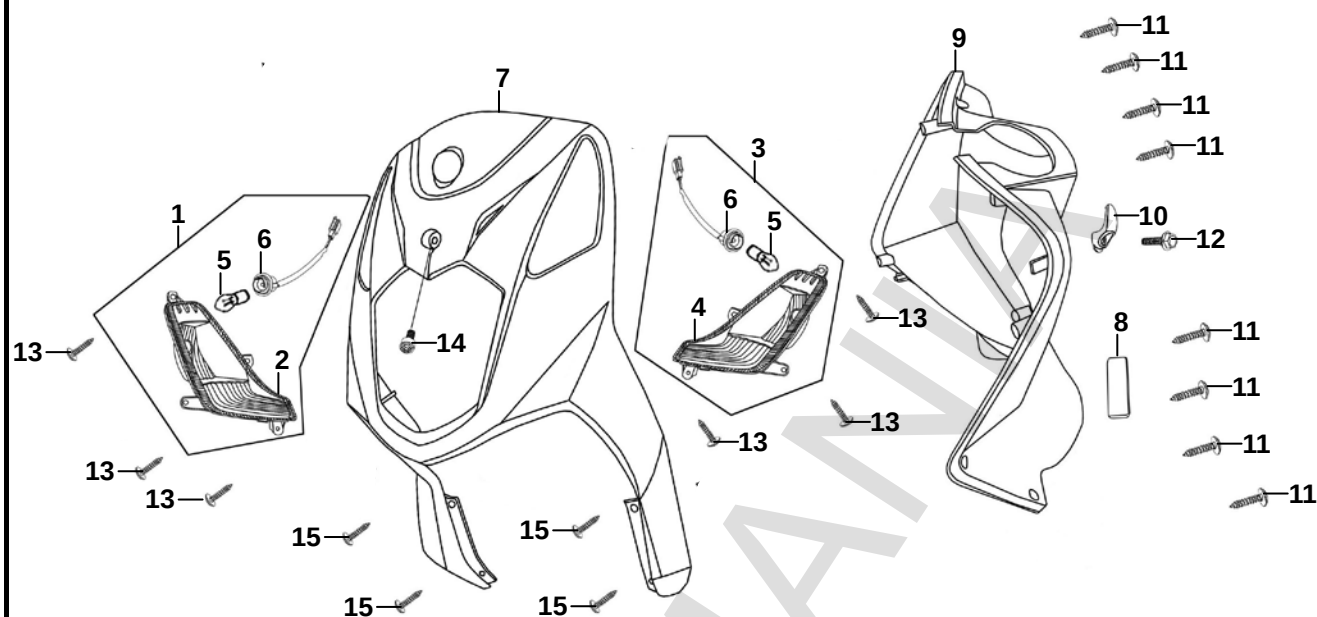


Ref. No	Part Number	Description		Reqd. No
1	33400-ABF-0000	FR. R. winker ASSY	前右转向灯总成	1
2	33402-ABF-0000	FR. R. winker lens	前右转向灯灯壳	1
3	33450-ABF-0000	FR. L. winker ASSY	前左转向灯总成	1
4	33452-ABF-0000	FR. L. winker lens	前左转向灯灯壳	1
5	34905-A8D-0000	Winker bulb(12V 10W)	转向灯灯泡	2
6	34906-ABF-0000	FR. R/L. winker socket COMP.	前转向灯灯座	2
7	64301-ABF-0000	FR cover	前面板	1
8	64318-ALA-0000	Frame number lid	车架号码盖	1
9	81131-ABF-0000	Inner cover	前置物箱	1
10	81133-H12-0000	Luggage hook	挂钩	1
11	90109-42128	Tapping scre2 4.2*12	螺丝 4.2X12	8
12	90115-G02-0000	Bolt 6*16	螺栓 6X16	1
13	93903-35320	Tapping screw 5*16	螺丝 5X16	6
14	90110-H6T-0001	Special screw 6*14	特殊螺丝 6X14	1
15	93903-45380	Tapping screw 5X16	螺丝 5X16	4

 F-08 Floor Panel • Center Cover

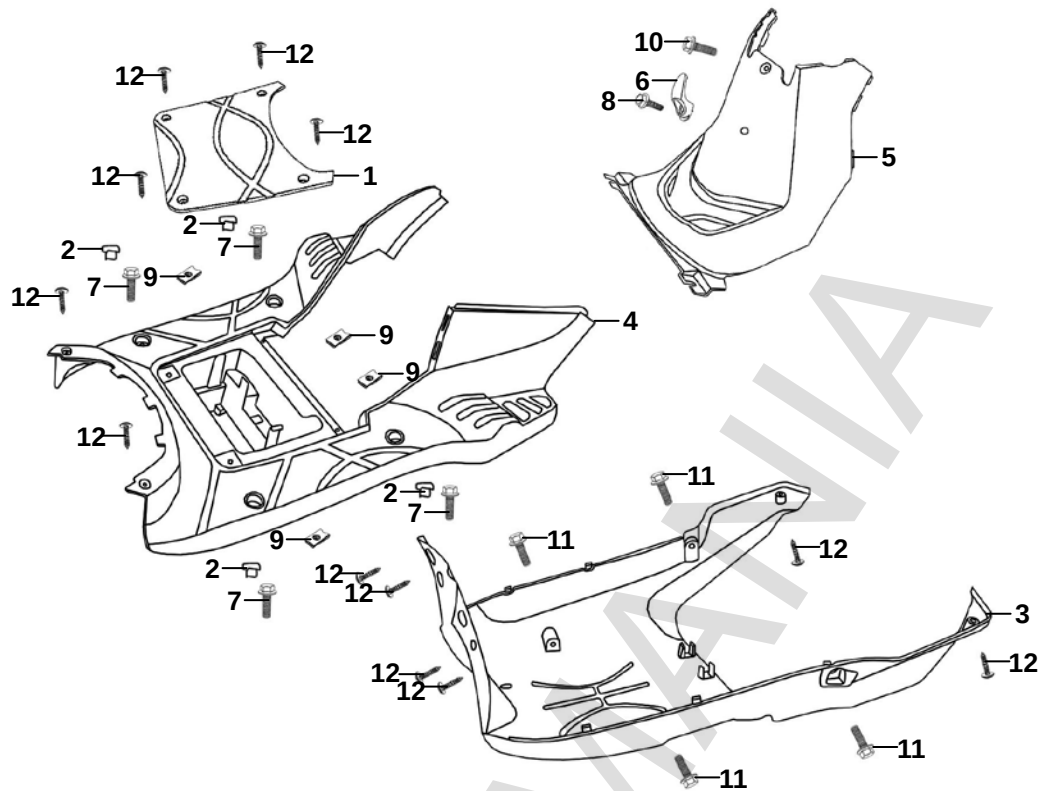


Ref. No	Part Number	Description		Reqd. No
1	50326-AAA-0000	Battery cover	电瓶盖	1
2	50612-AAA-3000	Cap b flr step	脚踏橡皮	4
3	50613-ABF-0000	Under cover	下盖	1
4	64310-AAT-A000	Floor panel	脚踏板	1
5	80151-AAA-0000	Center cover	中盖	1
6	81132-H12-0002	Luggage hook	安全帽挂钩	1
7	90111-M9Q-800B	Flange bolt 6MM	缘面螺栓 6 MM	4
8	90115-G02-0000	Bolt 6X16	螺栓 6*16	1
9	90302-M92-0000	Spring nut	弹簧螺帽	4
10	90115-G02-0000	BOLT 6X16	螺栓 6*16	1
11	93404-06016-00	Washer bolt 6X16	垫片螺栓 6*16	4
12	90109-42168	Tapping screw 4.2X16	自攻螺丝 4.2*16	12

 F-09 Body Cover

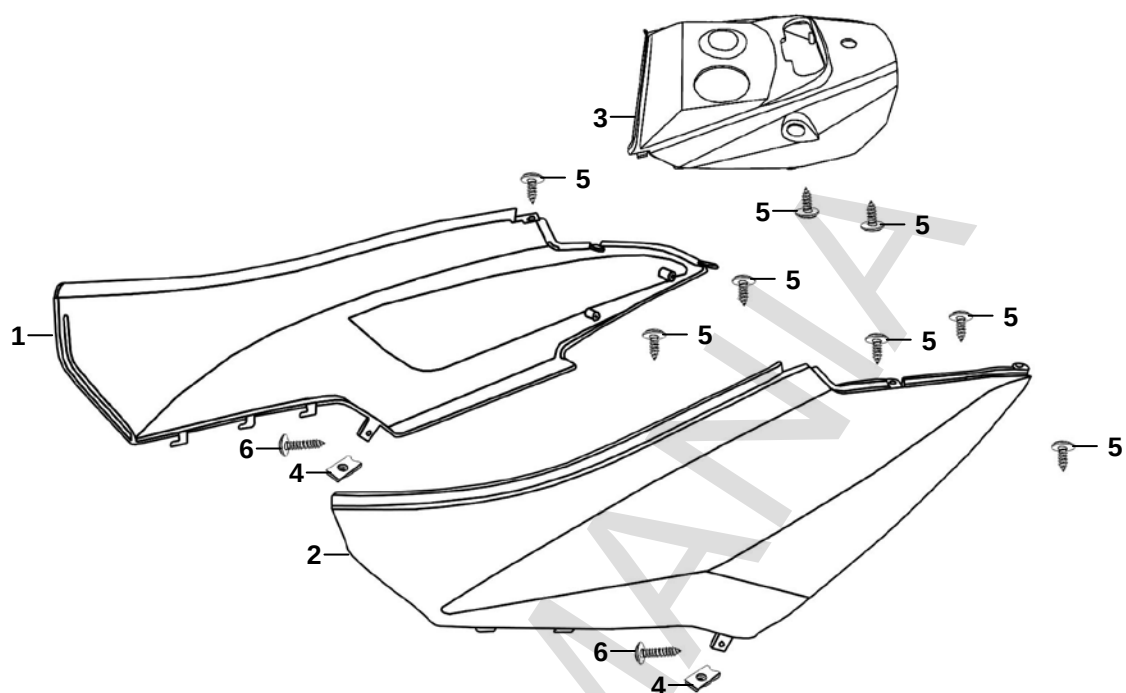


Ref. No	Part Number	Description		Reqd. No
1	83500-AAA-0001	RH body cover	右车体盖	1
2	83600-AAA-0000	LH body cover	左车体盖	1
3	83750-AAA-0000	RR center cover	后中央盖	1
4	90302-M92-0000	Spring nut 5MM	弹簧螺帽	2
5	90109-48128	Tapping screw 4.8X16	自攻螺丝 4.8*16	8
6	90109-48168	Tapping screw 4.8X16	自攻螺丝 4.8*16	2

 F-10 Steering Stem • Front Cushion

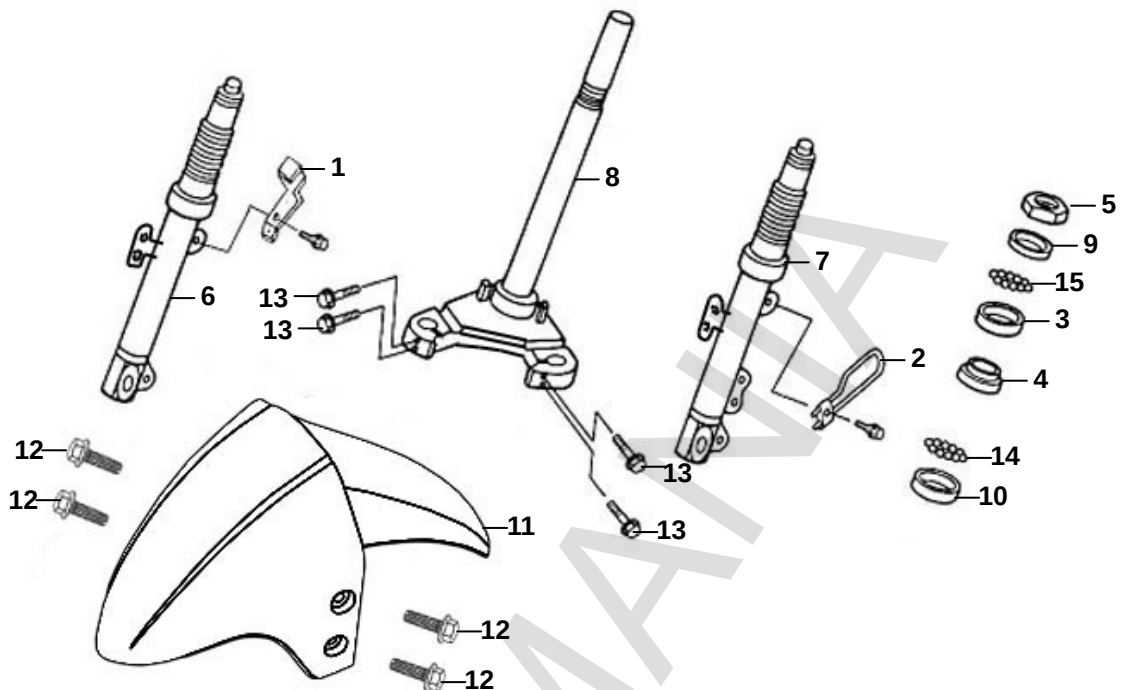


Ref. No	Part Number	Description	Reqd. No
1	45156-AAA-0000	FR. brake cable	1
2	45465-AAA-0000	Cable guide	1
3	50301-M9Q-0002	STRG.up ball race	1
4	50302-M9Q-0000	Race STRG.bot ball	1
5	50306-M9Q-0000	STRG. stem lock nut	1
6	51400-AWA-0001	R.FR. cushion	1
7	51500-AWA-0001	L.FR. cushion	1
8	53200-AAA-0004	Steering stem	1
9	53211-M9Q-0000	STRG. top cone	1
10	53212-M9Q-0000	Cone STRG. bottom	1
11	61100-AAA-0000	FR. fender	1
12	90111-M9Q-800B	FLANGE BOLT 6MM	4
13	95801-08040-00	Flange bolt 8X40	4
14	50303-AAA-0000	UP STEEL BALLS AND	1
15	50304-AAA-0000	LOWER STEEL BALLS AND	1

 F-11 Front Wheel

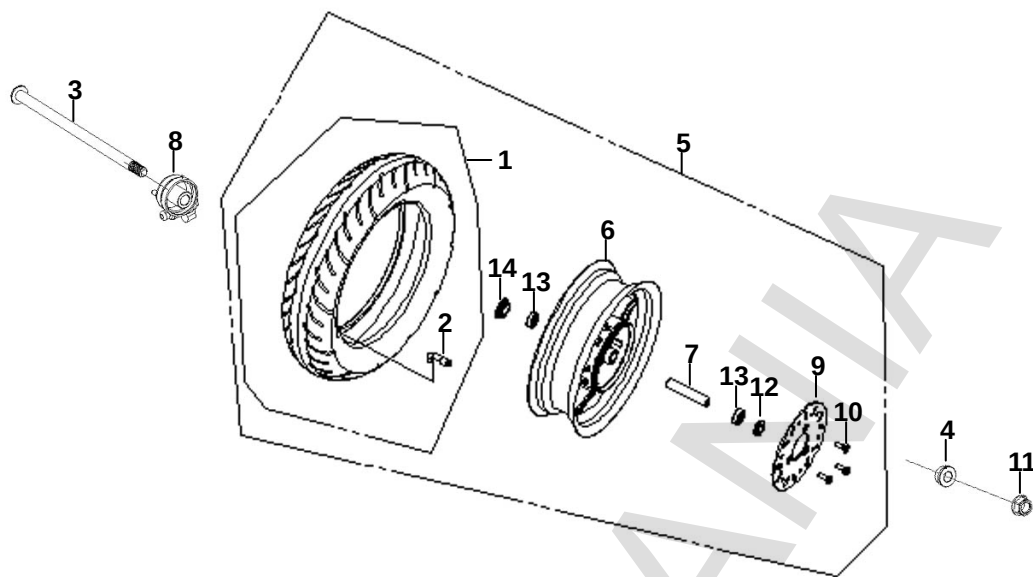


Ref. No	Part Number	Description	Reqd. No
1	42710-AAT-0000	Tire ASS'Y	1
2	42753-ABA-0000	Rim valve	1
3	44301-H3F-0001	FR. wheel axle	1
4	44311-GW0-9100	Collar fr wheel side	1
5	44600-AAA-0005	FR. wheel ASS'Y	1
6	44601-AAA-0003	FR. cast wheel	1
7	44301-H3F-0001	FR. WHEEL AXLE	1
8	44800-G22-0004	SPDMT gear box ASS'Y	1
9	45121-AAA-0000	FR. brake disk	1
10	90106-AAA-0000	FR. disk bolt 8*26	3
11	90306-M9Q-0001	Self-lock nut 12MM	1
12	90754-M9Q-0000-M1	Dust seal 20*32*5	1
13	90912-M9Q-0000-M1	Bearing 6201(U) (NTN)	2
14	91258-M9Q-0000	SPDMT. gear box seal	1

 F-12 Rear Wheel

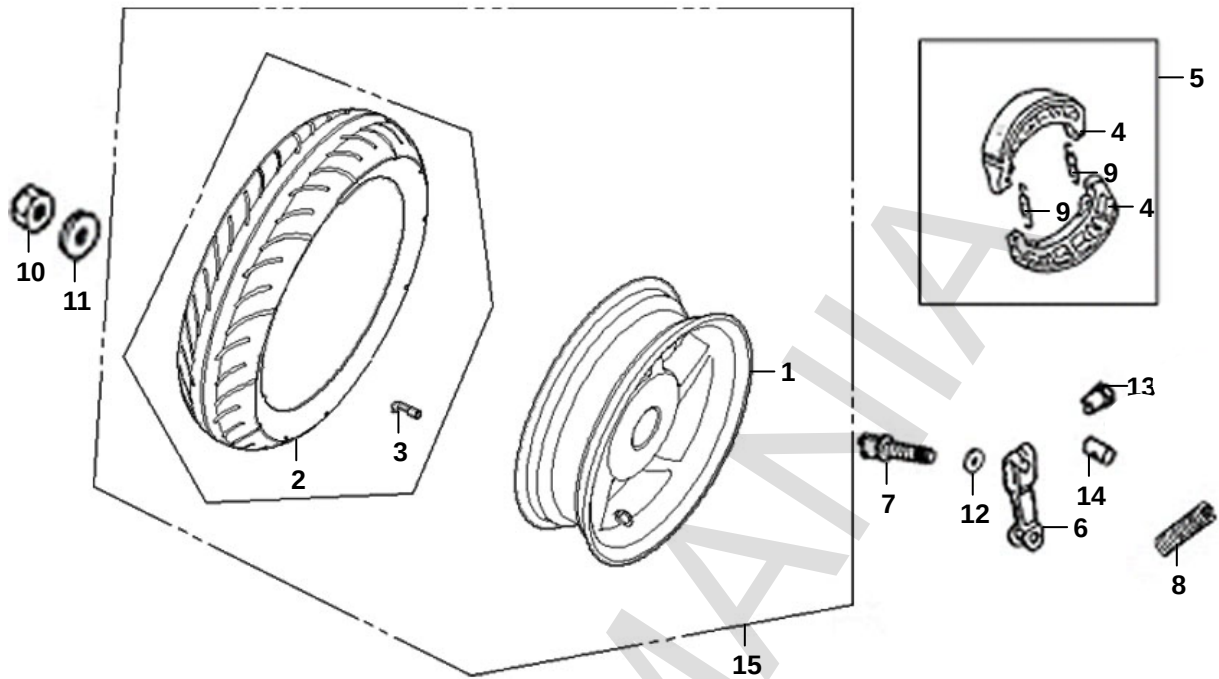


Ref. No	Part Number	Description		Reqd. No
1	42601-AAA-0002	RR. wheel hub COMP	后轮圈	1
2	42710-ABA-0030	RR. tire ASSY	后轮胎	1
3	42753-ABA-0000	Rim valve	气门嘴	1
4	43120-Y01-E000	Brake shoe COMP	刹车皮	1
5	4312A-Y01-E000	RR. brake shoe ASSY	刹车皮总成	1
6	43410-AAA-0000	RR. brake arm	后刹车臂	1
7	43141-AAA-0001	RR. brake cam	后刹车凸轮	1
8	43472-F01-0002	RR. BRK. Arm return SRG.	后刹车臂回位弹簧	1
9	45133-096-A000	Brake shoe spring	后刹车皮弹簧	2
10	90305-M9Q-9001	Self-lock nut 16MM	自锁螺母 16MM	1
11	90501-M9Q-0000	16MM washer	垫片 16MM	1
12	91352-M9Q-0000-M1	O ring 11.3X1.3	O 环 11.3X1.3	1
13	95015-32001	Brake arm joint B	后刹车臂接头 B	1
14	95015-42000	Adjust nut B	调整螺母 B	1
15	42600-AAT-0000	RR wheel ASSY	后轮总成	1

 F-13 Seat • Rear Grip

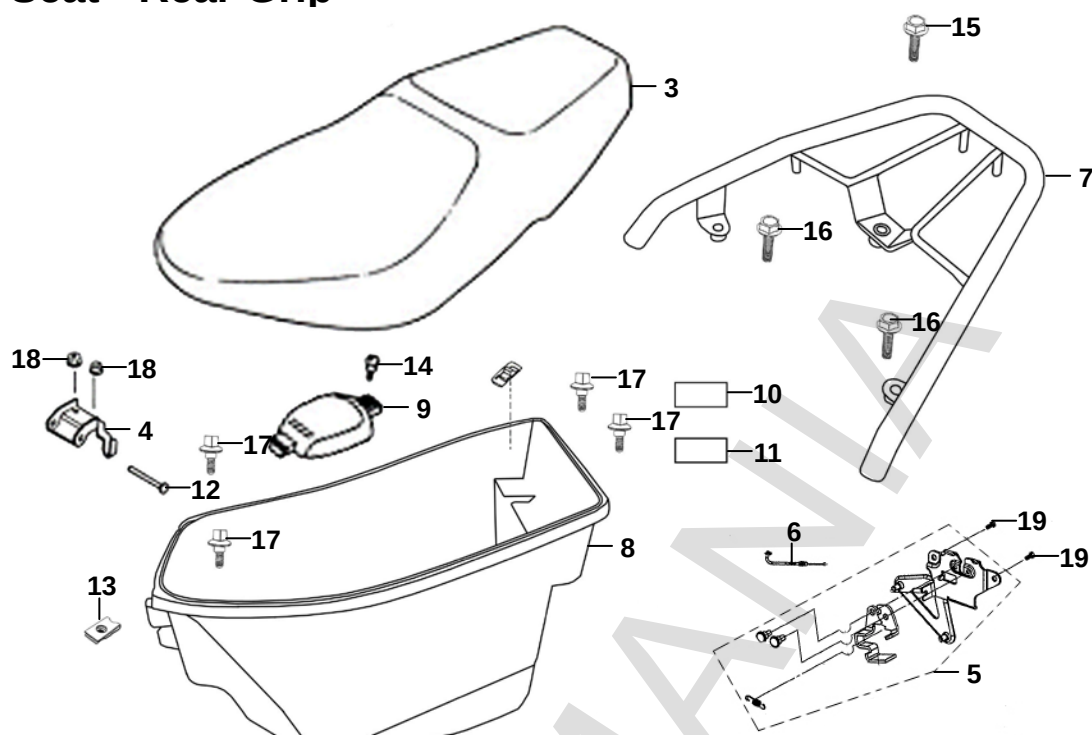


Ref. No	Part Number	Description	Reqd. No
3	77200-AAA-0004	Double seat COMP	1
4	77234-M8Q-0000	SEAT LOCK SPG.	1
5	77230-AKA-0001	Seat catch COMP	1
6	77240-ABA-0000	Seat lock cable	1
7	81200-AAA-0003	RR. carrier	1
8	81250-AAA-0003	Luggage box	1
9	81251-M9Q-0000	CARB. maint cover	1
10	87505-ABA-0000	Tire lable	1
11	87560-E21-0000	Drive caution mark	1
12	90105-AAA-0000	Seat hinge screw	1
13	90302-M92-0000	Spring nut 5MM	1
14	90381-M9Q-0000	Special screw 6X17	1
15	93401-08030-00	Washer bolt 8X30	1
16	93401-08050-00	Washer bolt 8X50	2
17	93404-06016-00	Bolt washer 6X16	4
18	94050-06080	Flange nut 6MM	2
19	95801-06012-07	Flange bolt 6X12	2

 F-14 Fuel Tank

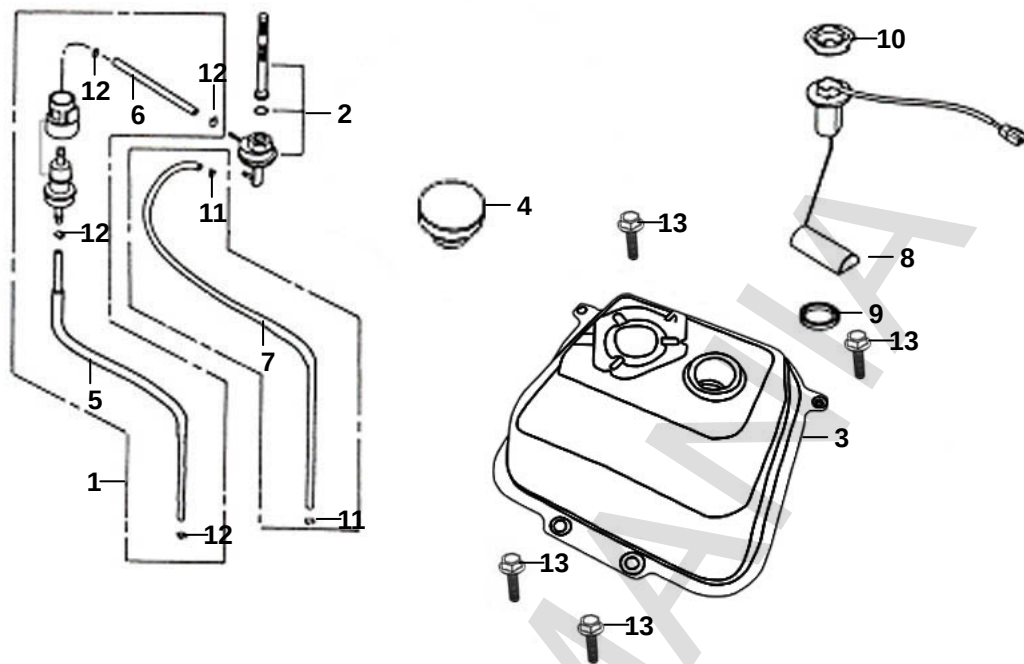


Ref. No	Part Number	Description		Reqd. No
1	16910-M9Q-0001	Fuel strainer ASSY	滤油器总成	1
2	16950-M9Q-0001	Fuel cock ASSY	油杯总成	1
3	17500-AAA-0005	Fuel tank COMP	油箱组	1
4	17620-CT1C-A000	Fuel filler cap COMP	油箱盖组	1
5	17682-ABA-0002	Fuel tube (400MM)	前油管	1
6	17683-AAA-0001	Fuel tube (170MM)	后油管	1
7	17359-AAA-0000	Vacuum tube	真空管	1
8	37800-ABA-0001	Fuel unit	汽油油量表	1
9	37801-M9Q-0001	Base packing	油量表垫圈	1
10	37802-M9Q-0000	Ret fuel unit	油量表压板	1
11	95002-02070	Tube clip B7	负压管卡簧 B7	2
12	95002-02080	Tube clip B8	油管卡簧 B8	4
13	95801-06012-00	Flange bolt 6X12	缘面螺栓 6*12	4

 F-15 Battery • Tool Box

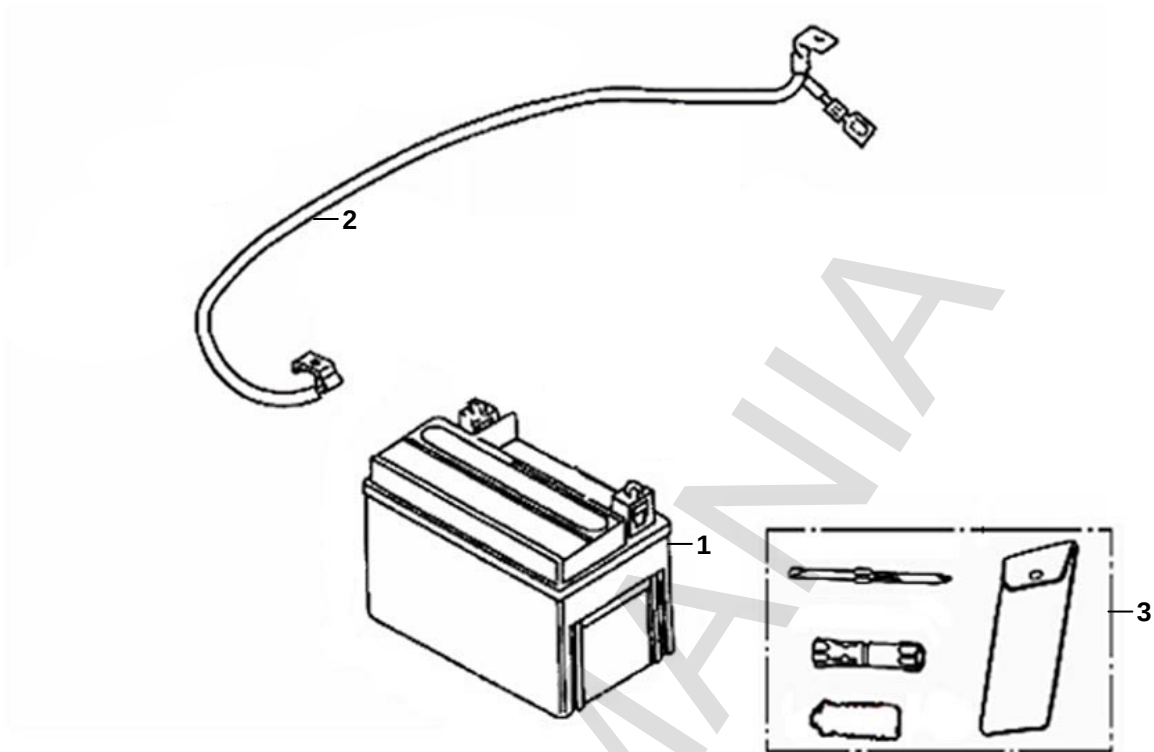


Ref. No	Part Number	Description		Reqd. No
1	31500-EG13-P000	Battery ASSY	电瓶总成	1
2	32411-AAA-0000	Battery cable	电瓶火线	1
3	89010-V1F-A001	Tool set	工具组	1

 F-16 Air Cleaner

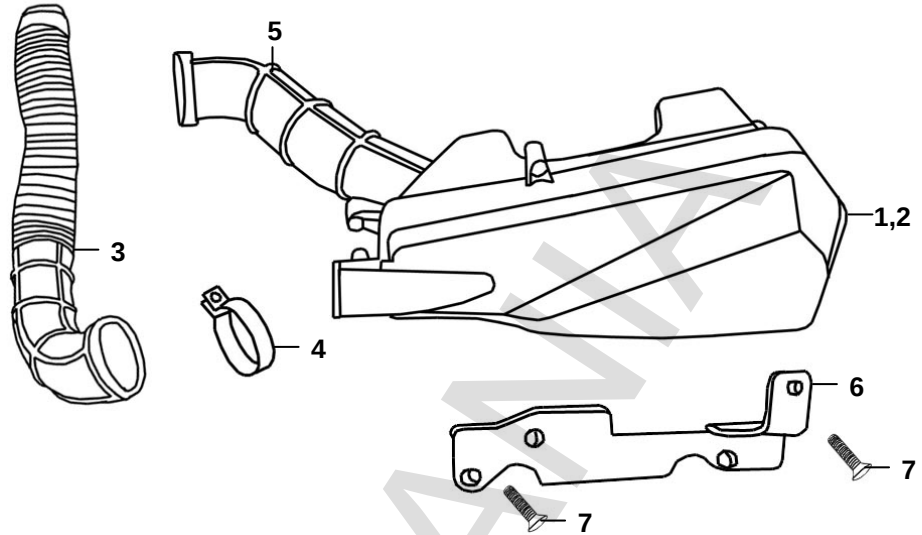


Ref. No	Part Number	Description	Reqd. No
1	17200-AAA-0102	Air cleaner ASSY	1
2	17211-AAA-0000	AIR/C. element COMP	1
3	11212-AAA-0001	Breather tube B	1
4	18533-634-6700	Tube clip	1
5	17253-AAA-0000	AIR/C connecting tube	1
6	61114-AKA-0001	AIR/C stay	1
7	95701-06016-08	Flange bolt M6X16	2

 F-17 Exhaust Muffler

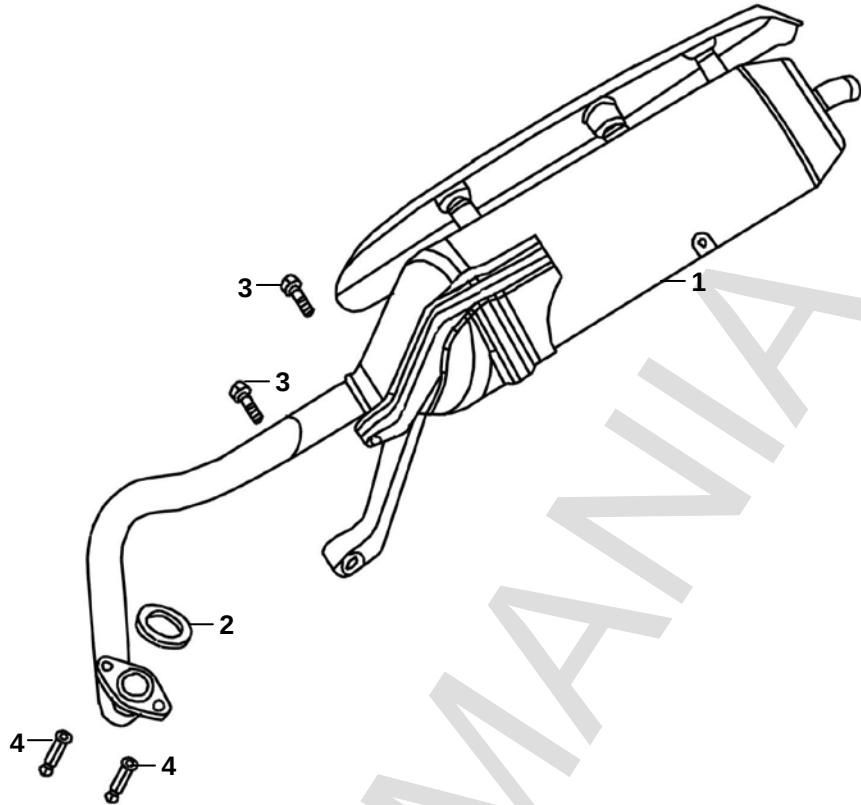


Ref. No	Part Number	Description		Reqd. No
1	18000-AAA-0200	EXH. muffler ASSY	排气管总成	1
2	18291-H80-A000	EXH. pipe gasket	排气管垫片	1
3	90103-H6B-0002	Flange bolt 8X38	緣面螺栓 8*38	2
4	90301-M9Q-0000	Nut muffler joint M7	排气管螺母	2

 F-18 Main Stand • Kick Starter Arm

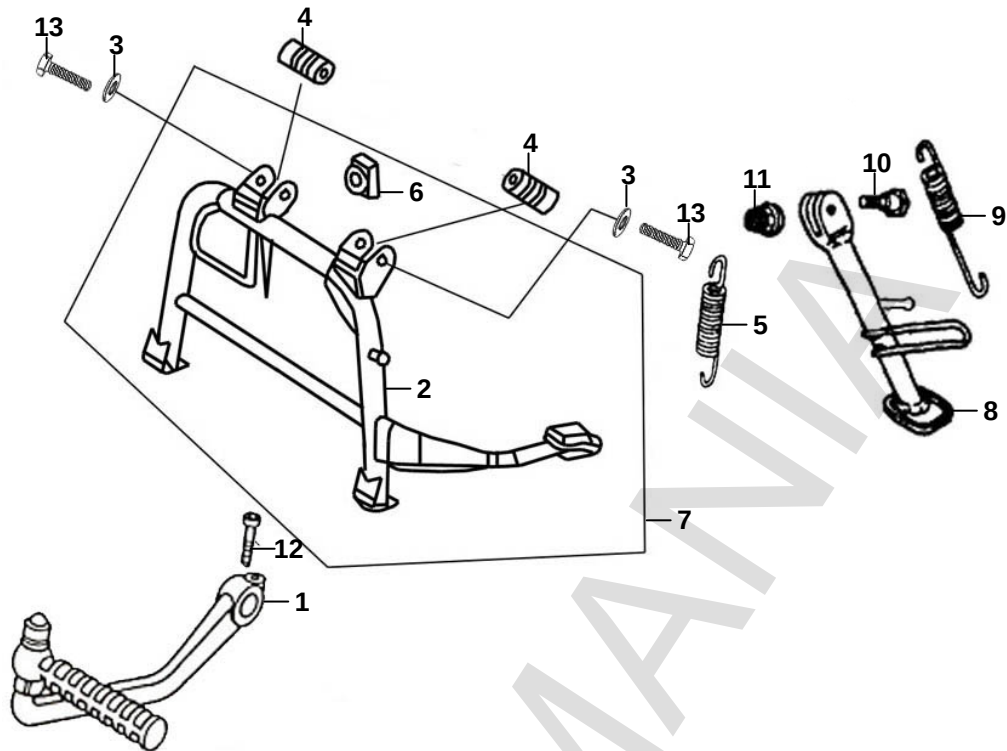


Ref. No	Part Number	Description	Reqd. No
1	28300-S1B-A000	Kick starter arm ASSY	1
2	50500-AKA-0001	Main stand COMP	1
3	50503-A5C-0000	Main stand washer	2
4	50504-A5C-0003	Main stand collar	2
5	50505-E60-0001	Main stand SPG. ASSY	1
6	50506-AAA-0000	Stand stop rubber A	1
7	5050A-AKA-0003	Main stand ASSY	1
8	50530-ABA-0002	Side stand COMP	1
9	95014-72102	Side stand SPG. ASSY	1
10	90108-AAA-0000	Side stand pivot screw	1
11	94030-08000	HEX. nut 8MM	1
12	95701-06022-07	Flange bolt 6X22	1
13	95801-08050-00	Flange bolt 8X50	2

 F-19 Tail Light • RR. Cushion

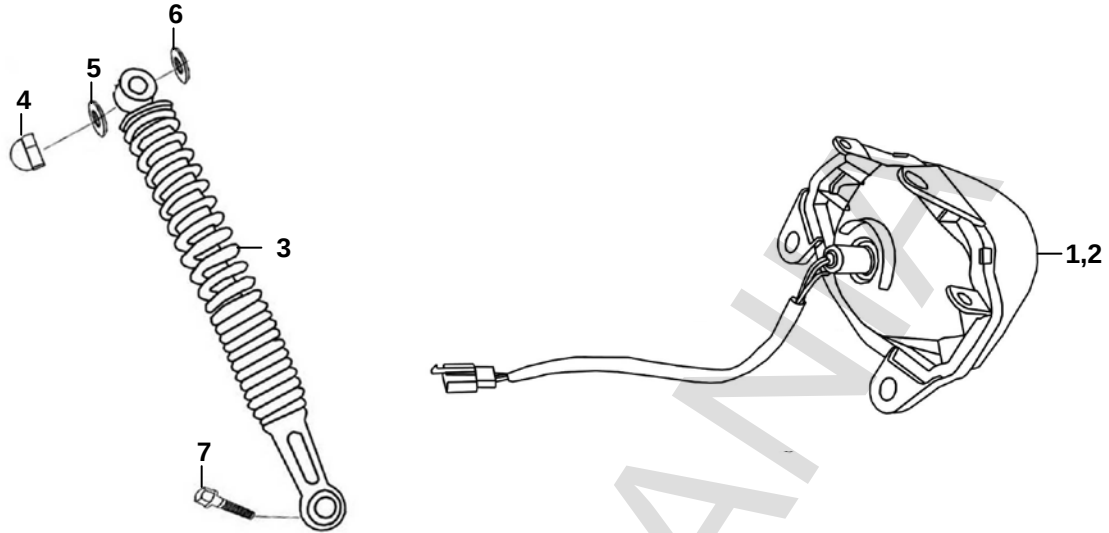


Ref. No	Part Number	Description		Reqd. No
1	33700-ABA-0001	Tail light ASSY	尾灯总成	1
2	34906-ABF-0000	Tail & stop bulb	尾灯灯泡	1
3	52400-AAA-1100	RR. cushion ASSY	后减震总成	1
4	94050-10080	Flange nut 10MM	缘面螺帽 10MM	1
5	94101-10800	Plain wansher 10MM	平面垫片 10MM	1
6	94101-12800	Plain wansher 12MM	平面垫片 12MM	1
7	95801-08035-00	Flange bolt 8X35	缘面螺栓 8*35	1

 F-20 Rear Fender • Rear Inner Fender

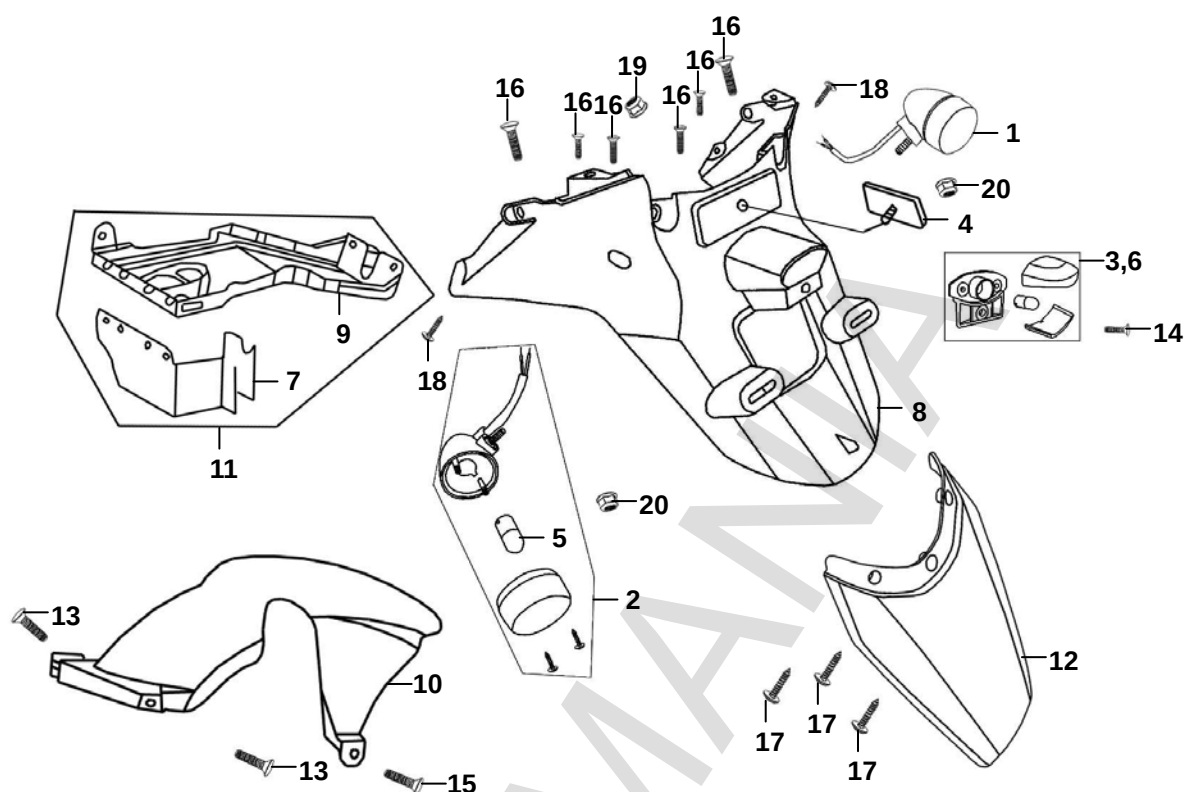


Ref. No	Part Number	Description	Reqd. No
1	33600-ABA-0000	RR R winker ASSY	1
2	33650-ABA-0000	RR L winker ASSY	1
3	33740-ABA-0000	License light ASSY	1
4	33741-ABA-0000	RR. reflex reflector	1
5	34905-A8D-0000	Winker bulb	2
6	34908-M9Q-2000	Poition bulb	1
7	80104-AAA-0000	Splash board plate	1
8	80105-ABA-0001	RR. fender	1
9	80106-AAA-0003	RR. inner fender	1
10	80107-ATA-0003	RR. mudguard	1
11	8010B-AAA-0002	Inner fender ASSY	1
12	80110-AAA-0000	RR. fendder mudguard	1
13	90111-M9Q-800B	Flange bolt 6MM	2
14	93891-05025-00	Washer screw 5X14	1
15	90109-42128	Tapping screw	1
16	90109-42128	Tapping screw 5X12	6
17	90109-42128	Tapping screw 5X12	3
18	90109-48168	Tapping screw 4X12	2
19	94050-06080	Flange nut 5MM	1
20	94050-06080	Flange nut 5MM	2

 F-21 Wire Harness

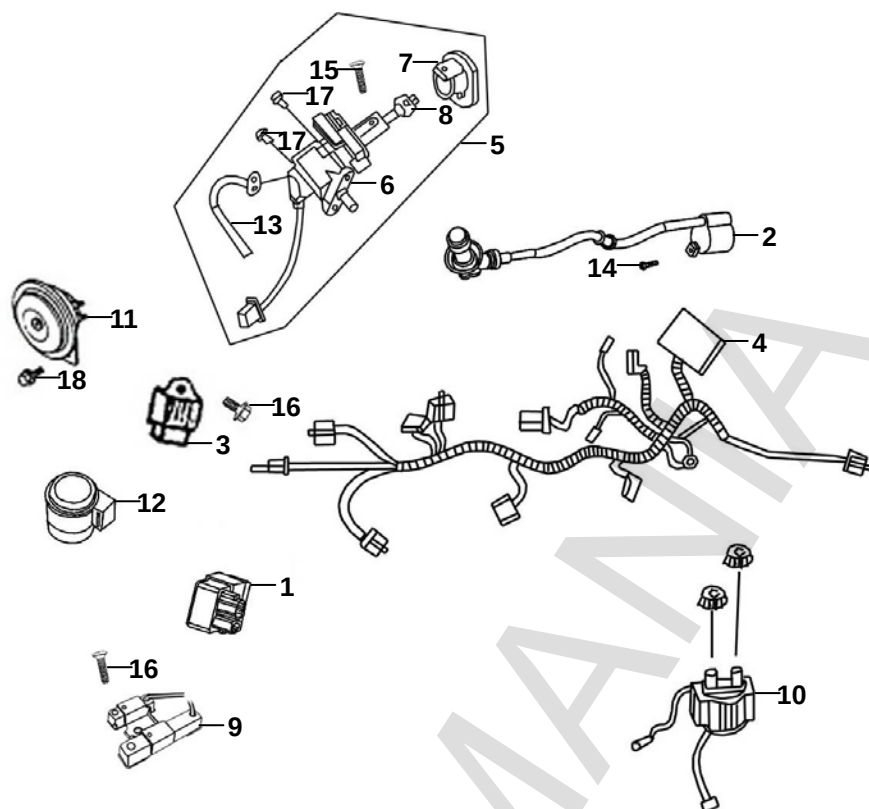

Ref. No	Part Number	Description		Reqd. No
1	30410-T3A-A000	S.L. CDI COMP	CDI	1
2	3051A-T3D-0000	IGN. COIL. ASSY	高压包总成	1
3	31600-CT3-A000	REG. REC. COMP	整流器	1
4	32100-AAA-0101=	Wire harness	电路主线	1
5	35010-ABA-0001	Key set	套锁	1
6	35100-ABA-0000	Comb sw and lock ASSY	锁组	1
7	35110-ABA-0000	Ring		1
8	35111-ABA-0000	Key	钥匙	1
9	35400-T3D-A001	Resistor COMP	电阻器	1
10	35850-35A-A000	MAG. SW. COMP	启动继电器	1
11	38110-ABA-0001	Horn COMP	喇叭	1
12	38300-T40-0101	Ap winker relay ASSY	闪光器	1
13	77240-ABA-0000	Seat lock lable	坐垫导线锁	1
14	90112-AAA-0000	Flange bolt 5X22	缘面螺栓 5*22	1
15	93891-05025-00	Screw washer 5X8	垫片螺栓 5X8	1
16	95801-08040-04	Flange bolt 6X16	缘面螺栓 6*16	2
17	95801-08040-04	Flange bolt 6X18	缘面螺栓 6X18	2
18	95801-08040-04	Flange bolt 8X12	缘面螺栓 8*12	1

 F-22 Frame Body • Engine Hanger

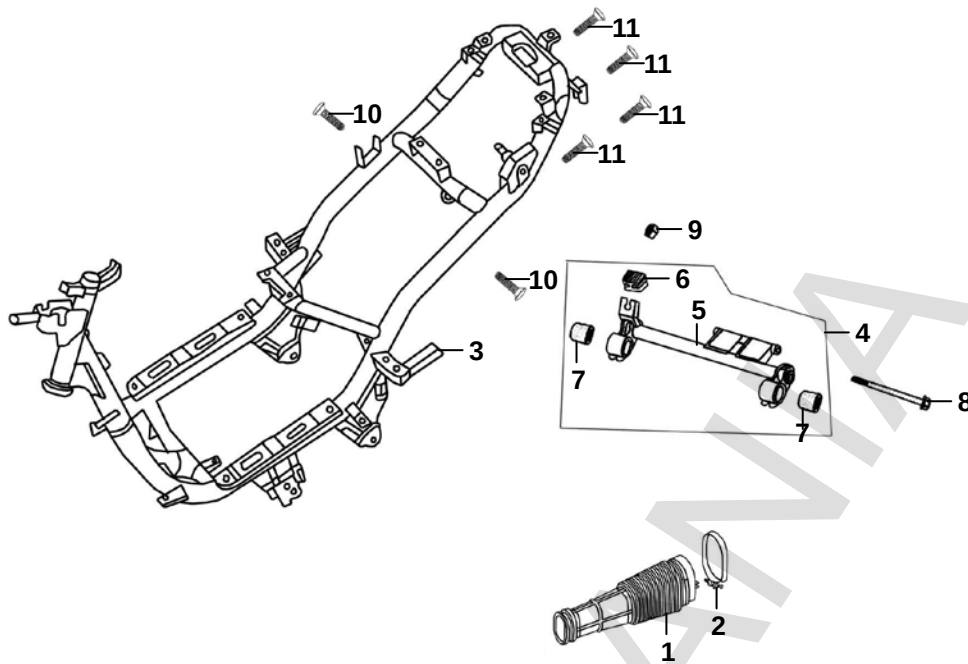

Ref. No	Part Number	Description		Reqd. No
1	11345-AAA-0002	L. cover duct	左盖冷却导管	1
2	1134B-S1B-A000	L. cover duct band	左盖冷却导管夹	1
3	50100-AAP-0008	Frame body COMP	车架	1
4	50350-AAA-0100	ENG. hanger link ASSY	引擎悬吊总成	1
5	50351-AAA-0100	ENG. hanger link	引擎悬吊	1
6	50352-A1A-0000	Link stopper rubber	制止橡皮	1
7	50353-M9Q-0000	Swing lock bush	锁付衬套	2
8	90105-N02-0002	Flange bolt 10X184	缘面螺栓 10*184	1
9	90304-M9Q-0000	FLG. U nut 10MM	缘面螺帽 10MM	1
10	93401-06010-07	BOLT. WASH 6X10	垫片螺栓 6*10	2
11	93404-06016-00	BOLT. WASH 6X12	垫片螺栓 6*12	4

PART NO. INDEX

MOTOMANIA

MOTOMANIA

MOTOMANIA

MOTOMANIA

MOTOMANIA

No.

MOTOMANIA

PART No.

No.

MOTOMANIA