



BAJAJ
pulsar DTS-i 180



THE WORLD'S
FAVOURITE
INDIAN

BAJAJ
pulsar DTS-i 180

Spare Parts Catalogue

THE WORLD'S
FAVOURITE
INDIAN



Bajaj Auto Limited
Akurdi Pune 411 035 India
www.bajajauto.com

Notice

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

REV. FEB. 2020

Foreword



We have pleasure in presenting the Spare Parts Catalogue for 'Pulsar DTS-I 180 BSIV - NEON ' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Spares - International Business
Akurdi, Pune 411 035 India

Instructions



1. How to Read the Catalogue : Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

2. How to Order Spare Parts : The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

3. Part Number System : We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

4. Abbreviations : The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

Index





Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	SAI System	4
3	Cylinder Head	6
4	Valve	8
5	Camshaft / Tensioner	10
6	Cylinder & Piston	12
7	Crankshaft	14
8	Balancer & Balancer Idler Gear	16
9	Transmission	18
10	Change Drum / Shaft Fork	20
11	Gear Change Mechanism	22
12	Engine Assly. & Crankcase RH	24
13	Crankcase LH	26
14	Cover RH	28
15	Cover Magneto	30
16	Clutch Assembly	32
17	Carburettor	34
18	Air Cleaner Complete	36
19	Silencer Assembly	38
20	Seat Assembly / Seat Lock	40
21	Oil Pump	42
22	Magneto, CDI & H.T. Coil	44
23	Starter Assembly	46
24	Engine Mountings	48
25	Frame and Frame Fittings	50
26	Swing Arm / Rear Shock Absorber	52
27	Rider, Pillion Foot Rest & Step Holder	54
28	Mudguard - Front & Rear	56

Index

Plate No.	Description	Page No.
29	Stand Assembly	58
30	Tube / Tyre / Rim	60
31	Front Hub	62
32	Front Master Cylinder	64
33	Front Disc Brake	66
34	Rear Hub	68
35	Rear Disc Brake System	70
36	Rear Disc Brake - Master Cylinder-Caliper	72
37	Rear Brake Padal	74
38	Handle Bar	76
39	Front Fork	78
40	Cap Tank & Gauge Fuel	80
41	Fittings Fuel Tank, Side Cover, Cover Seat	82
42	Meter Assembly	84
43	Control Cables	86
44	Chain Case	88
45	Head Lamp & Fairing	90
46	Indicator Light Assembly	92
47	Tail Lamp Assly. / FR & RR No. Plate	94
48	Tool Kit	96
49	Electrical Equipments	98
50	Accessories / Grab Handle	100
51	Painted Parts & Decals	102-104
	Kit List	
	Amendment Sheet	
	Part Index	





Pictorial Index

BAJAJ
Pulsar DTS-i

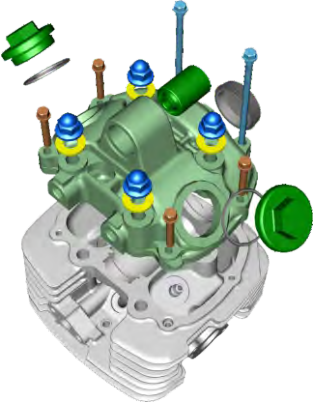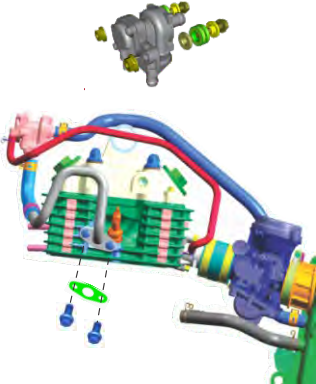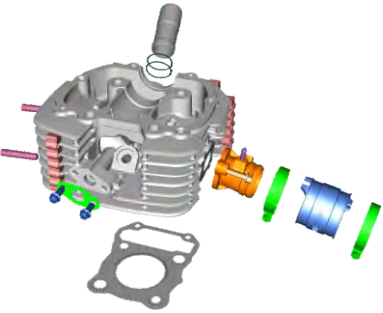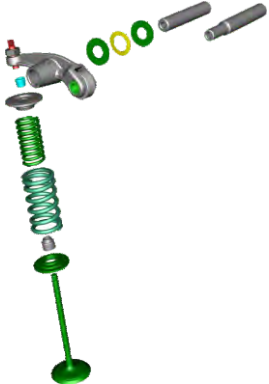PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 1	PLATE NO. : 2 SAI SYSTEM	PAGE NO. 3
			
PLATE NO. : 3 CYLINDER HEAD	PAGE NO. 5	PLATE NO. : 4 VALVE	PAGE NO. 7
			





Pictorial Index

BAJAJ
Pulsar DTS-i

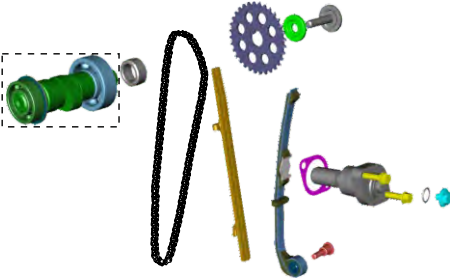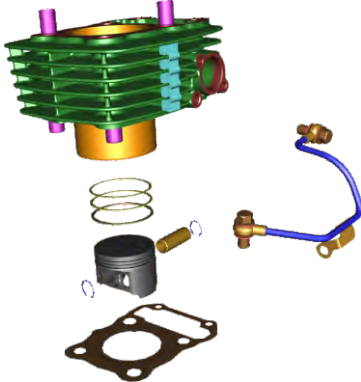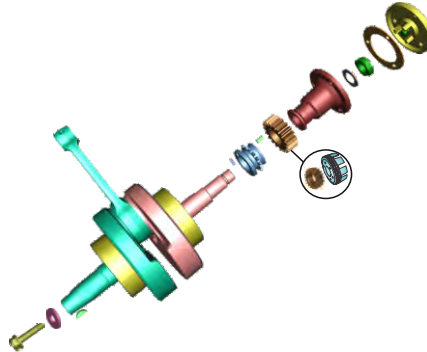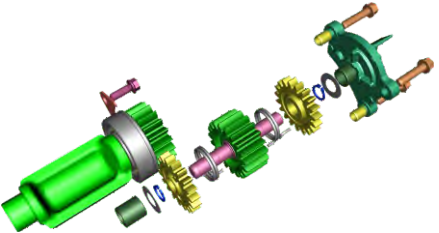PLATE NO. : 5 CAMSHAFT / TENSIONER	PAGE NO. 9	PLATE NO. : 6 CYLINDER & PISTON	PAGE NO. 11
			
PLATE NO. : 7 CRANKSHAFT	PAGE NO. 13	PLATE NO. : 8 BALANCER & BALANCER IDLER GEAR	PAGE NO. 15
			





Pictorial Index

BAJAJ
pulsar DTS-i

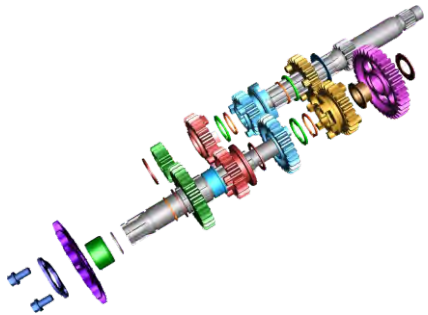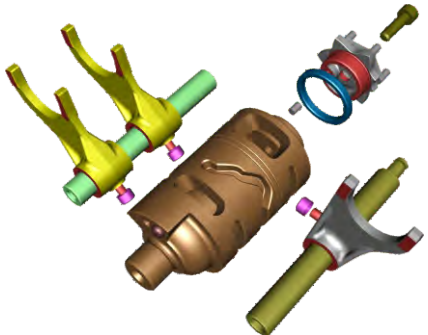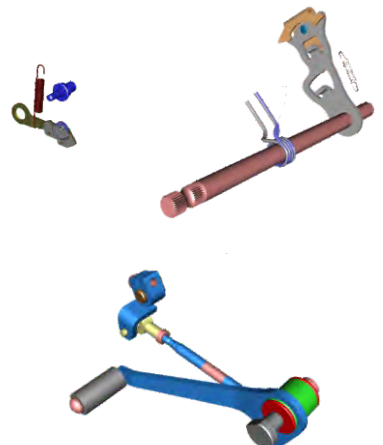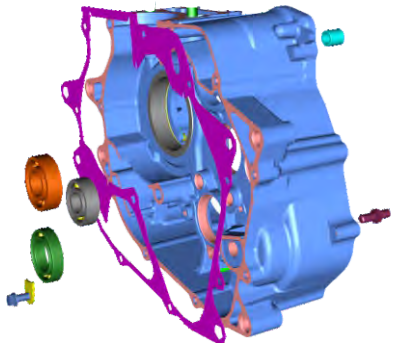PLATE NO. : 9 TRANSMISSION	PAGE NO. 17	PLATE NO. : 10 CHANGE DRUM / SHAFT FORK	PAGE NO. 19
			
PLATE NO. : 11 GEAR CHANGE MECHANISM	PAGE NO. 21	PLATE NO. : 12 ENGINE ASSLY. & CRANKCASE RH	PAGE NO. 23
			




Pictorial Index

BAJAJ
pulsar DTS-i

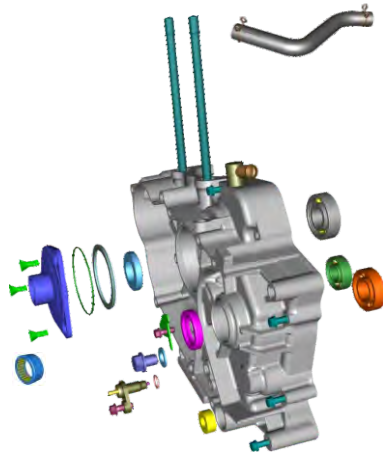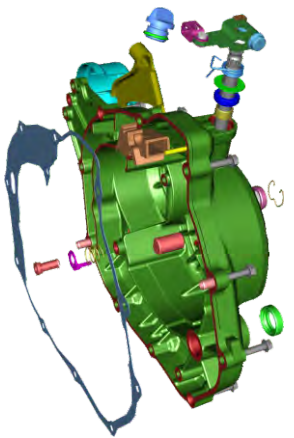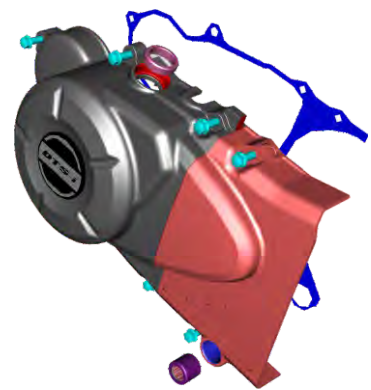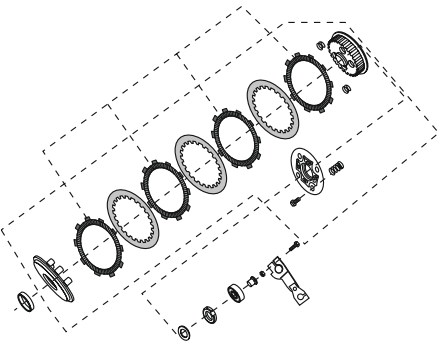PLATE NO. : 13 CRANKCASE LH	PAGE NO. 25	PLATE NO. : 14 COVER RH	PAGE NO. 27
			
PLATE NO. : 15 COVER MAGNETO	PAGE NO. 29	PLATE NO. : 16 CLUTCH ASSEMBLY	PAGE NO. 31
			





Pictorial Index

BAJAJ
Pulsar DTS-i

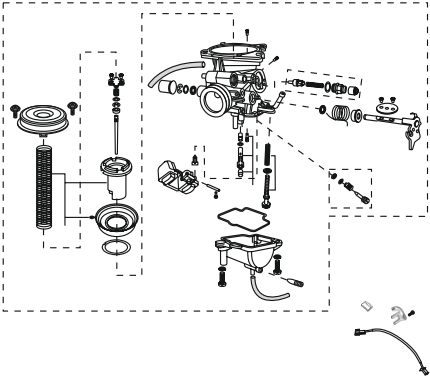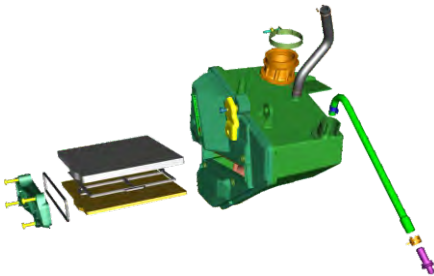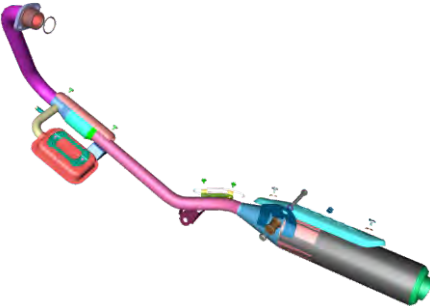PLATE NO. : 17 CARBURETTOR	PAGE NO. 33	PLATE NO. : 18 AIR CLEANER COMPLETE	PAGE NO. 35
			
PLATE NO. : 19 SILENCER ASSEMBLY	PAGE NO. 37	PLATE NO. : 20 SEAT ASSEMBLY / SEAT LOCK	PAGE NO. 39
			

Pictorial Index

BAJAJ
Pulsar DTS-i

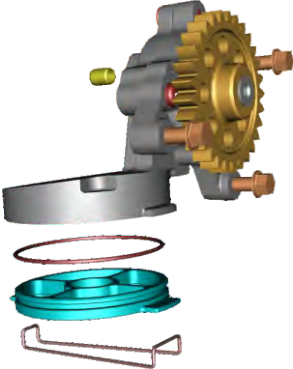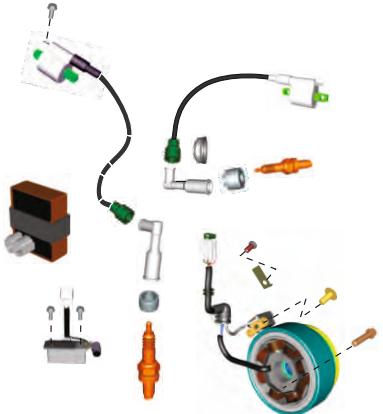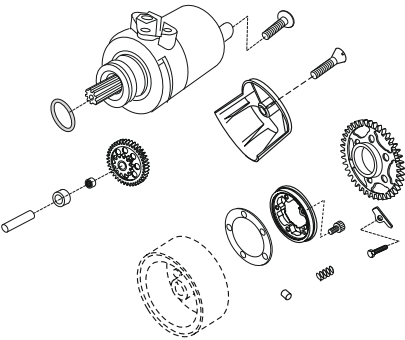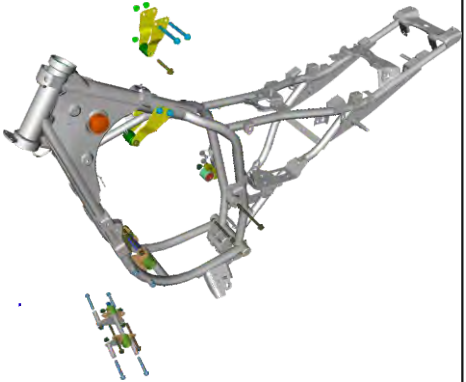PLATE NO. : 21 OIL PUMP	PAGE NO. 41	PLATE NO. : 22 MAGNETO, CDI & H.T. COIL	PAGE NO. 43
			
PLATE NO. : 23 STARTER ASSEMBLY	PAGE NO. 45	PLATE NO. : 24 ENGINE MOUNTINGS	PAGE NO. 47
			

Pictorial Index



PLATE NO. : 25 FRAME & FRAME FITTINGS	PAGE NO. 49
--	----------------

PLATE NO. : 26 SWING ARM / REAR SHOCK ABSORBER	PAGE NO. 51
---	----------------

PLATE NO. : 27 RIDER, PILLION FOOT REST & STEP HOLDER	PAGE NO. 53
---	----------------

PLATE NO. : 28 MUDGUARD - FRONT & REAR	PAGE NO. 55
---	----------------

Pictorial Index



PLATE NO. : 29 STAND ASSEMBLY	PAGE NO. 57
----------------------------------	----------------

PLATE NO. : 30 TUBE / TYRE / RIM	PAGE NO. 59
-------------------------------------	----------------

PLATE NO. : 31 FRONT HUB	PAGE NO. 61
-----------------------------	----------------

PLATE NO. : 32 FRONT MASTER CYLINDER	PAGE NO. 63
---	----------------

Pictorial Index

BAJAJ
pulsar DTS-i

PLATE NO. : 33
FRONT DISC BRAKE REAR HUB

PAGE NO.
65

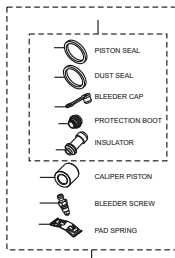
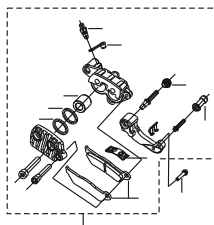


PLATE NO. : 34
REAR HUB

PAGE NO.
67

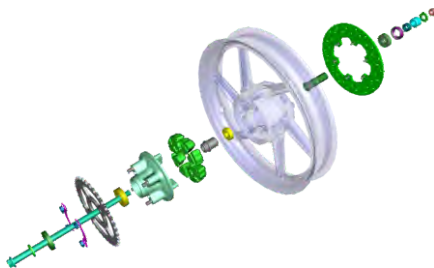



PLATE NO. : 35
REAR DISC BRAKE SYSTEM

PAGE NO.
69



PLATE NO. : 36
REAR DISC BRAKE MASTER CYLINDER

PAGE NO.
71

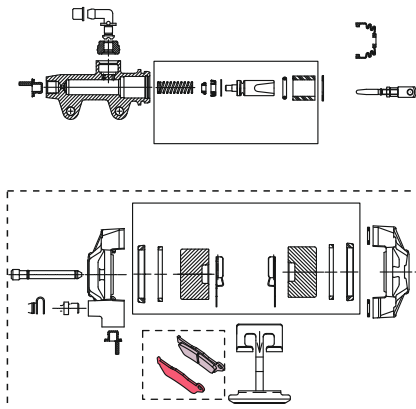

Pictorial Index

BAJAJ
pulsar DTS-i

PLATE NO. : 37
REAR BRAKE PEDAL

PAGE NO.
73

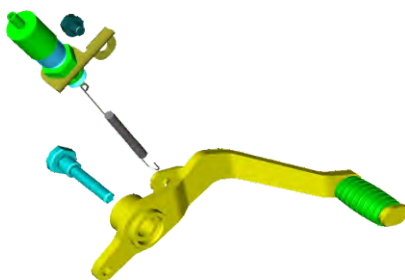


PLATE NO. : 38
HANDLE BAR

PAGE NO.
75

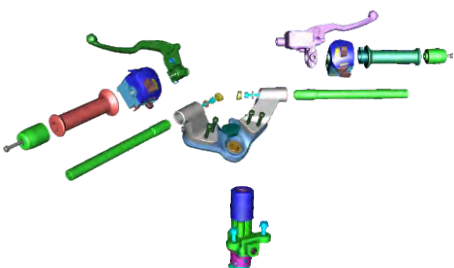


PLATE NO. : 39
FRONT FORK

PAGE NO.
77


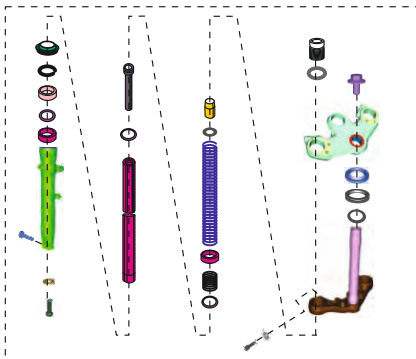


PLATE NO. : 40
CAP TANK & GAUGE FUEL

PAGE NO.
79

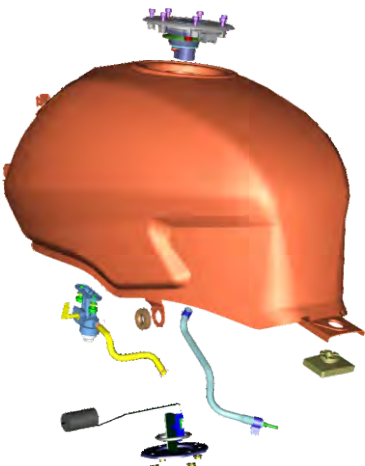

Pictorial Index

BAJAJ
pulsar DTS-i

PLATE NO. : 41
FITTINGS - FUEL TANK, SIDE COVER,
COVER SEAT

PAGE NO.
81

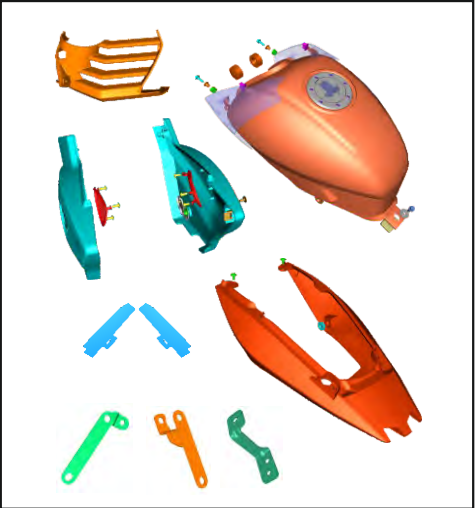


PLATE NO. : 42
METER ASSEMBLY

PAGE NO.
83

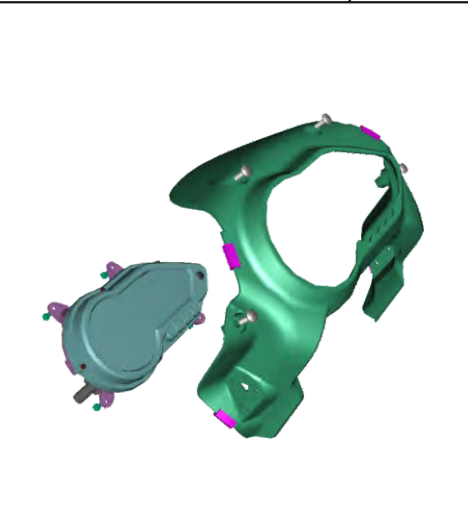


PLATE NO. : 43
CONTROL CABLES

PAGE NO.
85

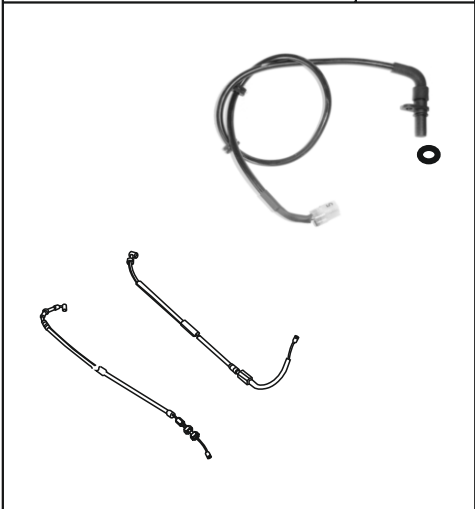


PLATE NO. : 44
CHAIN CASE

PAGE NO.
87



Pictorial Index

BAJAJ
pulsar DTS-i

PLATE NO. : 45
HEAD LAMP & FAIRING

PAGE NO.
89

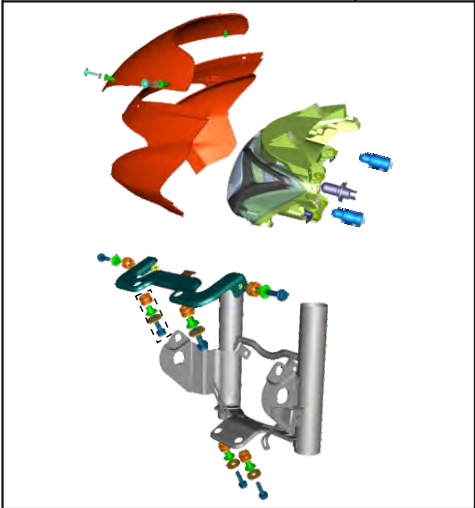


PLATE NO. : 46
INDICATOR LIGHT ASSEMBLY

PAGE NO.
91

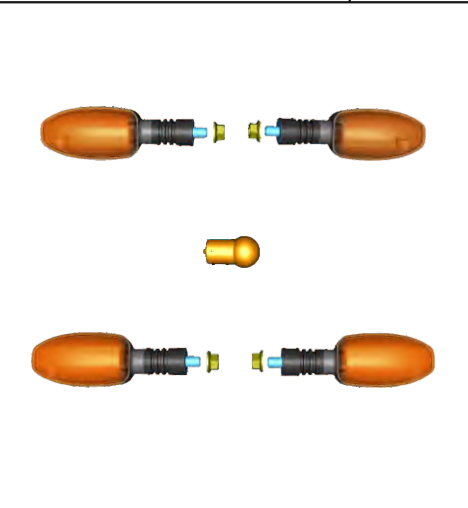


PLATE NO. : 47
TAIL LAMP ASSLY / FR & RR NO. PLATE

PAGE NO.
93



PLATE NO. : 48
TOOL KIT

PAGE NO.
95



Pictorial Index



PLATE NO. : 49 ELECTRICAL EQUIPMENTS	PAGE NO. 97
---	----------------

PLATE NO. : 50 ACCESSORIES / GRAB HANDLE	PAGE NO. 99
---	----------------

PLATE NO. : 51 PAINTED PARTS & DECALS	PAGE NO. 101-103
--	---------------------

PLATE NO. :	PAGE NO.
-------------	----------

Pictorial Index



PLATE NO. :	PAGE NO.
-------------	----------

PLATE NO. :	PAGE NO.
-------------	----------

PLATE NO. :	PAGE NO.
-------------	----------

PLATE NO. :	PAGE NO.
-------------	----------

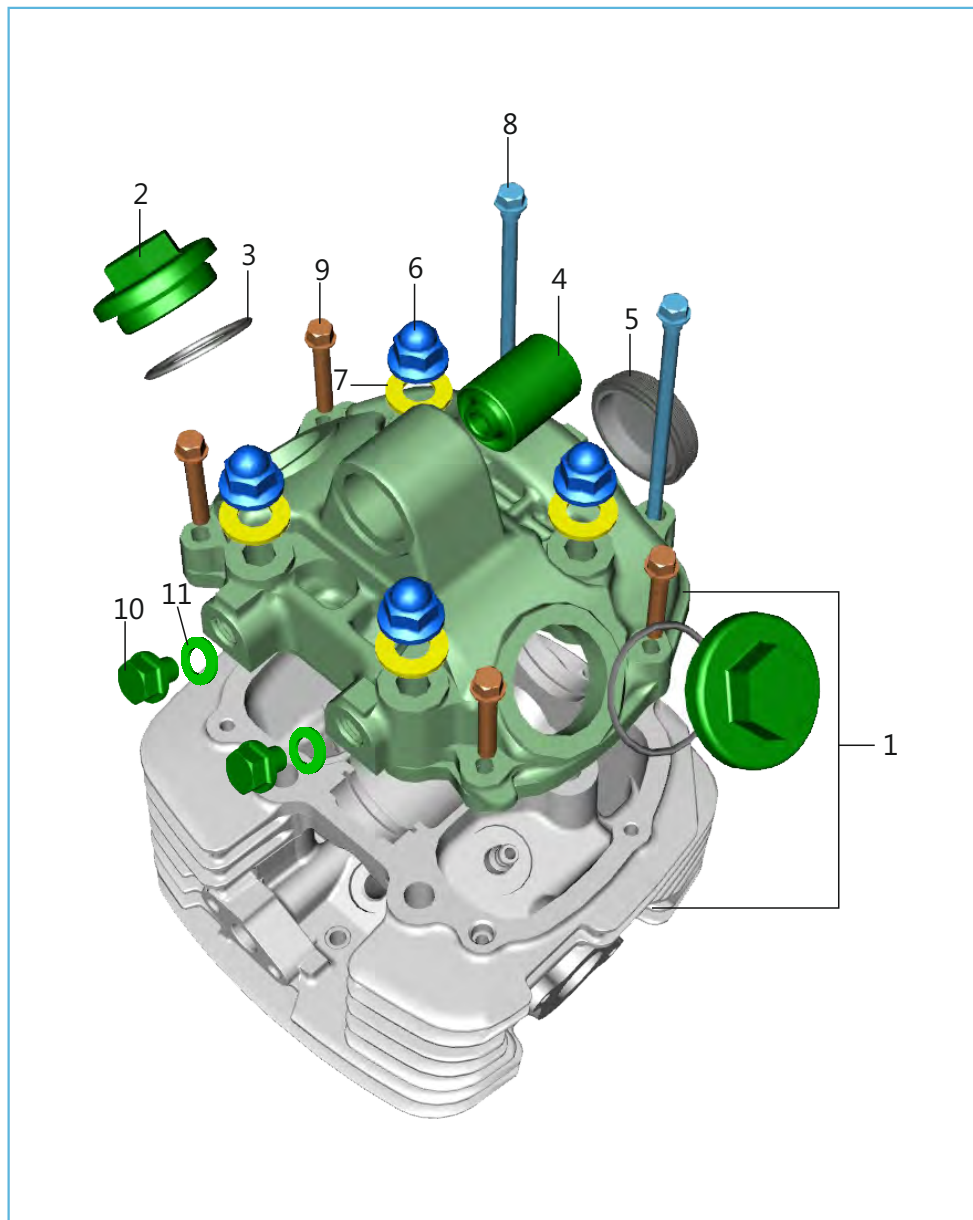


Plate No.: 1

Cover Cylinder Head

No.	Part No.	Description	Qty	Remarks
1	DJ 1017 17	Head Cylinder-Cover Assembly	1	
2	52 JN01 36	Tappet Cover With O-Ring	2	
3	39 2391 21	O-Ring	1	
4	DS 1011 66	Silent Bush (V)	1	
5	DH 1022 01	Camshaft Cap	1	
6	39 2647 15	Domed Cap Nut	4	
7	DS 1010 84	Copper Gasket	4	
8	39 2532 04	Hex. Bolt With Flange	2	
9	KA ED06 35	Bolt-Flange-kae St-d Dia-06 L-35	4	
10	DH 1019 16	Bolt FI-m12x1.5xl 15xbrtxprecoat	2	
11	DG 1014 98	Gasket	2	


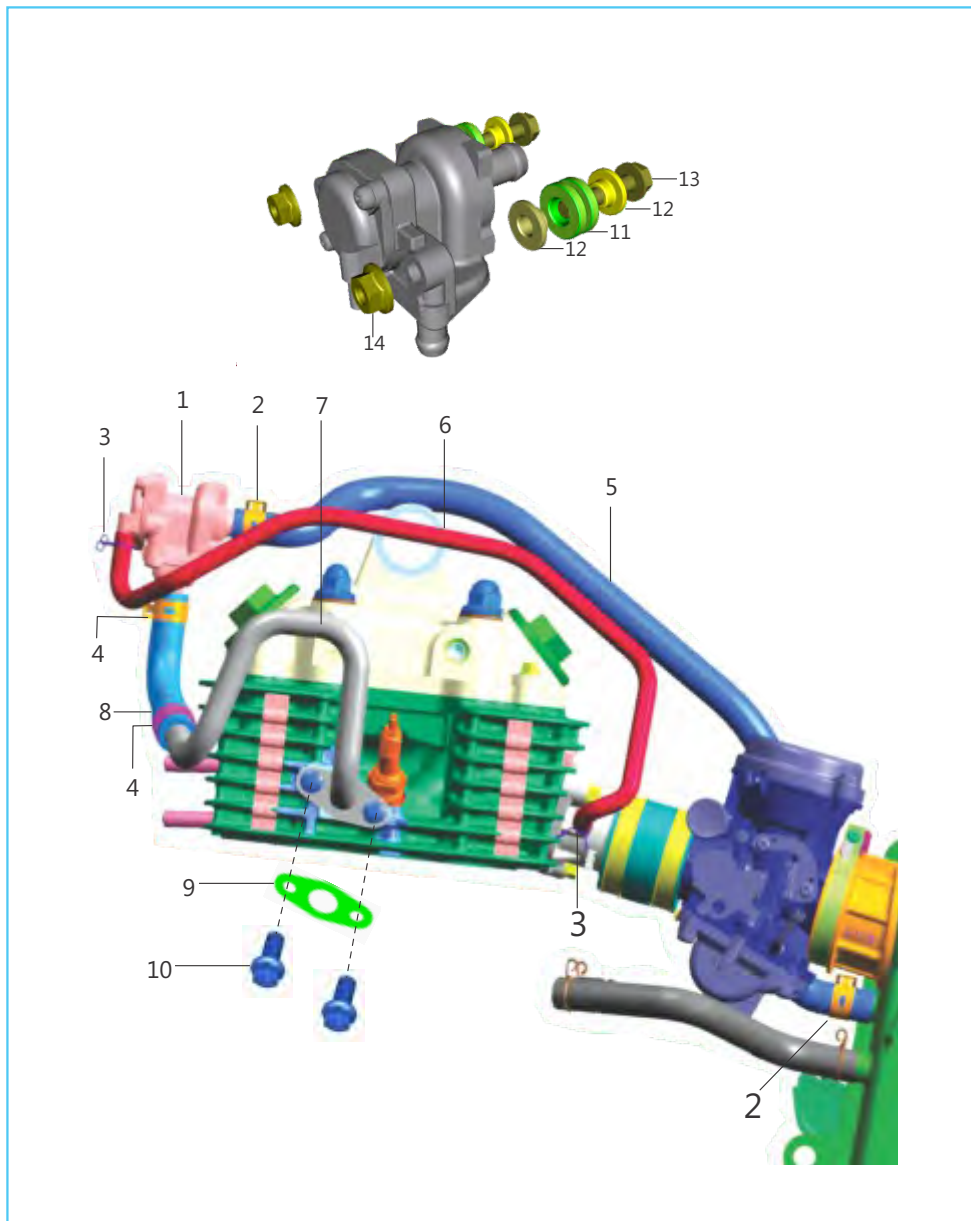


Plate No.: 2

SAI System

No.	Part No.	Description	Qty	Remarks
1	PD 5822 00	SAI Unit	1	
2	JL 5810 66	Clamp SAI Pipe	2	
3	33 1410 08	Clamp	2	
4	JL 5810 65	Clamp Hose SAI	2	
5	DJ 1210 89	Tube SAI Air Filter	1	
6	DK 1210 91	Hose SAI Unit To Manifold	1	
7	DH 1021 74	Metal Pipe With Flange SAI	1	
8	DH 1021 75	Hose SAI Unit To SAI Pipe	1	
9	DH 1021 80	Gasket Metal Pipe With Flange SAI	1	
10	KA EG06 14	Flanged Bolt	2	
11	JD 1138 14	Grommet SAI Unit	2	
12	JD 1138 15	Sleeve SAI Unit	4	
13	KA DF06 30	Bolt Flanged	2	
14	KC GF06 06	Nut Hex Flanged	2	

Cylinder Head

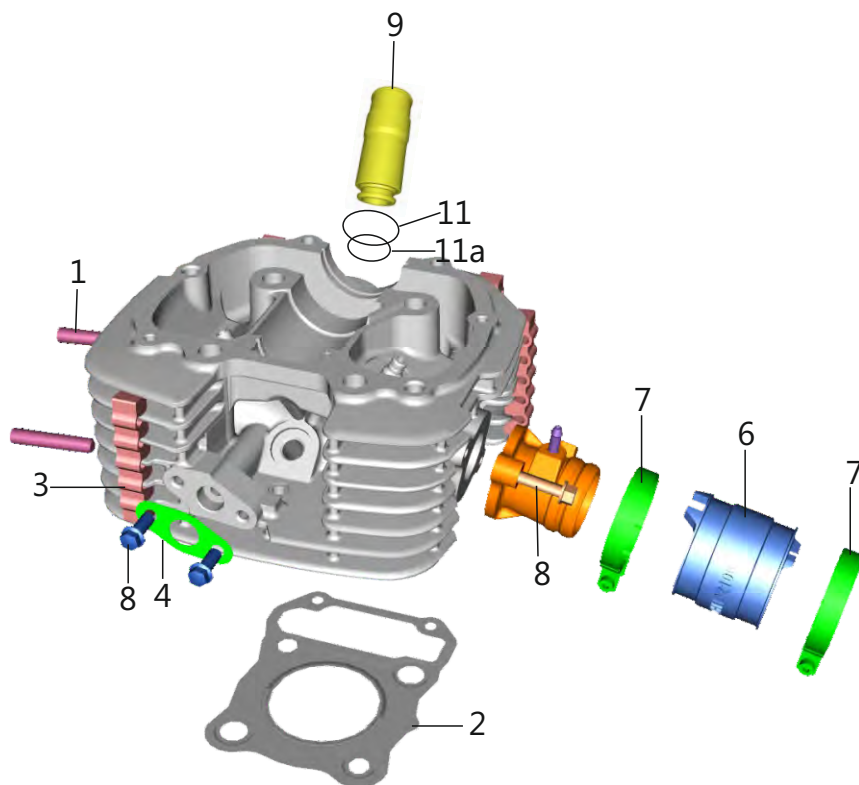

No.	Part No.	Description	Qty	Remarks
1	39 1660 05	Stud (Exhaust)	2	
2	DJ 1010 12	Gasket Cylinder Head	1	
3	DH 1015 08	Damper Cylinder Head	5	
4	DH 1021 80	Gasket	1	
5	39 1283 21	'O' Ring (Intake Pipe)	1	N.I
6	DJ 1210 96	Insulator Integral Manifold	1	
7	DH 1210 38	Clamp For Insulator	2	
8	KA EG06 14	Bolt Flange	2	
9	DJ 1017 38	Sleeve Plug Spark	1	
10	39 2608 01	Grub Screw	1	N.I
11	39 1283 21	O-Ring	1	
11a	KJ AC18 24	O-Ring	1	

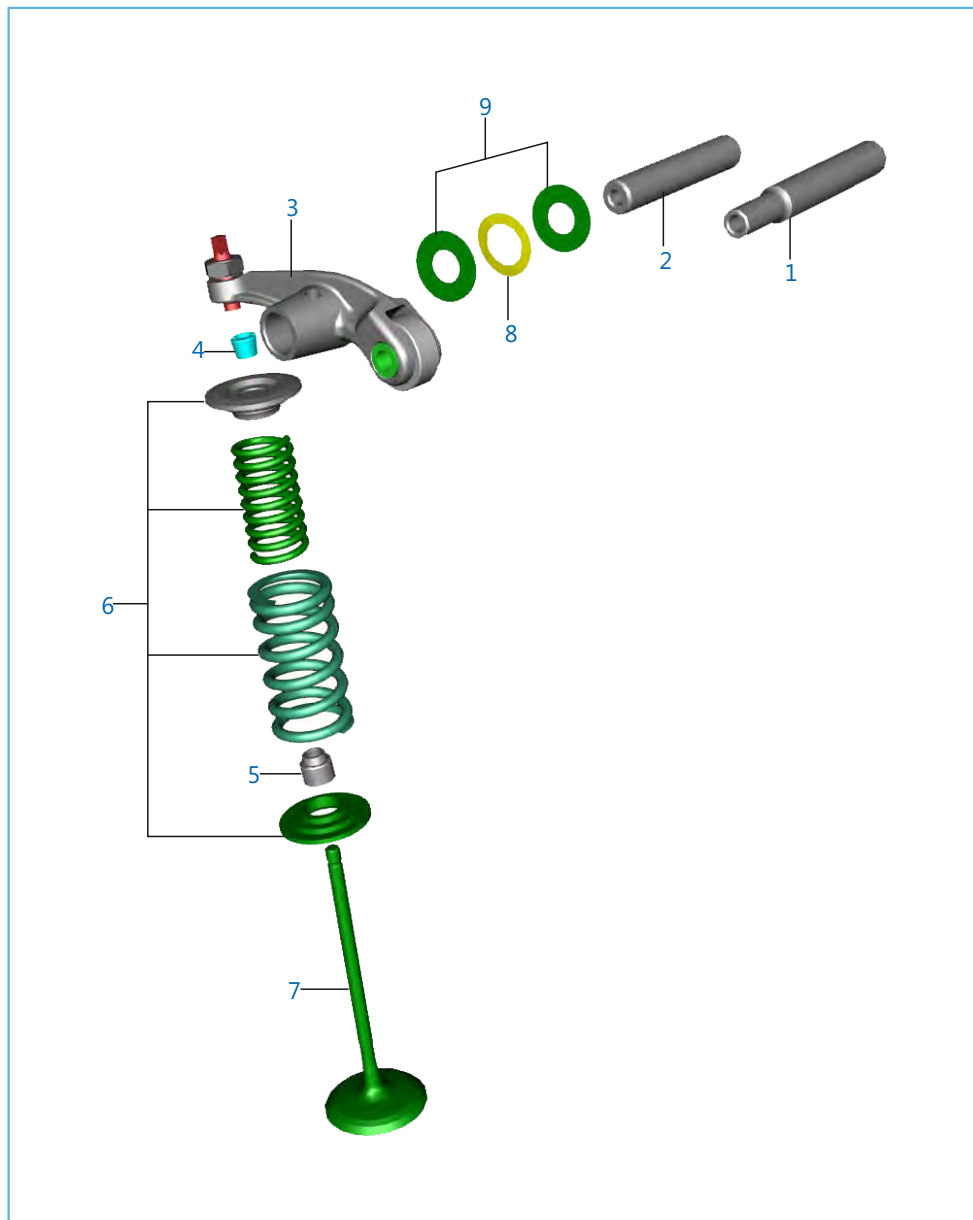


Plate No.: 4

Valve

No.	Part No.	Description	Qty	Remarks
1	DK 1017 48	Rocker Arm Shaft - Intake	1	
2	DK 1017 51	Rocker Arm Shaft - Exhaust	1	
3	DK 1017 55	Rocker Arm Assembly	2	
4	DG 1010 29	Cotter valve	4	
5	39 2017 19	Seal Valve stem	2	
6	DK 1013 26	Valve Repair Kit	1	
7	36 DJ10 04	Valve Kit	1	
8	DH 1012 95	Wave Washer	2	
9	39 2440 11	Plain Washer	4	


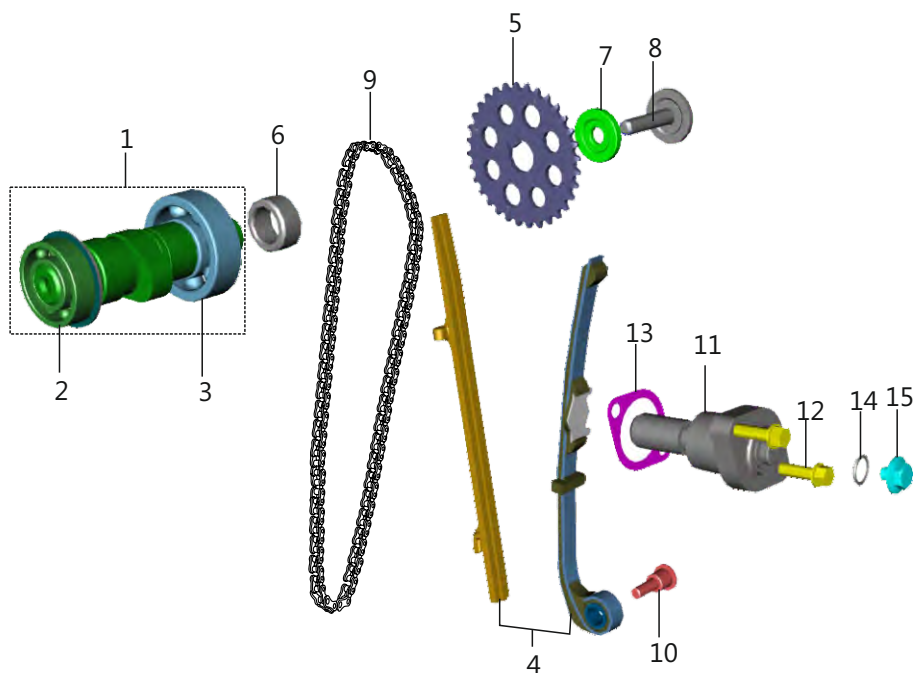


Plate No.: 5


Camshaft / Tensioner

No.	Part No.	Description	Qty	Remarks
1	DJ 1013 73	Camshaft Assembly	1	
2	39 2542 20	Bearing - Ball-15x42x13	1	
3	39 1880 20	Bearing - Ball :- 15 X 32 X 9	1	
4	36 DH40 30	Guide Chain Kit	1	
5	PD 5112 29	Sprocket Cam Driven	1	
6	DH 1014 12	Collar Cam Sprocket	1	
7	DH 1010 48	Special Camshaft Washer	1	
8	DH 1021 25	Hex. Soc. Head Cap Bolt	1	
9	DH 1010 50	Chain - Cam :- Did 25 - 98 Li	1	
10	DH 1013 92	Cam Chain Tensioner Pivot Bolt	1	
11	JC 1010 34	Tensioner Assly.	1	
12	39 1673 04	Hex Bolt / Flange	2	
13	CS 1011 28	Tensioner Assly. Gasket	1	
14	39 2669 21	Ring 'O' Tension Assly.	1	
15	DD 1010 62	Bolt	1	

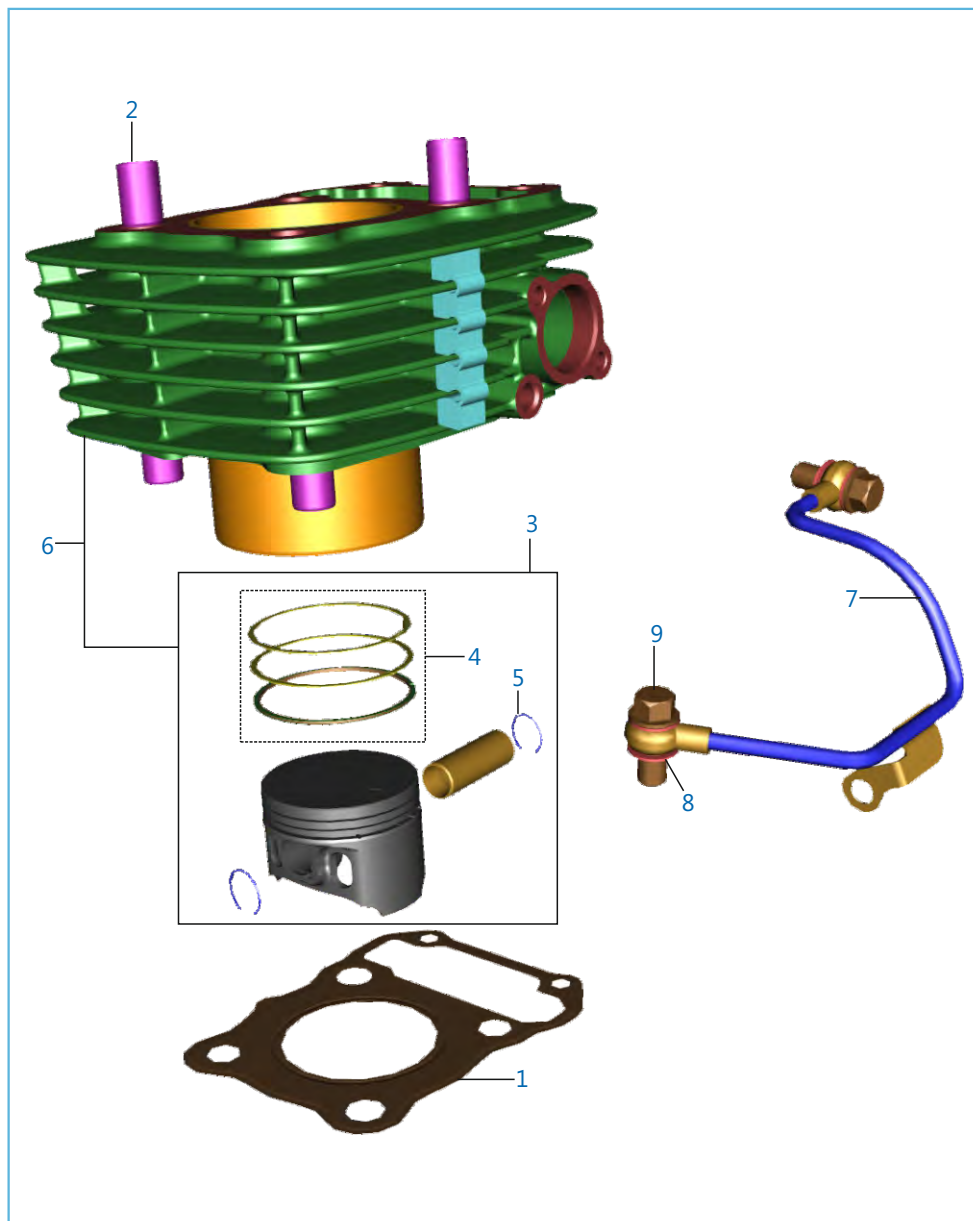

Cylinder and Piston

No.	Part No.	Description	Qty	Remarks
1	DK 1010 63	Gasket Cylinder Block	1	
2	39 2181 06	Pin Dowel	4	
3	DJ 1011 58	Piston Assy. Std.	1	
4	DK 1810 12	Ring Set Piston	1	
5	39 2132 17	Ring Snap	2	
6	DJ 1013 71	Cylinder Block / Piston Assy.	1	
7	DK 1015 92	Assembly Oil Pipe	1	
8	31 1210 06	Gasket	4	
9	DD 1210 07	Bolt	2	

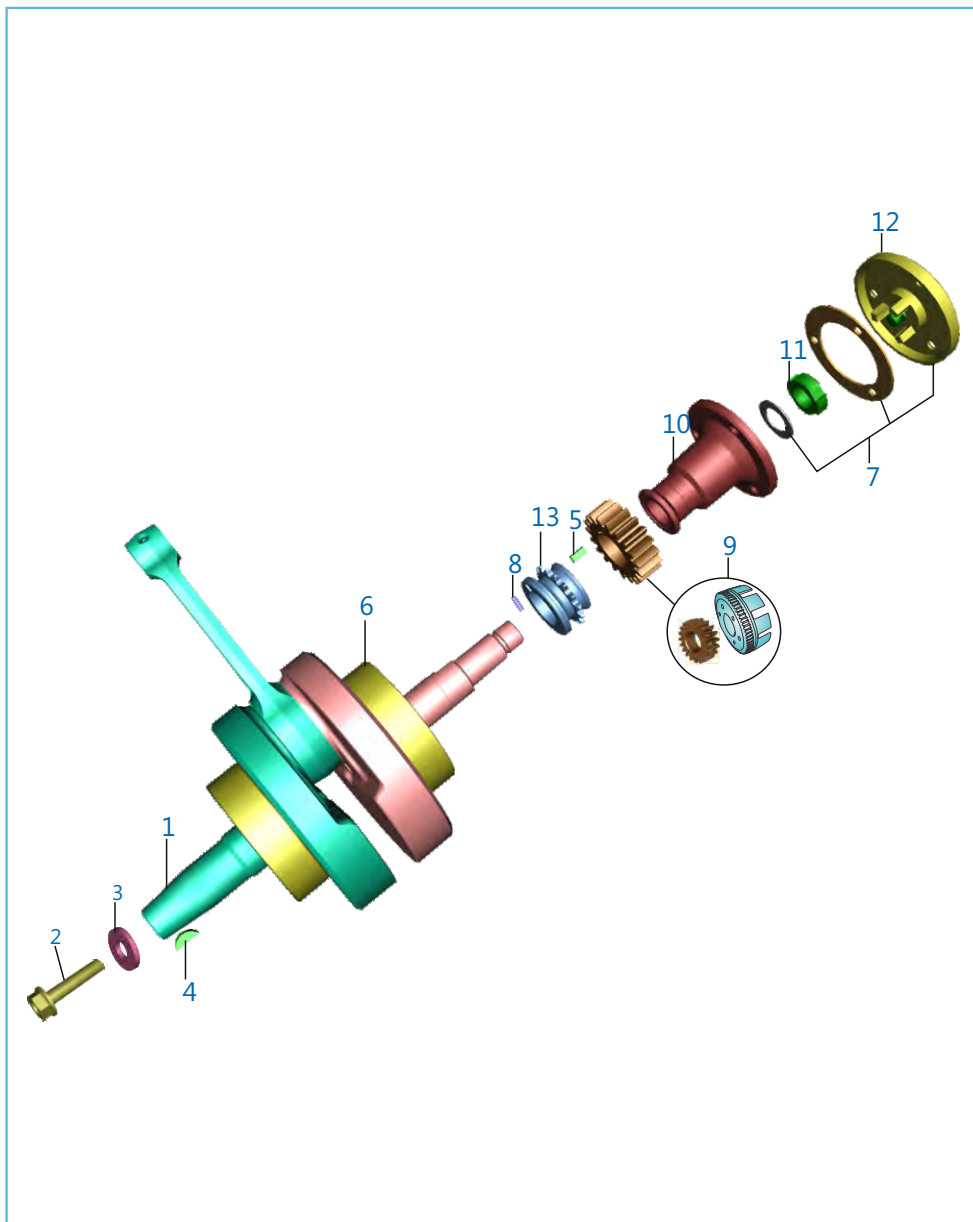

Crankshaft

No.	Part No.	Description	Qty	Remarks
1	JC 1010 01	Crankshaft Assly. Comp.	1	N.I
2	DH 1013 96	Bolt	1	
3	39 2165 11	Plain washer	1	
4	31 1011 73	Key woodruff	1	
5	DS 1011 54	Parallel key	1	
6	39 1931 20	Bearing Ball	2	
7	36 DK00 07	Kit Centrifugal Over Screw Oil Filter	1	
8	39 2203 07	Parallel Pin	1	
9	36 DK00 38	Kit Gear Primary Drive & Driven	1	
10	DH 1010 64	Body Centrifugal Oil Filter	1	
11	DH 1011 95	Nut Primary Drive	1	
12	DH 1013 55	Cover Complete Centrifugal Oil Filter	1	
13	PD 5310 29	Sprocket Crankshaft	1	

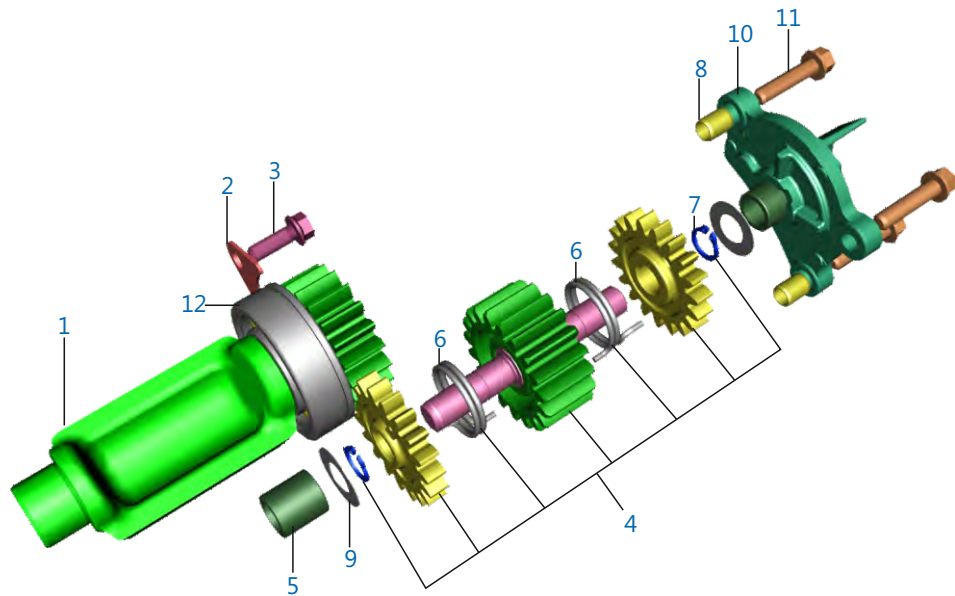


Plate No.: 8

Balancer & Balancer Idler Gear

No.	Part No.	Description	Qty	Remarks
1	DJ 1016 89	Body Balancer Assly.	1	
2	DH 1010 72	Bearing Stopper	1	
3	DH 1013 85	Bolt Stopper	1	
4	PD 5312 29	Assembly Gear Balancer Idler	1	
5	39 2152 20	Needle Roller bearing	2	
6	DH 1014 24	Spring - Torsion :- Balancer	2	
7	KE AB10 10	Circlip External	2	
8	39 1686 06	Dowel Pin	2	
9	39 1620 11	Spring Steel Washer	2	
10	52 DH01 77	Balancer Idler Holder With Bearing	1	
11	KA ED06 25	Bolt-Flange-kae St-d Dia-06 L-25	3	
12	59 2000 28	Bearing Balancer	1	

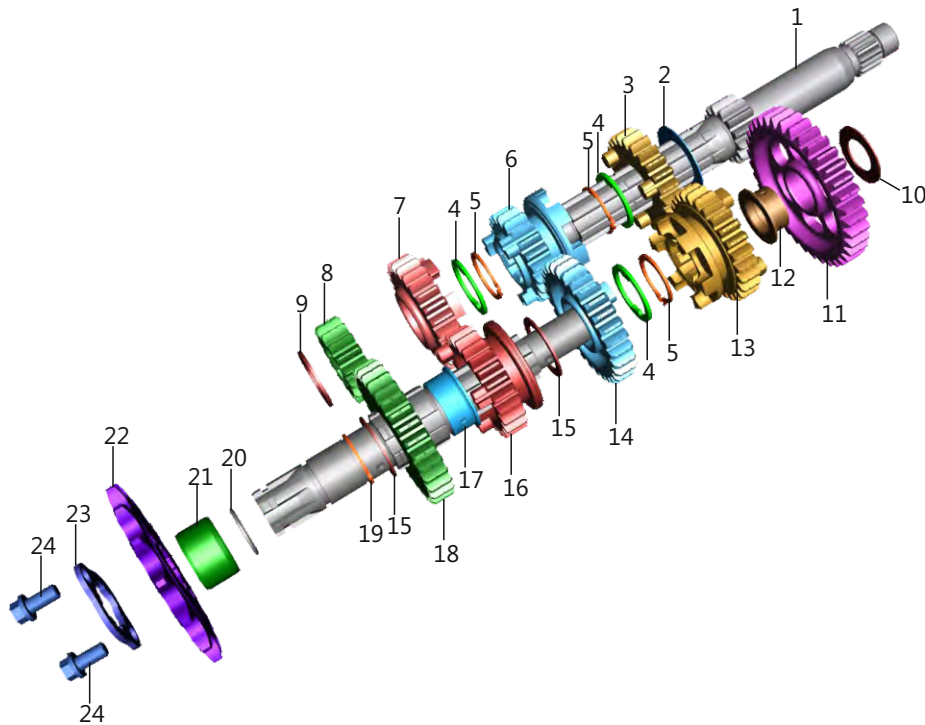


Plate No.: 9

Transmission

No.	Part No.	Description	Qty	Remarks
1	DK 1014 71	Shaft Input Transmission	1	
2	39 2158 11	Plain Washer	1	
3	DK 1011 03	Gear 4th Drive	1	
4	DH 1010 79	Washer Spline	3	
5	DH 1012 35	Circlip Ext	4	
6	DK 1011 02	Gear 3rd Drive	1	
7	DK 1011 04	Gear 5th Drive	1	
8	DH 1010 84	Gear 2nd Drive	1	
9	39 2160 11	Plain Washer	1	
10	39 2159 11	Plain Washer	1	
11	DK 1017 17	Gera 1st Driven	1	
12	DH 1011 11	Bush 1st Driven	1	
13	DK 1017 18	Gear 4th Driven	1	
14	DK 1011 05	Gear 3rd Driven	1	
15	39 2159 11	Washer Plain	2	
16	DK 1017 21	Gear 5th Driven	1	
17	DH 1013 19	Bush 2nd Driven	1	
18	DK 1017 19	Gear 2nd Driven	1	
19	DK 1011 44	Shaft Output Transmission	1	
20	DK 1013 52	O-Ring sprocket Collar	1	
21	DK 1012 45	Collar Sprocket	1	
22	DV 1010 48	Sprocket Drive	1	
23	DJ 1013 12	Plate - Drive Sprocket	1	
24	39 1062 04	Bolt Flanged Small	2	

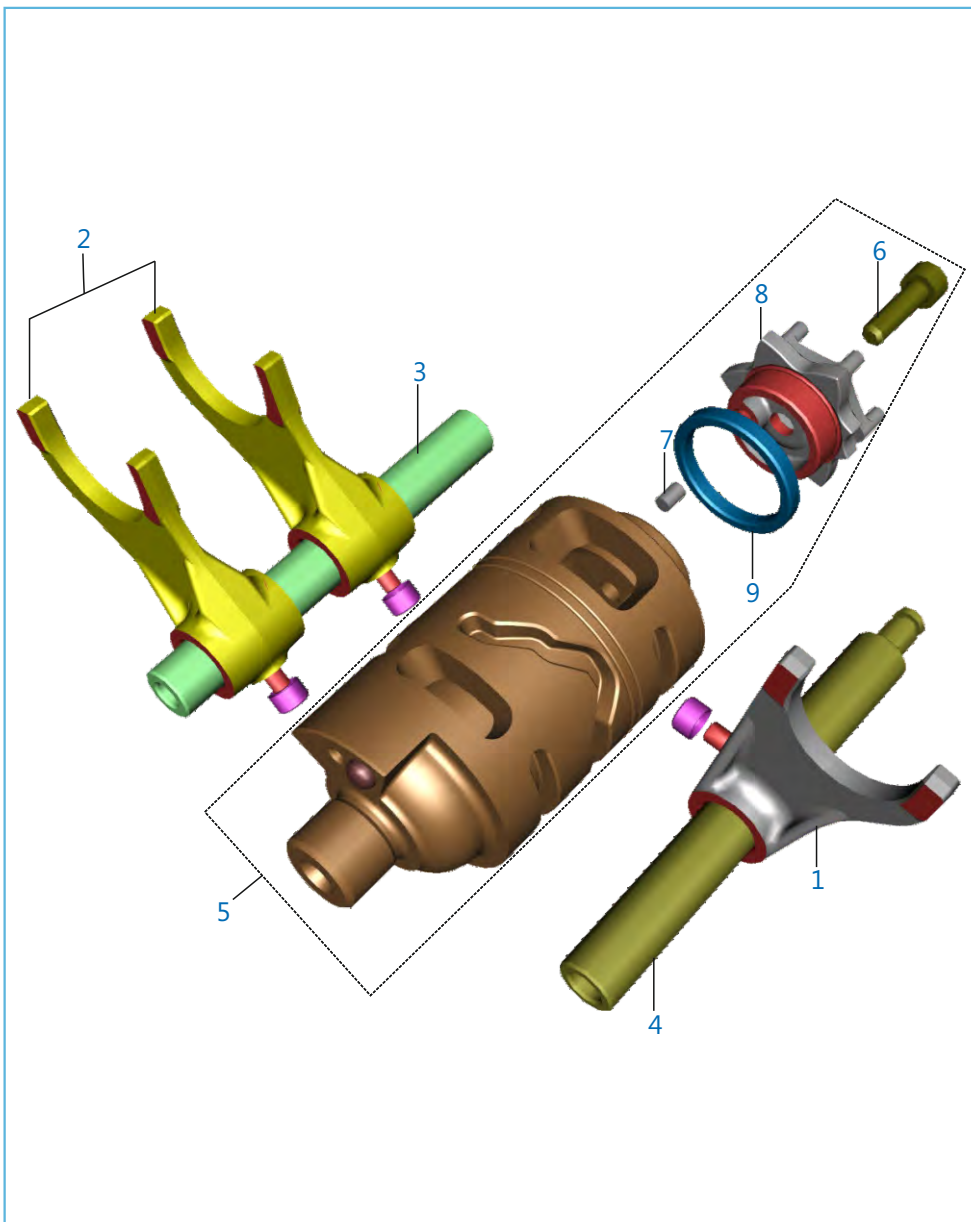


Plate No.: 10

Change Drum / Shaft Fork

No.	Part No.	Description	Qty	Remarks
1	DK 1011 59	Fork Gear Shift Input	1	
2	DK 1011 60	Fork Gear Shift Output	1	
3	DH 1011 46	Shift Gear Shift Fork	1	
4	DH 1014 93	Shaft Gear Fork Shift	1	
5	DK 1017 32	Drum Comp. Gear Shift	1	
6	39 1197 04	Bolt Socket	1	
7	39 2606 07	Parallel Pin	1	
8	DH 1021 89	Guide Gear Shift	1	
9	DH 1014 96	Spacer	1	
10	DK 1011 35	Bush Fork Gear Shift	3	

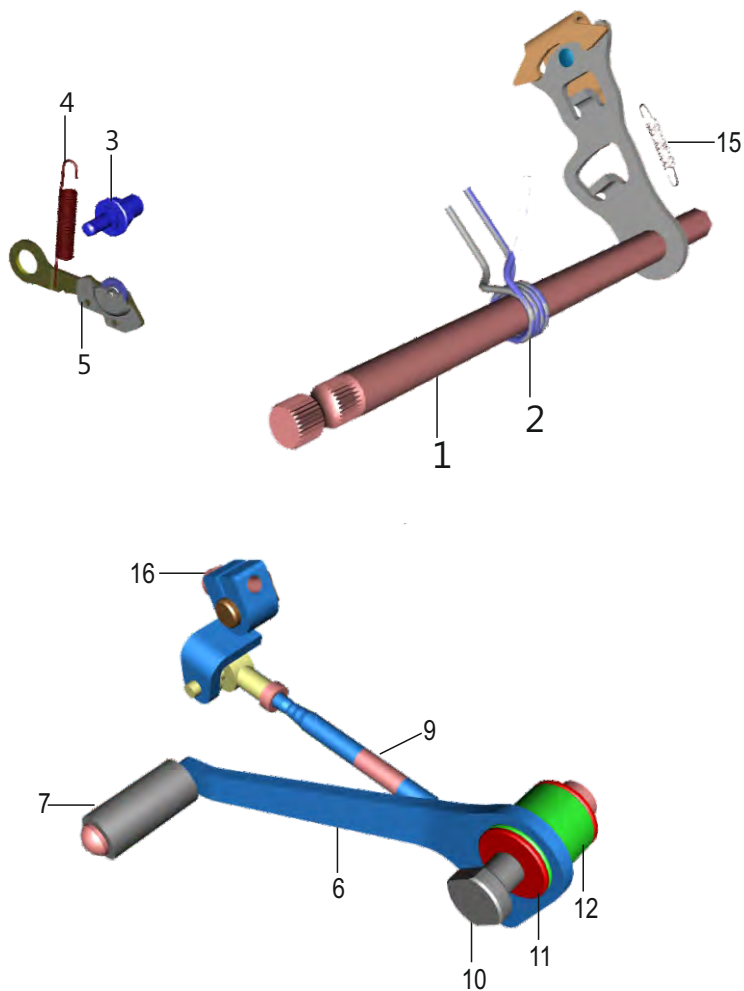


Plate No.: 11

Gear Change Mechanism

No.	Part No.	Description	Qty	Remarks
1	DK 1017 33	Assly. Lever Shaft	1	
2	DK 1017 22	Spring Shift Return	1	
3	DH 1013 93	Bolt Gear shift Drum Stopper	1	
4	DK 1012 53	Spring Stopper Drum	1	
5	DK 1017 25	Stopper Drum	1	
6	DK 1011 82	Assembly Lever Complete Change	1	
7	DT 5612 05	Damper	1	
8	39 1902 04	Bolt - Flange :- M6	1	N.I.
9	DK 1011 80	Assembly Tie Rod	1	
10	DK 1011 86	Bolt Pivot Lever Change	1	
11	DK 1011 85	Washer Pivot Bolt	2	
12	DK 1011 87	Collar Pivot Bolt	1	
13	39 1998 19	Seal - Oil	2	N.I.
14	39 2383 15	Nut - Hexagon With Flange - M8	1	N.I.
15	DH 1017 14	Spring Arm Reset	1	N.I.
16	DK 1011 77	Assly. Lever Change Arm	1	

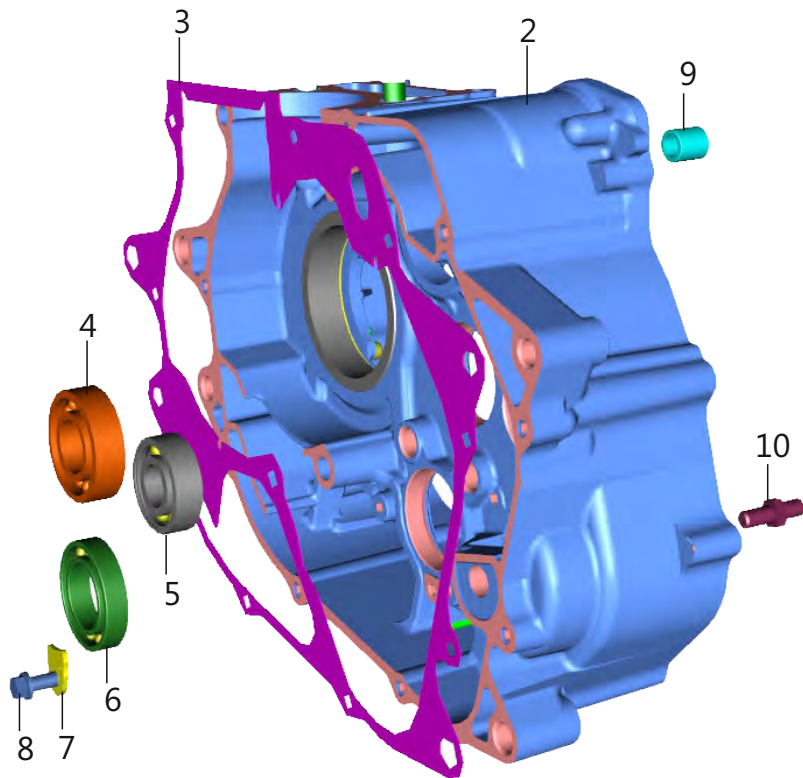



Plate No.: 12

Engine Assy. & Crankcase RH

No.	Part No.	Description	Qty	Remarks
1	DJ 1017 43	Engine Assembly	1	N.I
2	52 JC02 09	Crankcase RH (JC101029)	1	
3	DH 1018 96	Gasket Crankcase	1	
4	KP AF60 04	Bearing Ball-Ord Clearance & Hn3	1	
5	59 2000 06	Bearing Ball (For Output Shaft)	1	
6	39 2601 20	Ball Bearing	1	
7	DH 1014 87	Plate Stopper	1	
8	AA 1014 37	Bolt Flanged Small	1	
9	39 2152 20	Needle Roller Bearing	1	
10	DH 1013 94	Bolt Shift Change	1	

Crankcase LH

No.	Part No.	Description	Qty	Remarks
1	52 JC02 10	Crankcase LH (Jc101045)	1	
2	59 0500 08	Stud M10	2	
3	39 0752 01	Screw	3	
4	DK 1010 94	Guide Starter Assly.	1	
5	59 2100 06	O Ring	1	
6	DK 1010 97	Damper Crankshaft	1	
7	39 2188 19	Oil Seal	1	
8	DH 1015 81	Plate Starter Clutch Gear Return	1	
9	DH 1013 85	Bolt Flange	1	
10	DG 1014 98	Gasket	1	
11	DU 1012 23	Plug Drain (Magnetic)	1	
12	KJ AB10 19	O-Ring	1	
13	DK 1013 80	Neutral Switch Complete	1	
14	DH 1013 85	Bolt Flange	1	
15	39 2190 19	Oil Seal	1	
16	39 1677 04	Flange Bolt	8	
17	39 2583 20	Bearing Ball	1	
18	39 2603 20	Bearing Ball	1	
19	59 2000 29	Bearing Ball Balancer	1	
20	DH 1012 03	Breather Pipe	1	
21	DG 1014 56	Oil Seal	1	
22	DH 1017 19	Rubber Tube	1	
23	59 2000 07	Bearing - Needle Roller(30*37*16)	1	

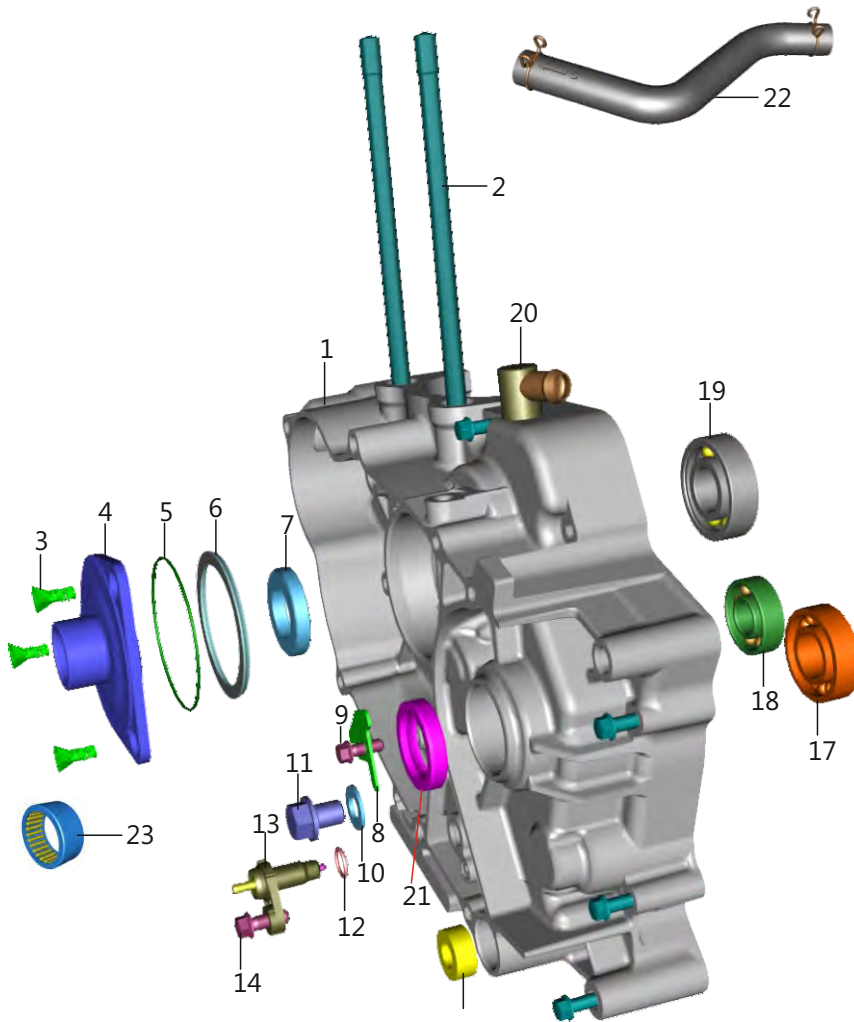

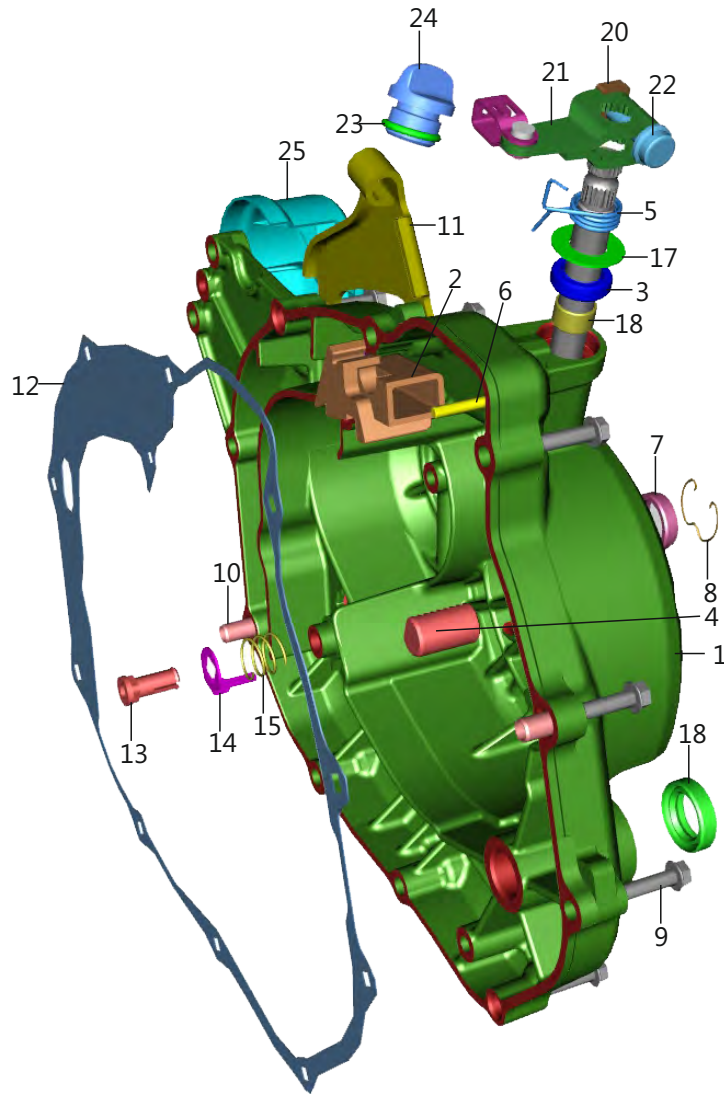


Plate No.: 14

Cover RH

No.	Part No.	Description	Qty	Remarks
1	36 PD00 12	Kit Assly. Clutch Cover-A102	1	
2	DH 1011 97	Grommet Breather	1	
3	39 1041 19	Oil Seal	1	
4	DH 1011 41	Rack	1	
5	DH 1011 42	Shaft Clutch Release	1	
6	DK 1012 51	Parallel pin	1	
7	DG 1014 18	Gauge	1	
8	DS 1012 15	Wire Circlip	1	
9	LA E000 18	Bolt Flanged M6x1x30l-precoated	10	
10	39 0999 06	Pin Dowel	2	
11	PD 5412 80	Bracket Cable Clutch	1	
12	DH 1011 54	Gasket Cover RH	1	
13	DK 1014 80	Plunger Oil	1	
14	DH 1210 11	Plate Plunger Oil	1	
15	DH 1210 12	Spring Joint 'A'	1	
16	DH 1015 44	Spring Torsion Clutch Lever	1	
17	39 2443 11	Washer	1	
18	39 1041 19	Seal Oil	4	
19	DK 1017 38	Decal Clutch Cover	1	
20	DH 1012 75	Nut Special	1	
21	PD 5412 79	Lever Assembly Clutch	1	
22	KA ED06 25	Bolt-Flange-kae St-d Dia-06 L-25	1	
23	DH 1011 52	O-Ring	1	
24	DS 1010 71	Cap Oil Filter	1	
25	56 DJ4E 1Y	Cover Motor Starter (DH102309)	1	


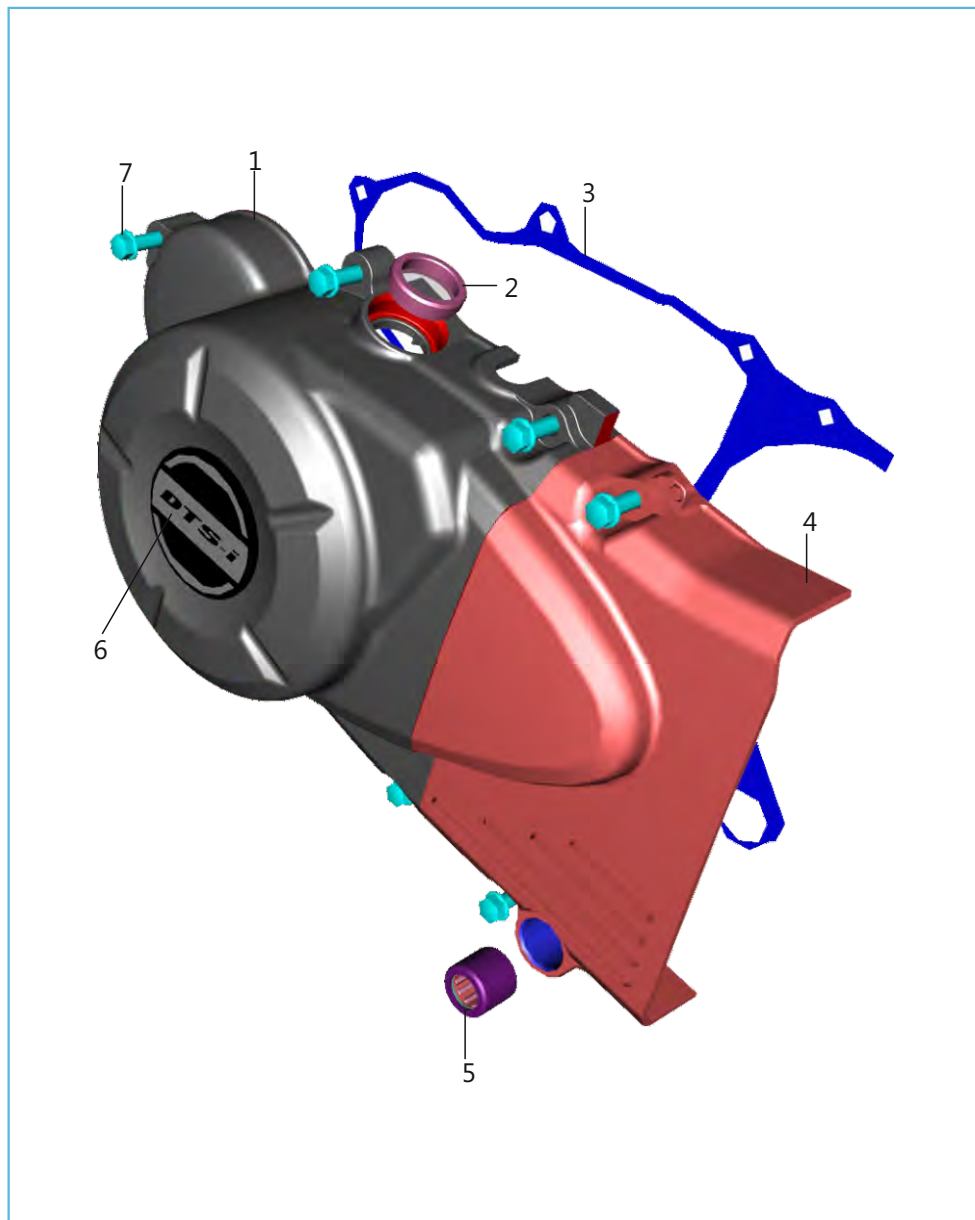


Plate No.: 15

Cover Magneto

No.	Part No.	Description	Qty	Remarks
1	52 DH13 17	Magneto Cover	1	N.I.
2	DG 1014 18	Gauge	1	
3	DV 1010 42	Gasket	1	
4	56 DJ3Z 1Y	Cover LH Rr Grey Matte Slate	1	
5	AP 1010 43	Bearing Needle Bendix	1	
6	DK 1017 38	Decal Cover RH	1	
7	LA E000 18	Bolt Flanged M6x1x30l-precoated	7	
8	DJ 1612 28	Label Gear Shift-black	1	


Clutch Assembly

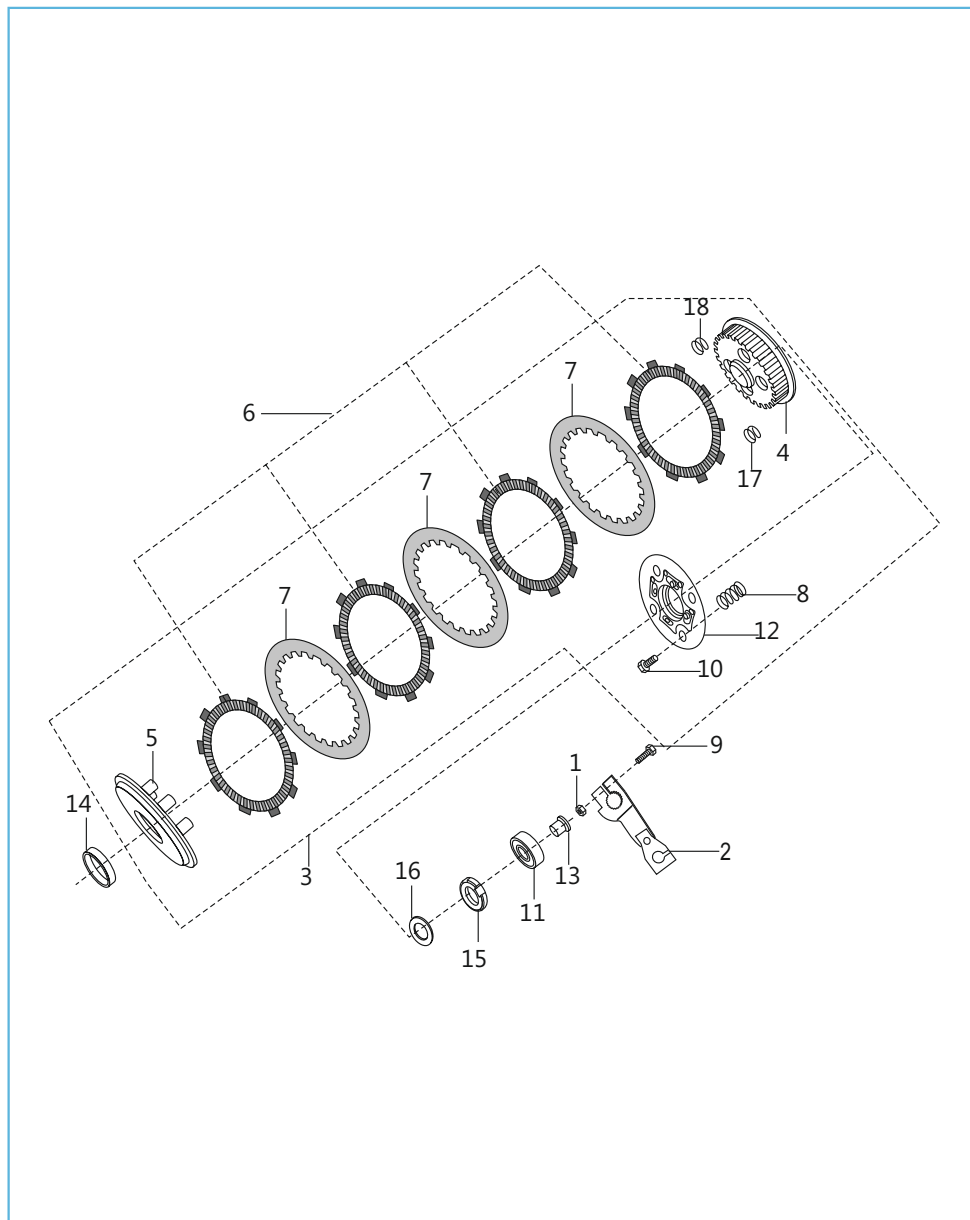


No.	Part No.	Description	Qty	Remarks
1	DH 1012 75	Special Nut	1	
2	PD 5412 79	Lever Assembly Clutch	1	
3	DJ 1013 50	Clutch Plate Assly. Complete	1	
4	PD 5514 21	Clutch Center	1	
5	DK 1015 69	Plate Clutch Pressure	1	
6	36 PD00 30	Clutch Friction Plate Kit	1	
7	PD 5514 39	Plate Clutch Pressure Planished	5	
8	PD 5514 27	Spring Clutch Capacity	5	
9	KA ED06 25	Bolt-Flange-kae St-d Dia-06 L-25	1	
10	DK 1015 74	Bolt	5	
11	39 1990 20	Bearing - Needle	2	
12	DK 1015 73	Holder Clutch	1	
13	DK 1010 72	Rod Clutch Lifter	1	
14	DK 1011 26	Spacer Clutch	1	
15	DH 1016 48	Nut Primary Drive Lock	1	
16	39 2200 11	Washer Primary Drive Gear	1	
17	DK 1015 70	Seat Judder Spring	2	
18	DK 1015 71	Spring Judder	2	

Carburettor

No.	Part No.	Description	Qty	Remarks
1	DJ 1210 94	Carburettor Assly. Without Evap	1	
2	DH 1211 71	Vacuum Piston Kit	1	
3	DH 1211 69	Screw Pilot (k1ug4.5)	1	
4	DJ 1210 44	Jet Needle (JN)	1	
5	DJ 1210 53	"O" Ring	1	
6	DJ 1210 54	Screw	2	
7	DH 1211 62	Float Assly. (k1ug4.5)	1	
8	DJ 1210 56	Jet Holder Kit	1	
9	DH 2010 65	Magnet Assembly	1	
10	DJ 1210 70	Reed Switch Assembly	1	
11	39 1780 01	Pan Head Screw	2	
12	DH 1210 93	Needle Assembly	1	
13	DH 1211 68	Idling Screw Kit	1	
14	DJ 1210 59	Set Plunger Assembly	1	

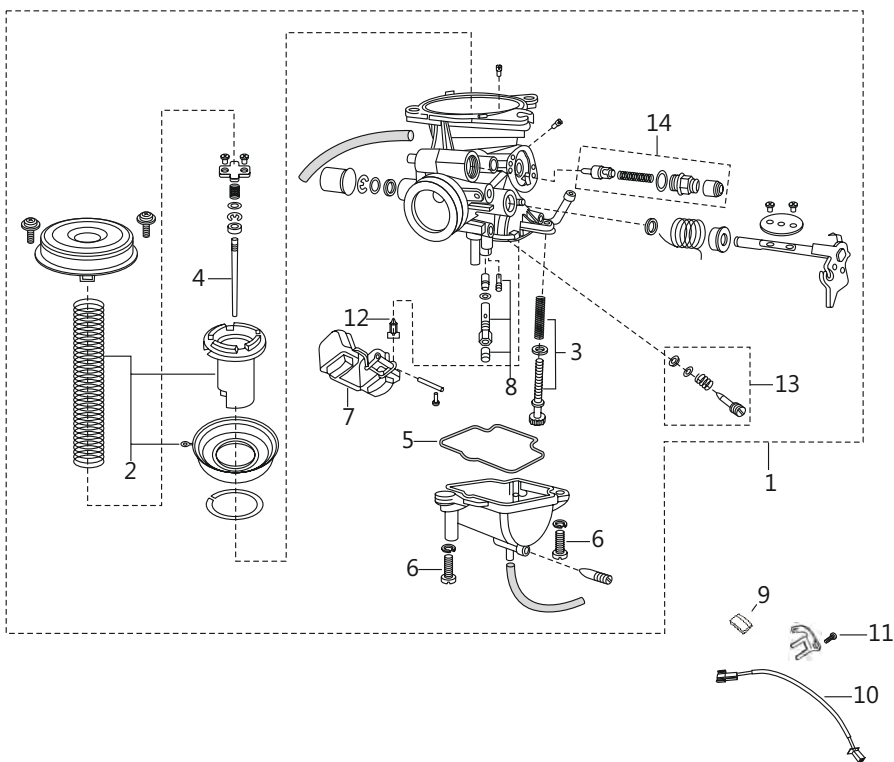

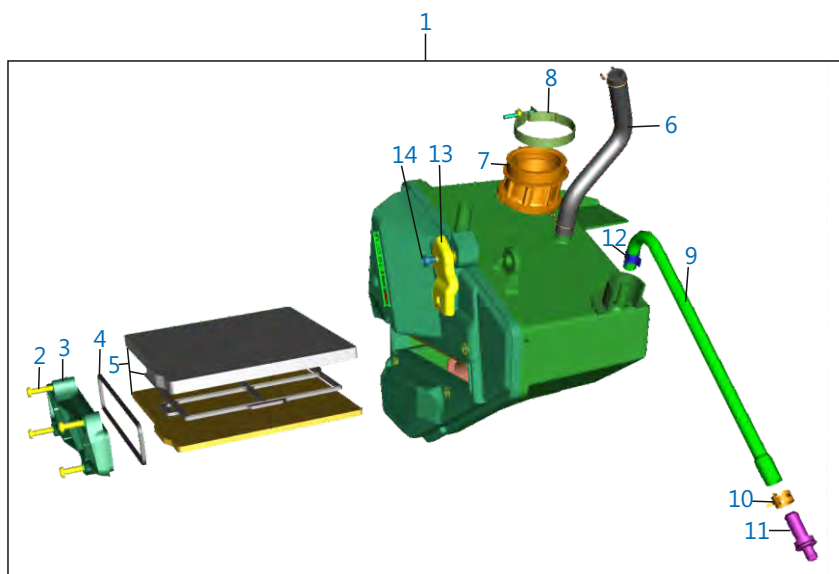



Air Cleaner Complete

No.	Part No.	Description	Qty	Remarks
1	DJ 1210 87	Assly. Air Filter for SAI	1	N.I.
2	KB BA05 25	Screw Pan Cross	5	
3	DJ 1210 82	Cartridge Assembly	1	
4	DK 1210 15	O Ring	1	
5	DK 1210 09	Assembly Element Filter	1	
6	DH 1017 19	Rubber Tube	1	
7	DJ 1210 81	Tube Connecting	1	
8	DH 1211 90	Clip Band	1	
9	DS 1211 17	Tube Drain	1	
10	DG 1210 02	Clamp	1	
11	DS 1211 26	Plug	1	
12	AA 1410 48	Spring Band Clip	1	
13	DH 1614 16	Bracket Lock	1	
14	39 1780 01	Screw Pan M5	1	
15	DS 1211 16	Duct	1	

Silencer Assembly

No.	Part No.	Description	Qty	Remarks
1	DJ 1017 45	Silencer Assembly	1	
2	DH 1023 49	Shield Muffler	1	
3	JW 5910 28	Screw Truss	2	
4	DJ 1010 64	Gasket Exhaust	1	
5	39 1970 15	Flanged Nut	2	
6	DK 1013 14	Bolt socket Head	1	
7	39 0201 11	Washer	1	
8	DH 1611 55	Damper Silencer	1	
9	DD 1610 71	U Nut	1	
10	DG 1611 24	Damper (main Stand)	1	
11	DH 1023 51	Shield Wire	1	
12	DH 1016 07	Truss Screw	4	
13	JB 5910 68	Washer Nylon Shield	2	

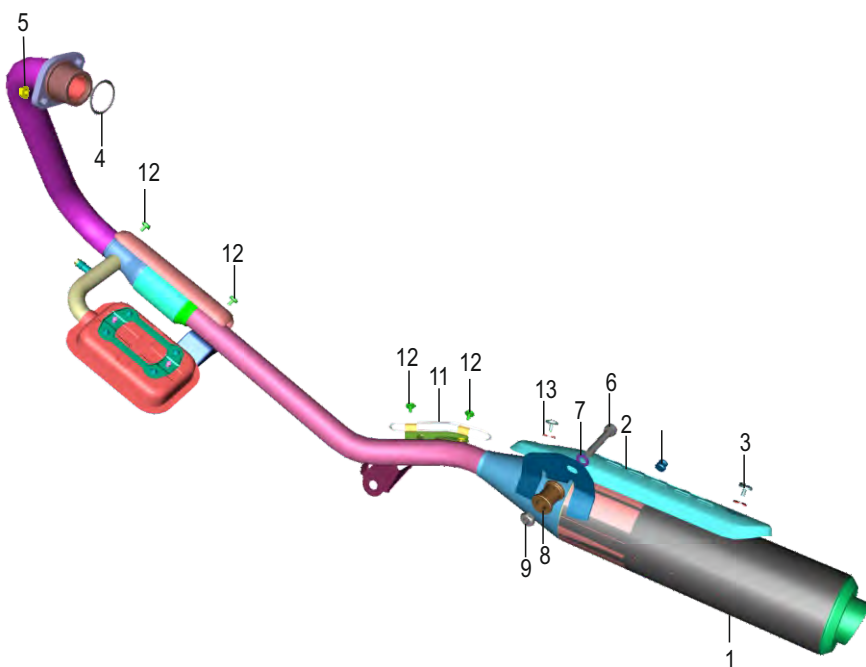

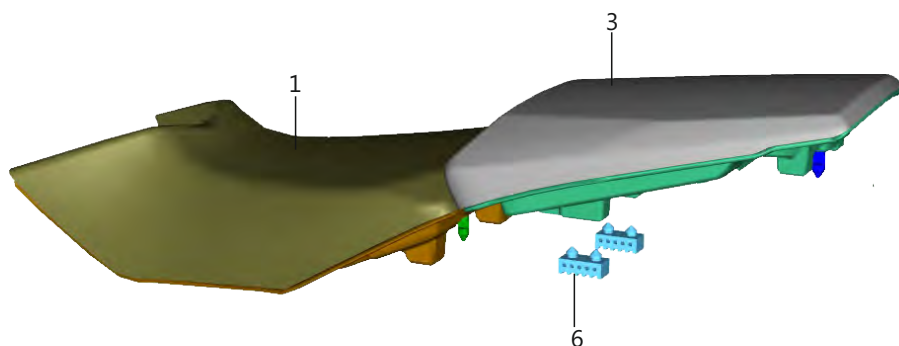

Seat Assembly / Seat Lock

No.	Part No.	Description	Qty	Remarks
1	DK 2110 12	Seat Assly. Comp. Front	1	
2	DH 1610 46	Lock Assly. Seat Front	1	N.I
3	DK 2110 14	Seat Assly. Comp Rear	1	
4	DK 2110 08	Lock Assly. Seat Rear	1	N.I
5	39 1902 04	Bolt Flange	4	N.I
6	DS 2110 04	Damper	2	

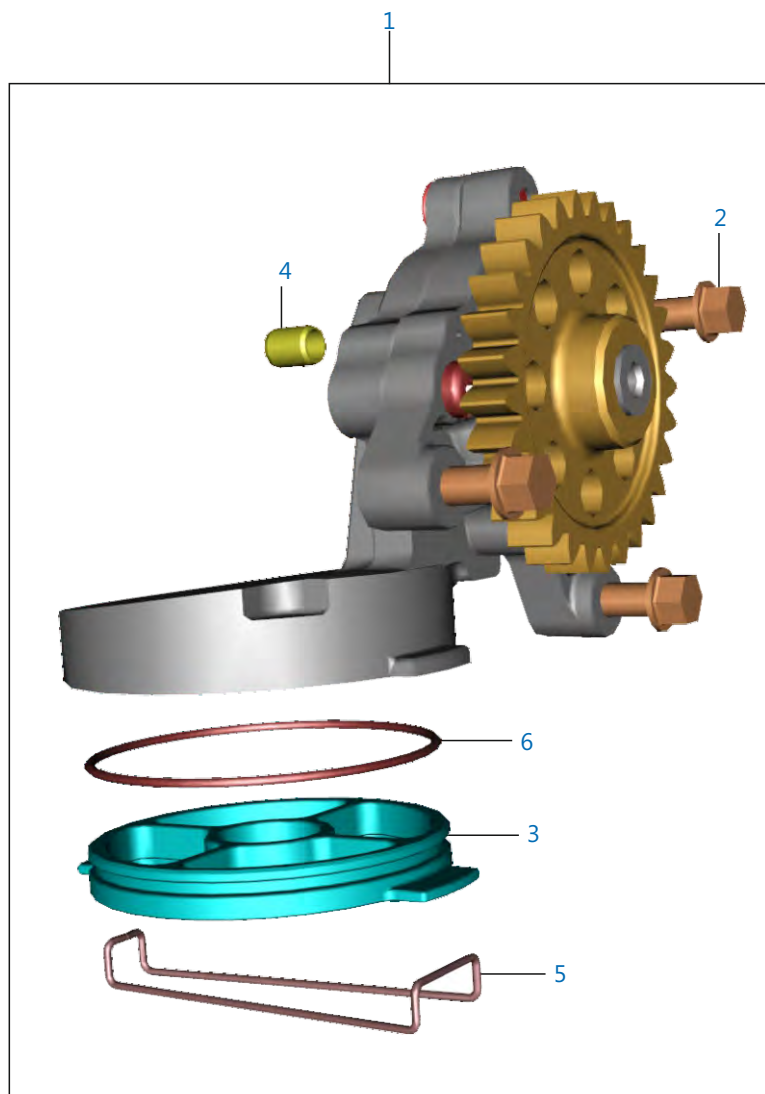


Plate No.: 21

Oil Pump

No.	Part No.	Description	Qty	Remarks
1	52 DH01 69	Oil Pump Assly.	1	
2	JA 5814 06	Bolt Flange M6x1x25l	3	
3	DH 1210 10	Mesh Filter Oil Pump	1	
4	39 1686 06	Hollow Dowel Pin	1	
5	DH 1210 35	Clip Mesh Oil Filter	1	
6	39 2194 21	'O' Ring	1	


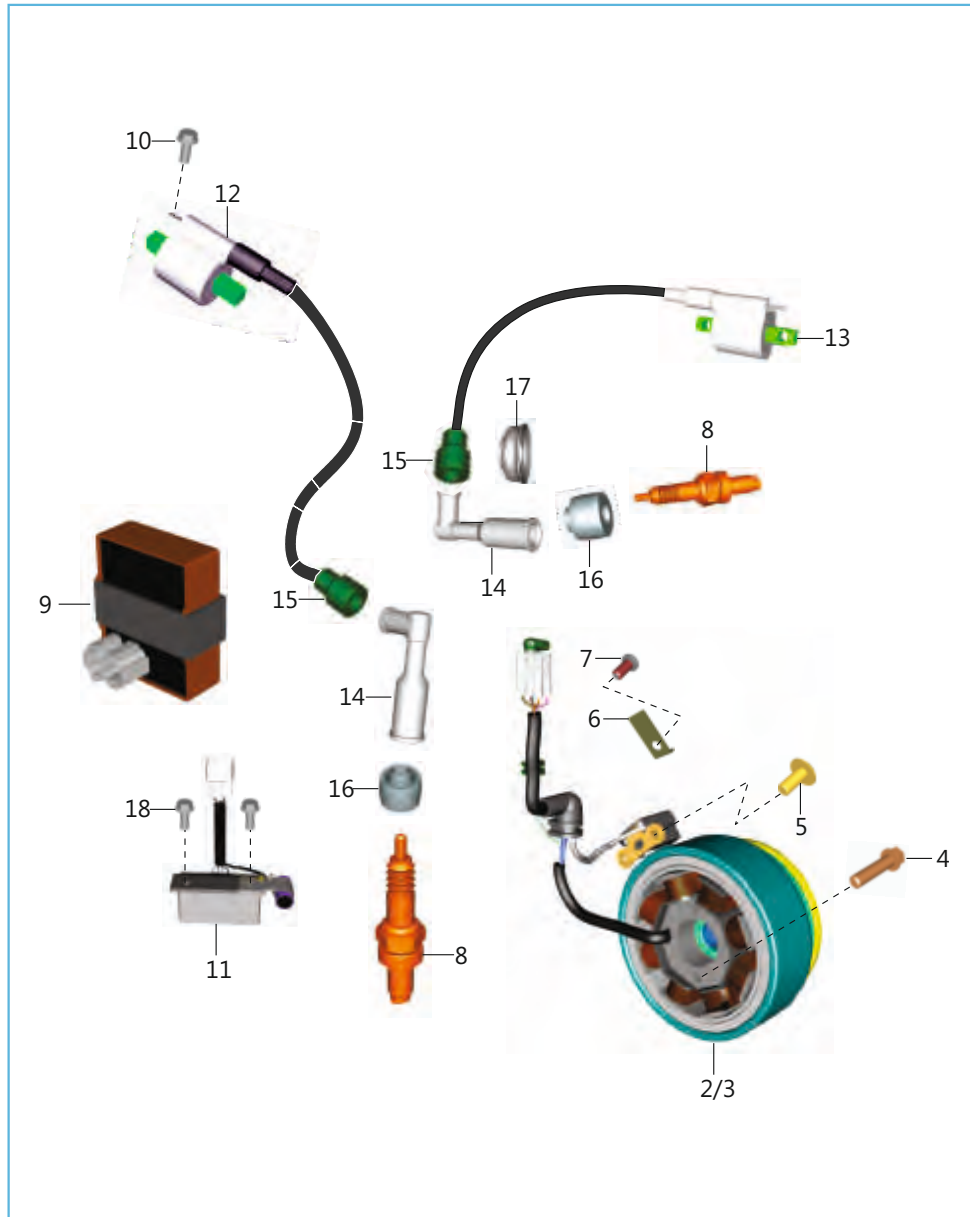


Plate No.: 22


Magneto, CDI & H.T. Coil

No.	Part No.	Description	Qty	Remarks
1	59 1000 02	Spring Dowel Sleeve	1	N.I.
2	DH 1110 81	Stator Assly.	1	
3	JC 1110 28	Rotor Assembly	1	
4	DH 1013 86	Hex. Bolt With Flange	2	
5	DH 1013 81	Pan Head Screw	2	
6	DH 1011 99	Stopper Plate (Wiring Harness)	1	
7	DH 1013 80	Screw Pan Head	1	
8	DG 1110 08	Spark Plug	2	
9	DJ 1110 98	C.D.I. Assly.	1	
10	39 1944 04	Flange Bolt	4	
11	DJ 2012 02	DC Regulator With Capacitor	1	
12	JC 1110 22	H.T. Coil LH With Cable	1	
13	JC 1110 23	H.T. Coil RH With Cable	1	
14	DH 1110 15	Cap Spark Plug	2	
15	DD 1110 12	Grommet H.T. Cable	2	
16	DH 1110 13	Grommet Spark Plug Cape	2	
17	DH 1110 16	Grommet Sleeve Spark Plug	1	
18	39 1944 04	Flange Bolt	2	

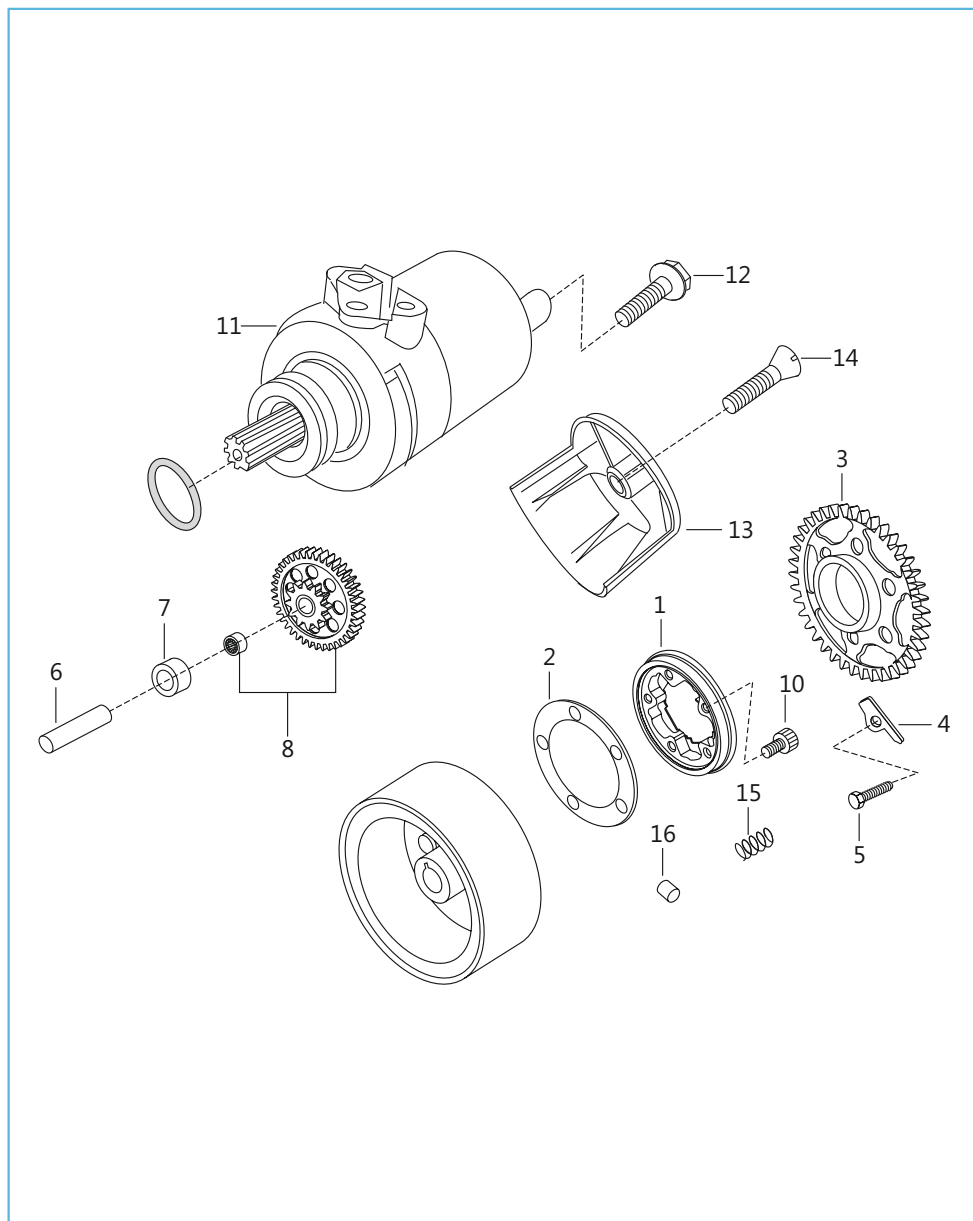

Starter Assembly

No.	Part No.	Description	Qty	Remarks
1	36 DK00 76	Kit Body Comp. Starter Clutch	1	N.I.
2	DK 1016 05	Plate Roller Clutch	1	
3	JC 1011 12	Gear Starter Clutch(55T)	1	
4	DH 1015 81	Plate Starter Clutch Gear Return	1	
5	DH 1013 85	Bolt	1	
6	DK 1011 76	Shaft Starter Counter	1	
7	DH 1011 72	Collar Starter Counter	1	
8	JC 1011 45	Gear Assembly Starter Counter	1	
9	59 2000 07	Needle Roller Bearing	1	
10	39 0972 04	Bolt Socket	3	
11	DH 1111 14	Motor Assembly Starter	1	
12	DS 1013 53	Bolt	2	
13	56 DJ4E 1Y	Cover Starter Motor (MLT Silver)	1	
14	DH 1013 89	Slotted C'sunk Screw	1	
15	DK 1015 96	Spring	5	
16	DH 1011 63	Roller	5	

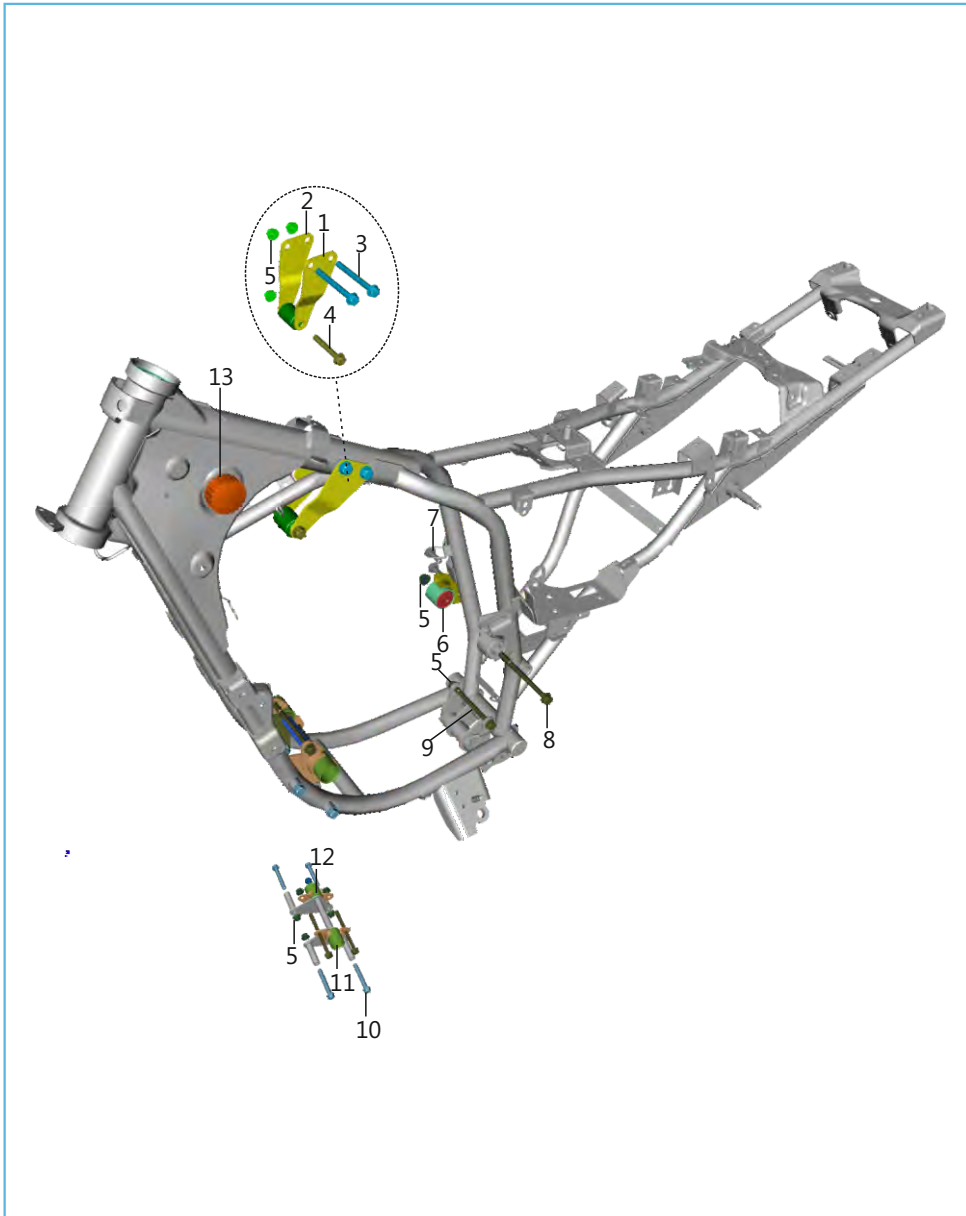


Engine Mountings

No.	Part No.	Description	Qty	Remarks
1	DK 1614 15	Assembly Engine Mtg Bkt Top LH	1	
2	DK 1614 16	Assembly Engine Mtg Bkt Top RH	1	
3	39 1967 04	Bolt	2	
4	KA DF08 80	Bolt Flanged	1	
5	39 1970 15	Nut - Hexagon With Flange	11	
6	DK 1611 61	Bracket Complete Rh Engine Rear	1	
7	KA DF08 25	Bolt Flanged	2	
8	59 0400 41	Hex Hd Bolt / Flange	1	
9	39 2157 04	Bolt - Hexagon With Flange :- M8	3	
10	39 2312 04	Hex Hd Bolt/flang-m8	4	
11	DH 1611 89	Bracket Complete - Engine LH FR	1	
12	DH 1611 90	Bracket Complete - Engine RH FR	1	
13	DJ 1410 08	Damper Front	2	
14	DK 1610 96	Bracket Assly. Engine Mtg FR	1	N.I.

Frame and Frame Fittings

No.	Part No.	Description	Qty	Remarks
1	DJ 1614 20	Frame Assembly	1	
2	DK 1810 75	Nut Steering	1	
3	DK 1810 76	Cup Steering	1	
4	36 DK01 59	Kit St.Cone With Grease	1	
5	DK 1810 50	Cage Steering Bearing Top	1	
6	DK 1810 51	Cage Steering Bearing Bottom	1	

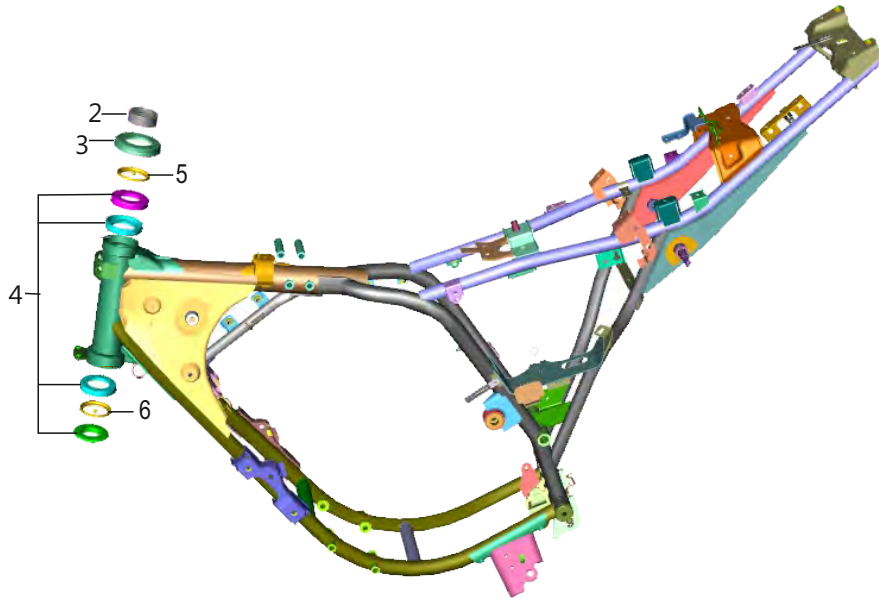



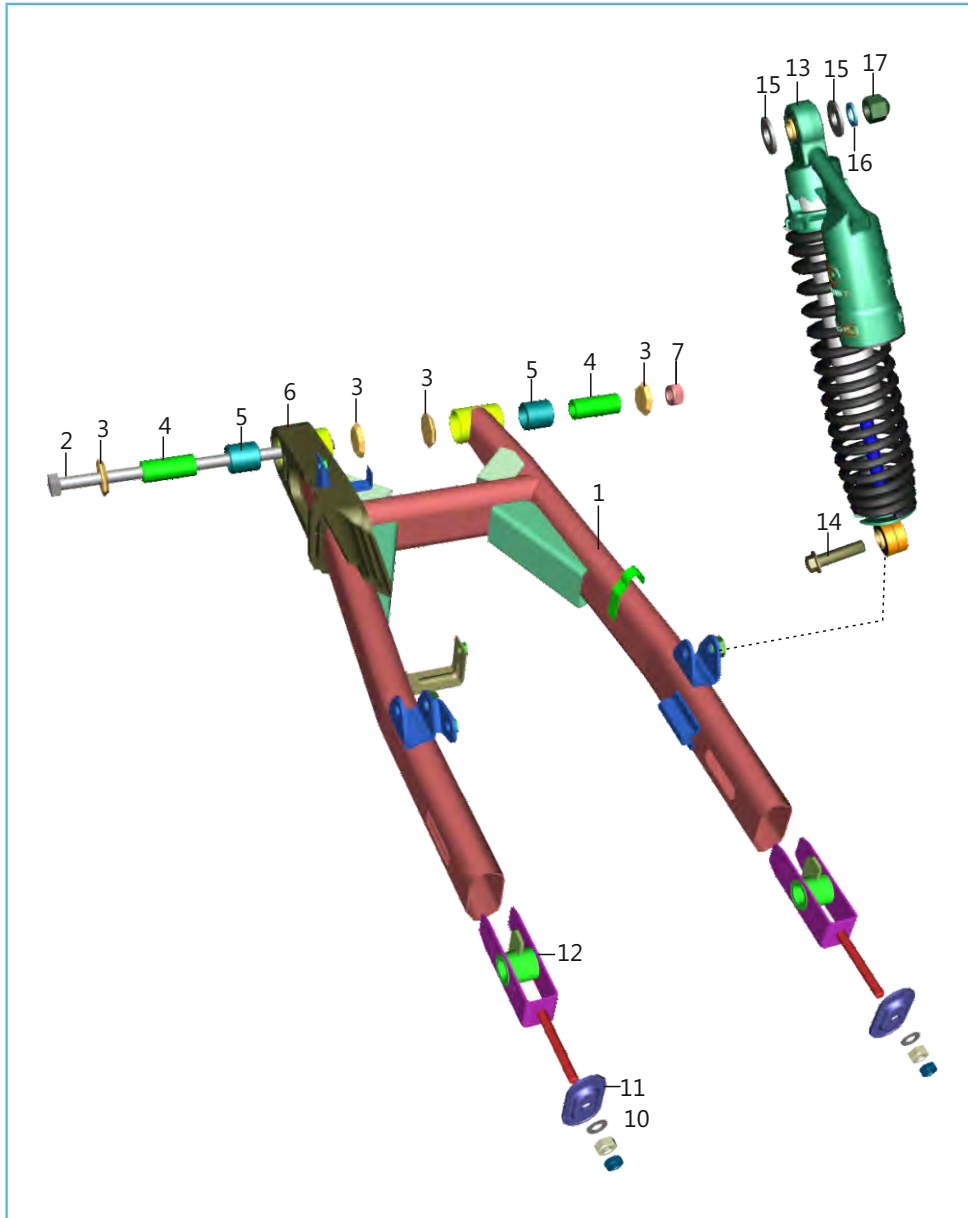


Plate No.: 26

Swing Arm / Rear Shock Absorber

No.	Part No.	Description	Qty	Remarks
1	DK 1710 11	Swing Arm Assembly	1	
2	DK 1710 03	Shaft Swing Arm	1	
3	DG 1710 19	Seal-Oil	4	
4	DK 1710 06	Sleeve For Swing Arm	2	
5	DG 1710 18	Bearing-Needle	2	
6	DG 1710 34	Guard	1	
7	DH 1710 19	U Nut Swing Arm	1	
8	DG 1710 22	Small Nut	2	
9	39 1997 15	Hexagon Nut	2	
10	22 1502 41	Washer - Plain	2	
11	JM 1710 04	Cap Chain Adjuster	2	
12	DJ 1710 44	Adjuster Chain	2	
13	DK 1710 14	Rear Shock Abs Assly.	2	
14	DG 1710 38	Flanged Bolt	2	
15	39 0714 11	Washer Plain	4	
16	39 1829 12	Spring Washer	2	
17	39 2366 15	Domed Cap Nut - M12	2	

RH →

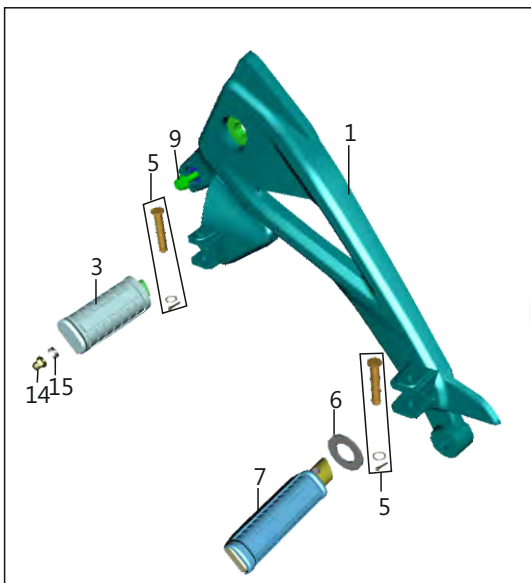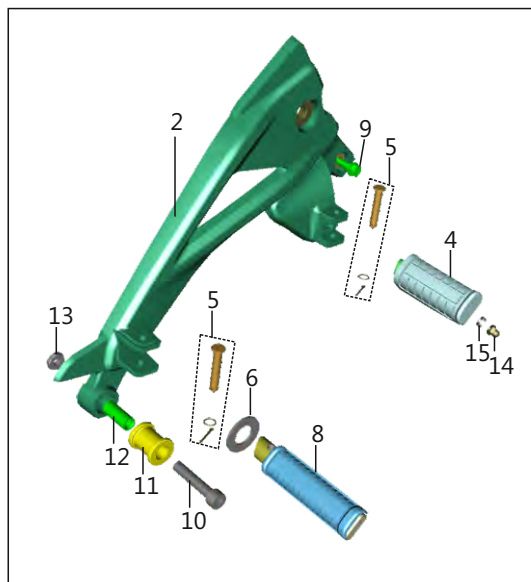


← LH

Plate No.: 27

Rider, Pillion Foot Rest & Step Holder

No.	Part No.	Description	Qty	Remarks
1	56 DJ3X 1Y	Holder Step LH	1	
2	56 DJ3Y 1Y	Holder Step RH	1	
3	DJ 1611 26	Step Assembly - Main LH	1	
4	DJ 1611 27	Step Assembly - Main RH	1	
5	36 DK00 13	Kit Hardware Pillion	2	
6	DJ 1611 86	Plate Side Pillion Step	2	
7	DJ 1611 28	Step Assly. Complete - Pillion LH	1	
8	DJ 1611 29	Step Assly. Complete - Pillion RH	1	
9	39 1069 01	Screw - Hexagon Head	2	
10	DK 1013 14	Bolt Socket Head M10x50	1	
11	DH 1611 55	Damper Silencer	1	
12	DJ 1612 78	Tube Silencer With Washer	1	
13	DD 1610 71	Nut -U M10 X 1.25 X Height 6.5	1	
14	39 0963 15	Nut - Domed Cap :- M6	2	
15	DH 1611 00	Spacer - Main Step	2	

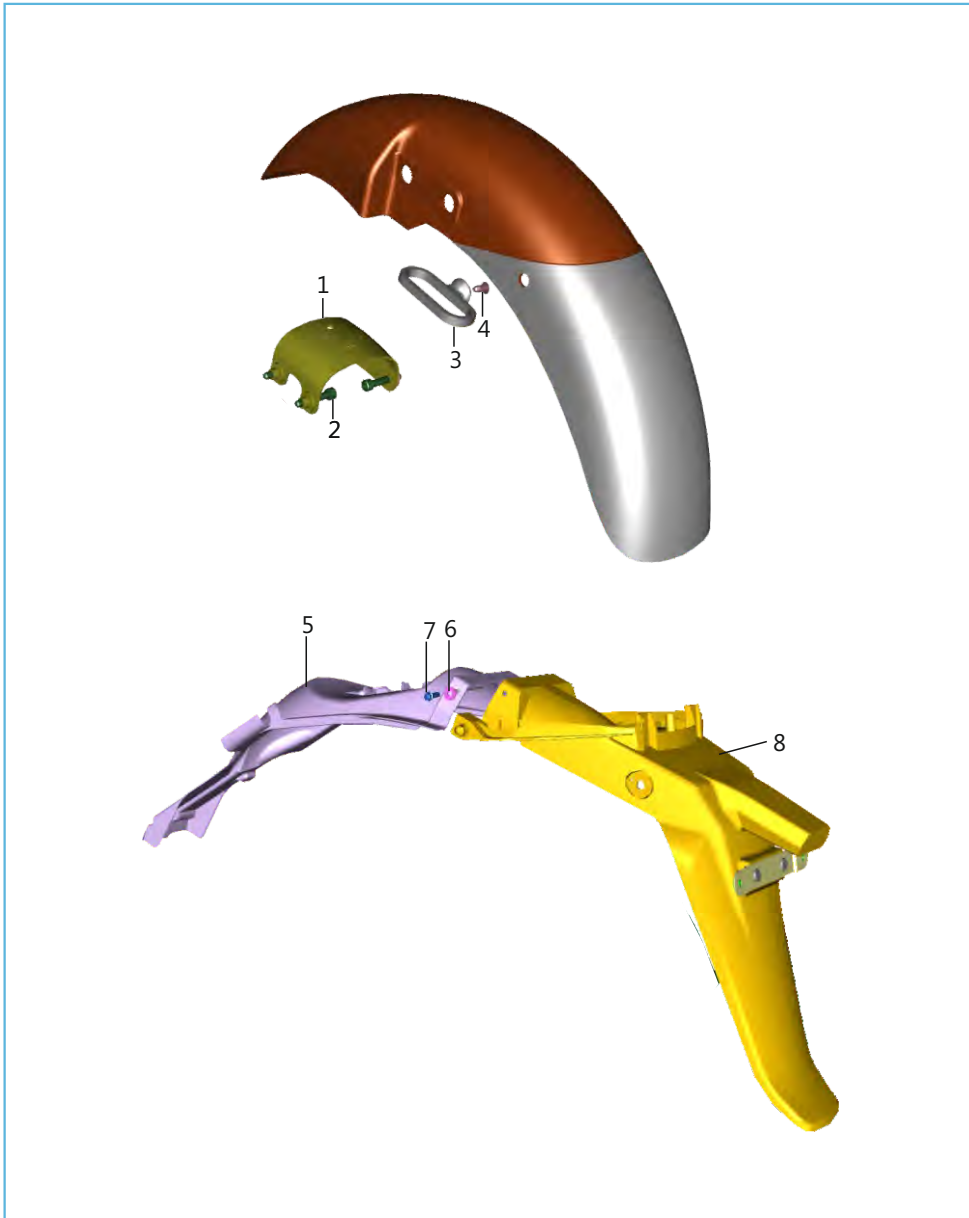

Mudguard - Front & Rear

No.	Part No.	Description	Qty	Remarks
1	DK 1610 98	Brace Fender	1	
2	DG 1810 08	Socket Bolt	4	
3	DS 1611 25	Cable Guide	1	
4	DJ 1610 69	Nail For Cable Guide	1	
5	DK 1613 38	Fender Rear Front	1	
6	39 0711 11	Plain Washer	2	
7	39 0798 15	Flange Bolt	2	
8	DK 1610 85	Fender Rear	1	



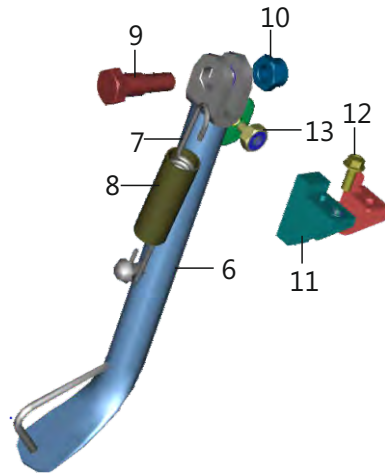


Plate No.: 29

Stand Assembly

No.	Part No.	Description	Qty	Remarks
1	DK 1611 22	Stand Main	1	N.I
2	30 1611 57	Shaft Stand	1	
3	39 0787 08	Pin Cotter	1	
4	DH 1611 21	Spring Main Stand	1	
5	DH 1611 45	Cover Spring Main Stand	1	
6	JC 1610 17	Stand Side	1	
7	DH 1610 66	Spring Side Stand	1	
8	DH 1611 46	Cover Spring Side Stand	1	
9	DF 1611 02	Bolt	1	
10	39 0422 15	Nut	1	
11	JC 2010 39	Side Stand Switch	1	
12	DF 1611 02	Bolt	1	
13	DH 2010 65	Magnet Holder	1	

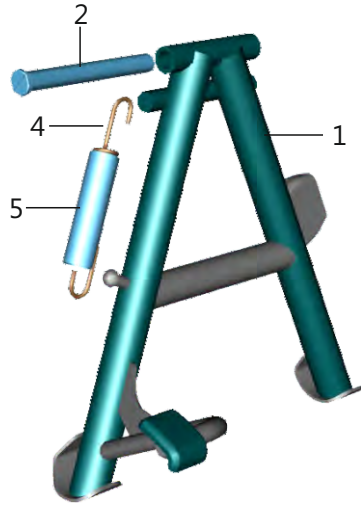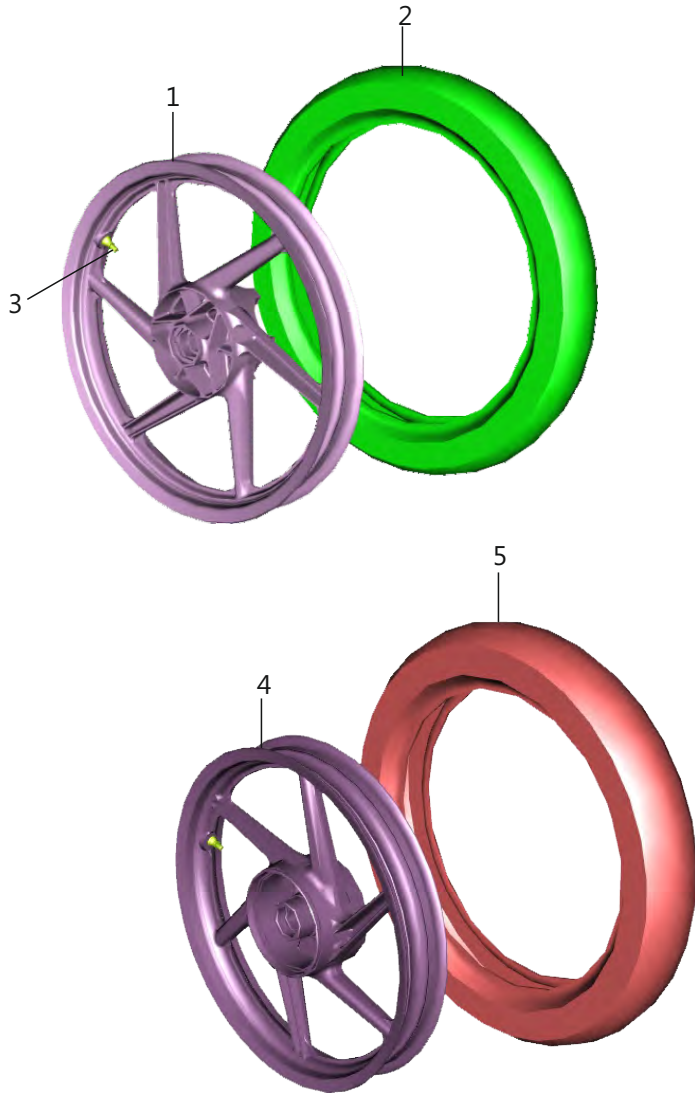

Tube / Tyre / Rim

No.	Part No.	Description	Qty	Remarks
1	JC 1510 13	Wheel Rim Front (1.6 X 17 DC)	1	
2	DK 1510 39	Tyre Front Tubeless	1	
3	DK 1510 26	Valve Tubeless Tyre	1	
4	DK 1510 50	Wheel Rim Rear	1	
5	DK 1510 40	Tyre Rear Tubless	1	

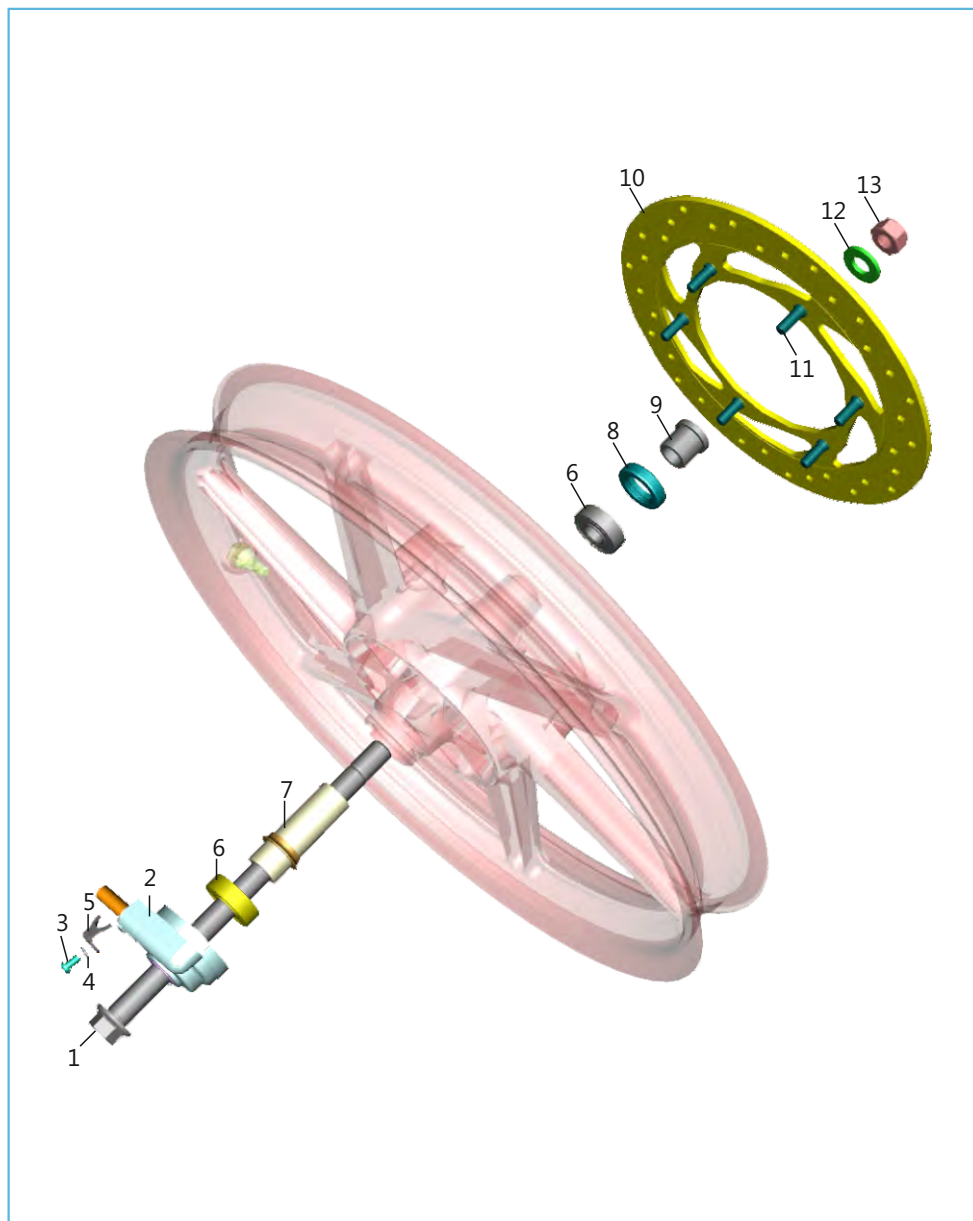


Plate No.: 31

Front Hub

No.	Part No.	Description	Qty	Remarks
1	DK 1510 95	Front Axle	1	
2	JC 1510 19	Vehicle Speed Sensor Assly.	1	
3	KB BA04 08	Screw Pan Cross	1	
4	39 0900 12	Washer Spring Thin	1	
5	JC 2010 46	Stopper Plate	1	
6	KP BC62 02	Bearing-Ball-C3 Clearance	2	
7	DK 1510 28	Spacer Front Wheel	1	
8	DG 1510 05	Seal-Oil	1	
9	DG 1510 07	Collar	1	
10	DK 1510 96	Disc Front Black	1	
11	PD 1318 03	Bolt	6	
12	DG 1510 08	Washer	1	
13	DH 1710 19	U Nut Swing Arm	1	

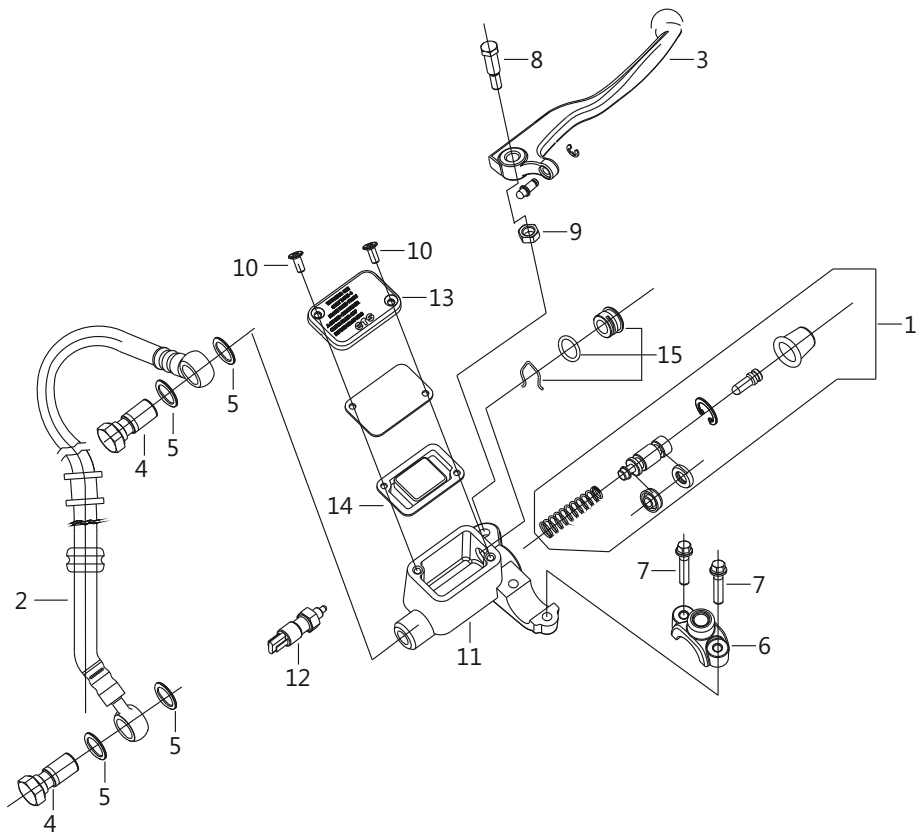


Plate No.: 32

Front Master Cylinder

No.	Part No.	Description	Qty	Remarks
1	DE 1910 43	Major Kit - Master Cylinder	1	
2	DJ 1510 76	Hose Brake Front	1	
3	DJ 1910 57	Lever Grip RH	1	
4	DK 1510 69	Banjo Bolt	2	
5	DE 1910 10	Washer Copper	4	
6	DE 1910 33	Clamp Holder RH	1	
7	DJ 1910 28	Bolt	1	
8	DJ 1910 29	Bolt Front Brake Lever	1	
9	DJ 1910 30	Nut Flanged	1	
10	DE 1910 30	Screw	2	
11	DJ 1910 56	Cylinder Master	1	
12	DJ 2011 09	Front Brake Switch	1	
13	DE 1910 29	Reservoir Cover	1	
14	DE 1910 28	Diaphragm	1	
15	DE 1910 36	Oil Window Kit	1	


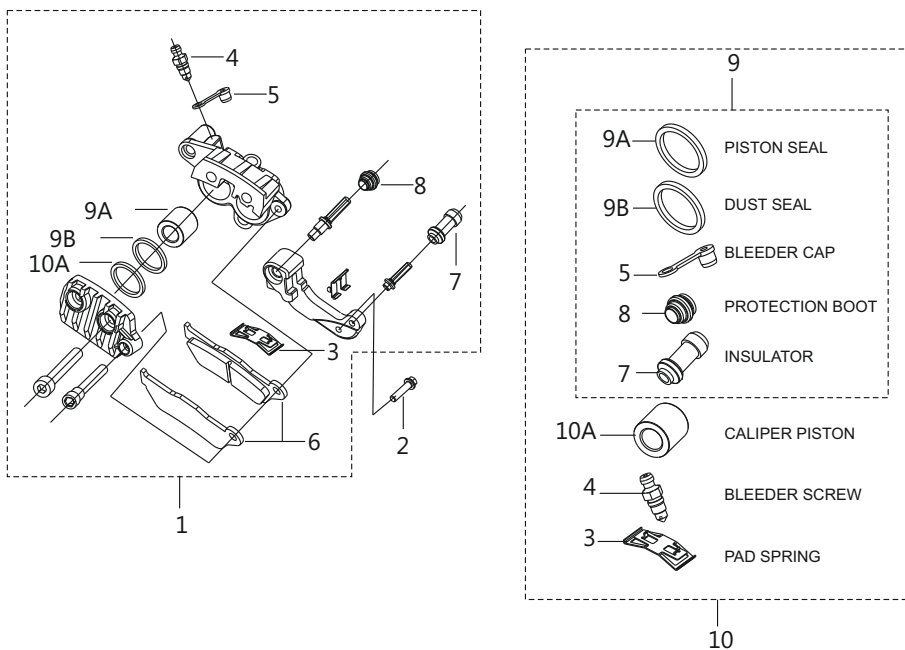


Plate No.: 33


Front Disc Brake

No.	Part No.	Description	Qty	Remarks
1	PD 1318 53	Caliper Assembly Front	1	
2	59 0400 48	Bolt Flanged	2	
3	DE 1510 48	Spring Pad	1	
4	DE 1510 46	Bleeder Screw	1	
5	DE 1510 47	Bleeder Cap	1	
6	DE 1510 37	Disc Pad Set	1	
7	DE 1510 43	Insulator	1	
8	DJ 1510 73	Protection Boot	1	
9	DJ 1510 74	Minor Kit - Caliper	1	
10	DJ 1510 75	Major Kit - Caliper	1	

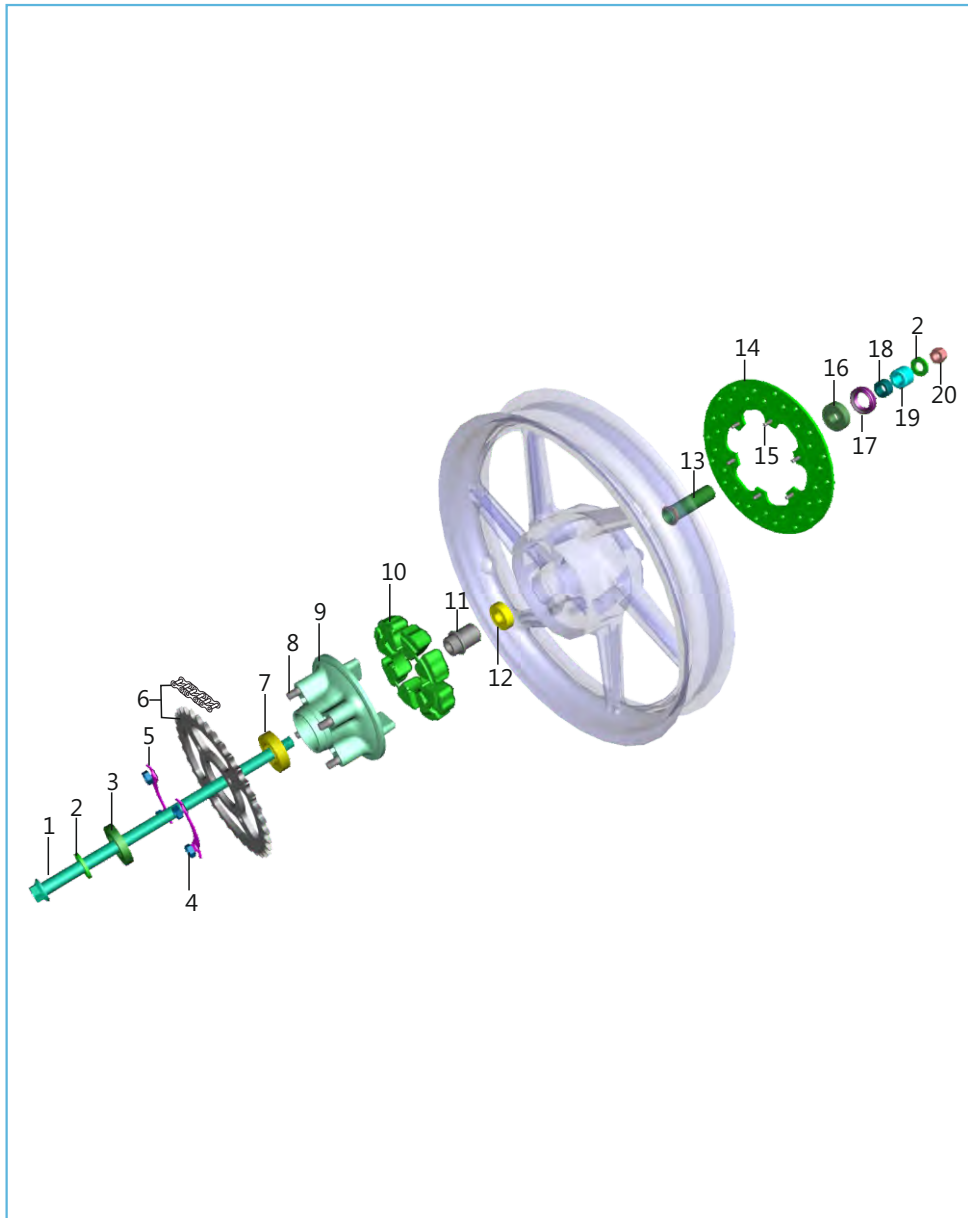


Rear Hub

No.	Part No.	Description	Qty	Remarks
1	DK 1510 09	Axle Rear	1	
2	DG 1510 08	Washer	2	
3	DK 1510 12	Seal Oil	1	
4	LC A000 02	Nut Hex Thin M10x1.25x6	4	
5	PF 1312 20	Washer Lock For Nut A/f17	2	
6	36 DK00 36	Chain Sprocket Kit	1	
7	KP AC60 05	Bearing Ball Ordinary Clearance	1	
8	DS 1510 73	Stud M10x1.25p Four Rubber	4	
9	JC 1510 16	Coupling	1	
10	JG 1312 19	Coupling Rubber	1	
11	DK 1510 15	Sleeve	1	
12	KP BC62 02	Bearing-Ball-C3 Clearance	1	
13	DK 1510 22	Collar Bearing Assly.	1	
14	DK 1510 97	Disc Brake Dia 230	1	
15	39 2038 04	Hexagon Socket Head Bolt-m6	6	
16	KP BC63 02	Bearing-Ball-C3 Clearance	1	
17	30 1510 82	Seal Oil	1	
18	DK 1510 82	Spacer II	1	
19	DK 1510 81	Spacer I	1	
20	DH 1710 19	U Nut Swing Arm	1	

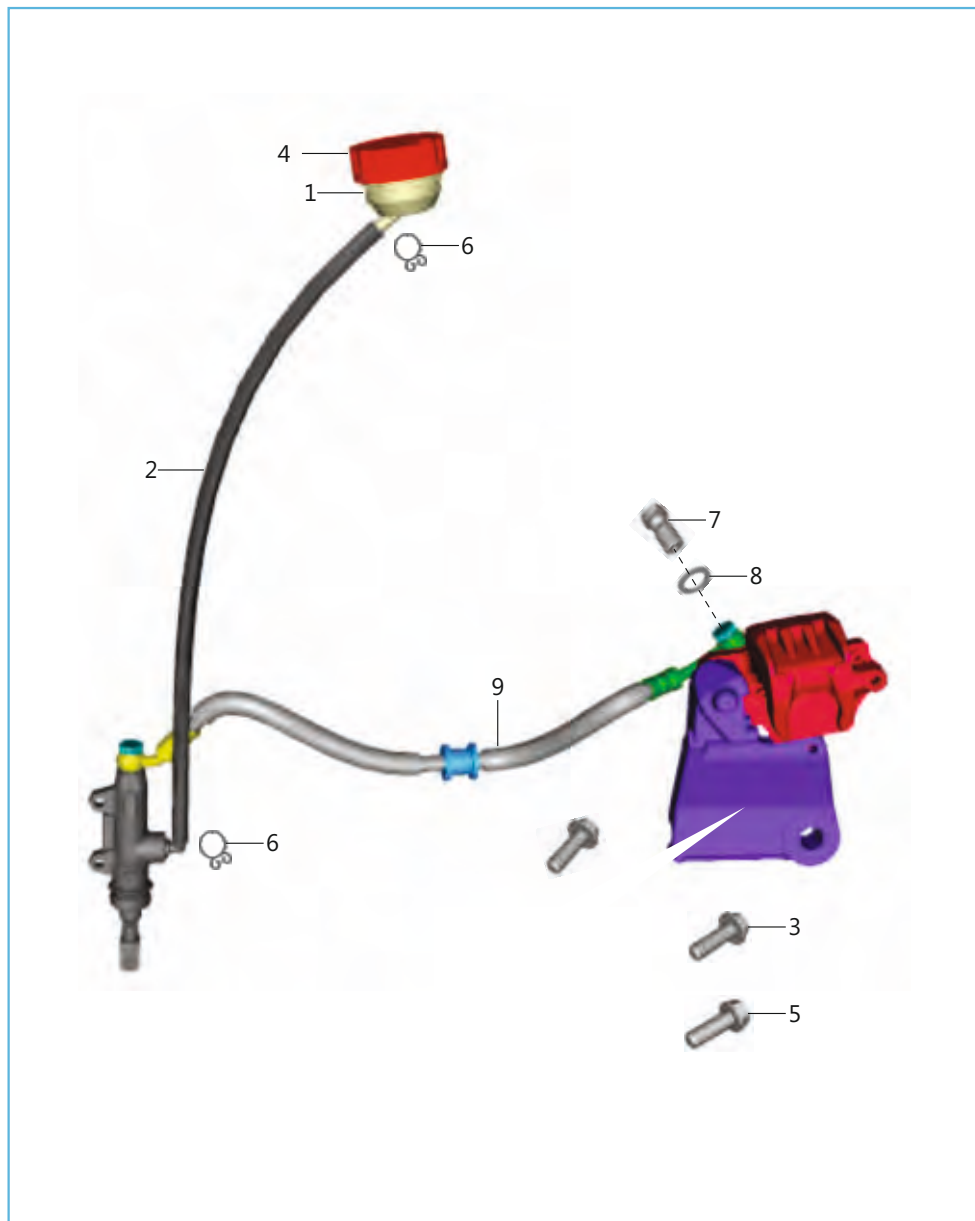


Rear Disc Brake System

No.	Part No.	Description	Qty	Remarks
1	JG 1318 21	Reservoir Rear Brake	1	
2	DK 1510 34	Reservoir Tube Rear Disc	1	
3	KA DF08 25	Bolt Flanged	2	
4	DK 1510 45	Reservoir Cap	1	
5	39 2481 04	Bolt Hexagon Head With Flange M8	1	
6	DK 1510 63	Clip For Reservoir Tube	2	
7	DJ 1910 25	Banjo Bolt	1	
8	DJ 1910 26	Copper Washer	1	
9	DK 1510 84	Hose Brake Rear	1	

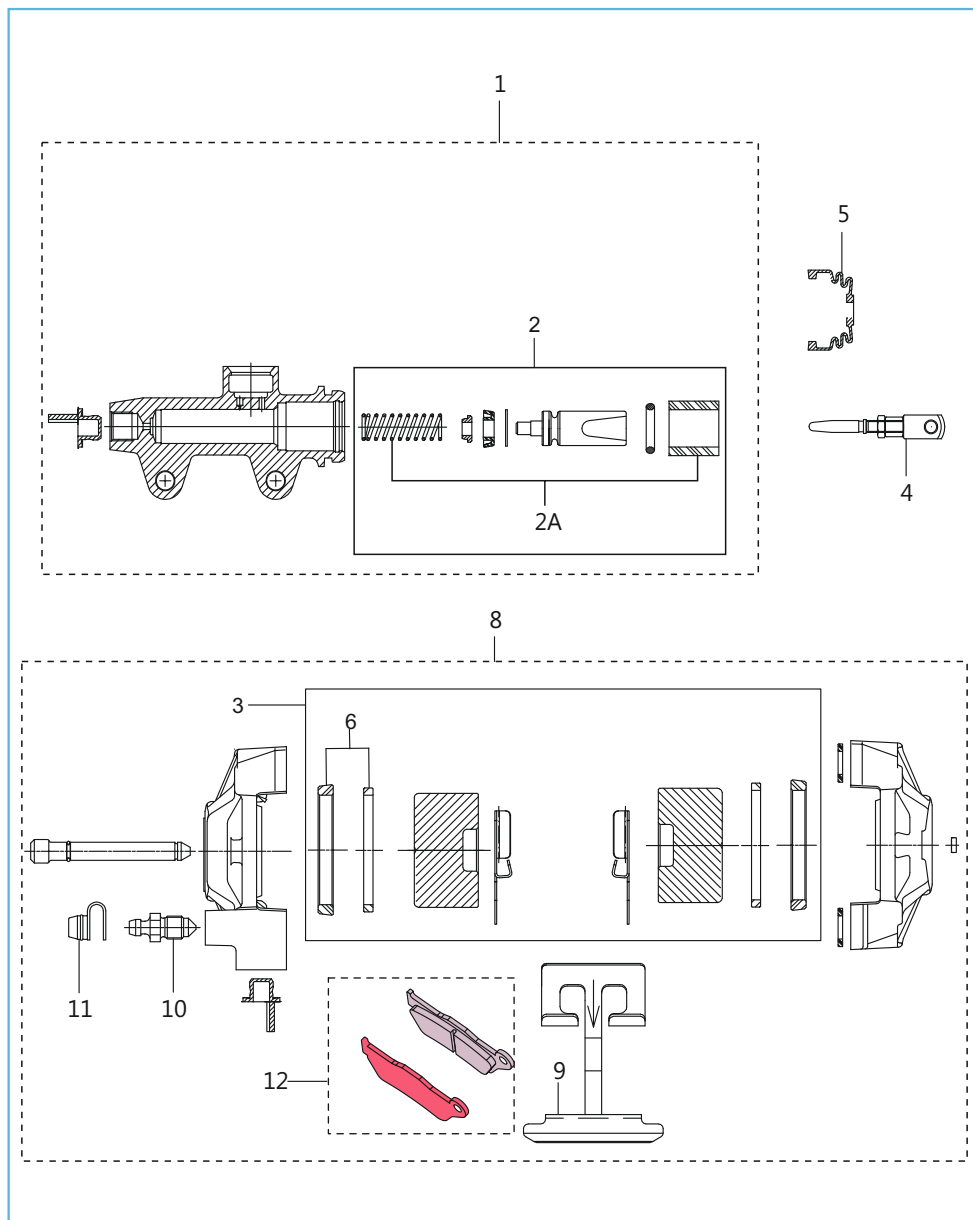

Rear Disc Brake - Master Cylinder & Caliper

No.	Part No.	Description	Qty	Remarks
1	DK 1510 31	Master Cylinder	1	N.I.
2	36 DK00 69	Major kit caliper	1	
2A	36 DK00 70	Minor kit caliper	1	
3	DK 1510 70	Kit Rear Caliper Major	1	
4	36 DK00 71	Push Rod	1	
5	DK 1510 42	Boot	1	
6	DK 1510 89	Kit Piston Seal (Minor Kit)	1	
7	DK 1510 90	Insulator Kit Floating Caliper	1	
8	DK 1511 22	Caliper Assembly Rear	1	
9	DK 1510 41	Spring Pad	1	
10	DE 1510 46	Bleeder Screw	1	
11	DE 1510 47	Bleeder Cap	1	
12	DK 1510 85	Disc Pad Set	1	
13	DK 1510 88	Piston Kit(Major Kit)Floating Caliper	1	

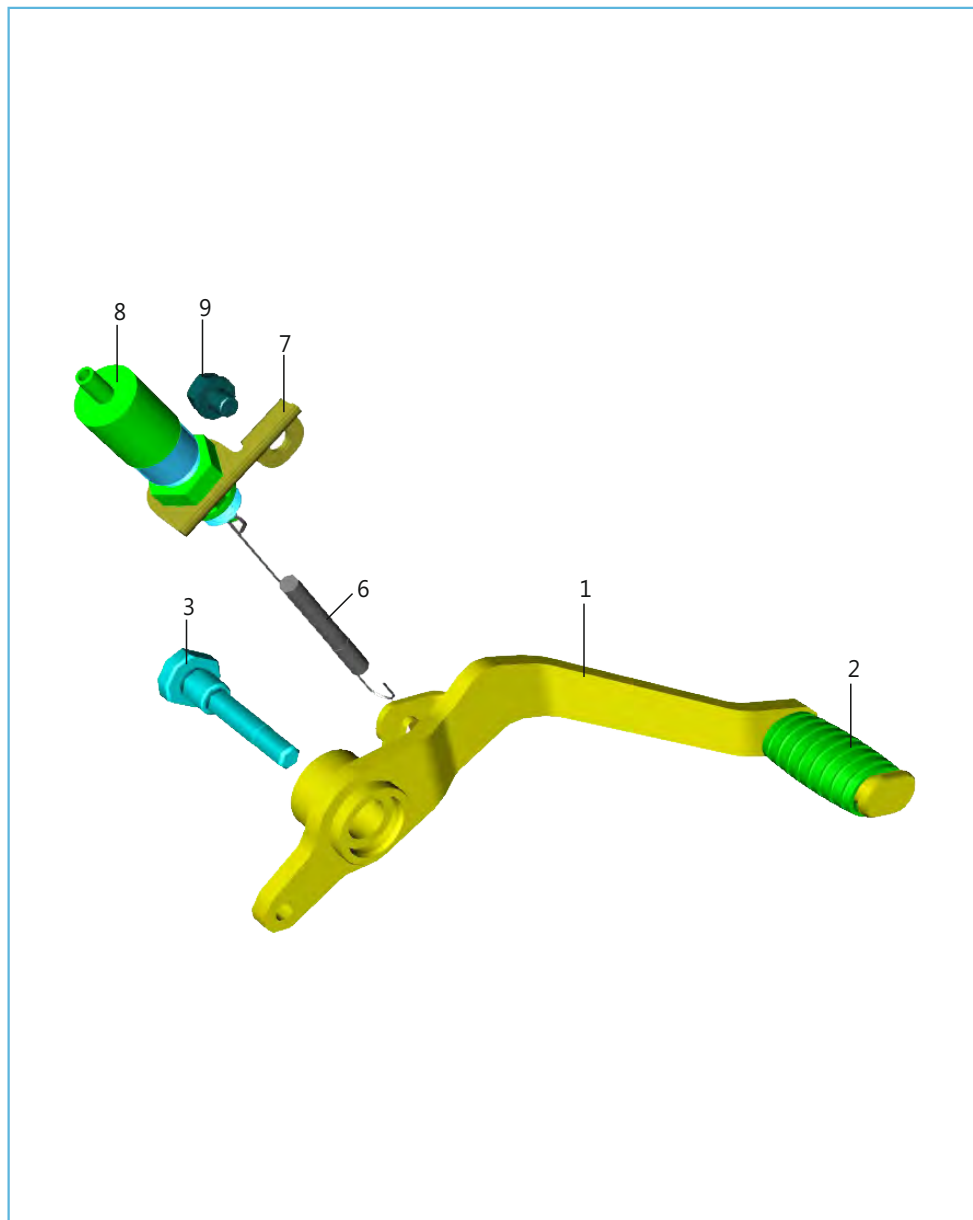

Rear Brake Padal

No.	Part No.	Description	Qty	Remarks
1	DK 1910 12	Lever Brake	1	
2	DG 1013 39	Damper	1	
3	DK 1011 86	Bolt Pivot Lever Change	1	
4	DK 1011 85	Washer Pivot Bolt	1	N.I
5	DK 1011 87	Collar Pivot Bolt	1	N.I
6	DK 1910 14	Spring Rear Brake Switch	1	
7	DK 1611 63	Bkt. Rear Brake Switch	1	
8	31 2010 79	Rear Brake Switch	1	
9	39 2475 04	Hex. Head Bolt/flange M6	1	

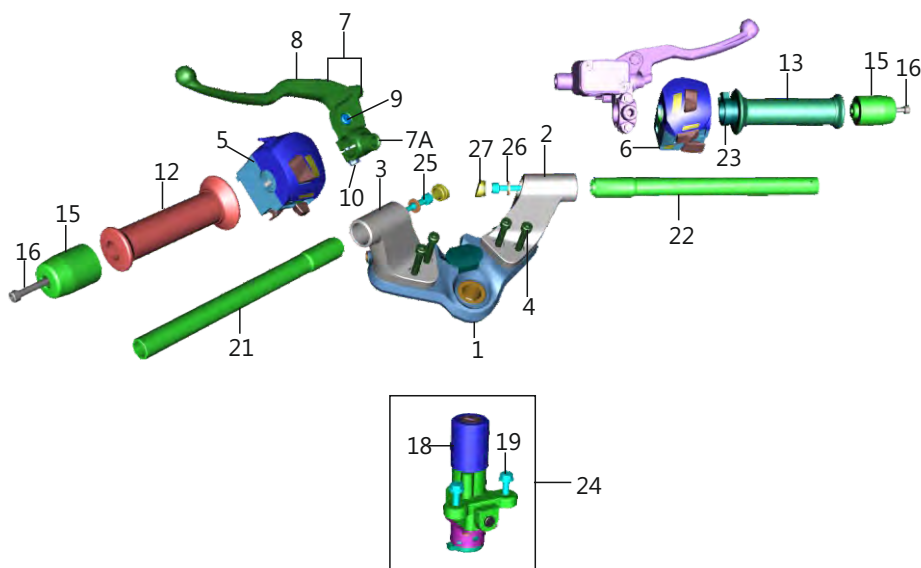


Plate No.: 38

Handle Bar

No.	Part No.	Description	Qty.	Remarks
1	DK 1811 00	Bracket Upper	1	
2	DK 1811 04	Holder Handle RH	1	
3	DK 1811 02	Holder Handle LH	1	
4	LA C000 59	Bolt Socket-m8x1.25x1 25xPrecoat	4	
5	JF 4014 00	Control Switch LH	1	
6	JD 4014 00	Control Switch RH	1	
7	DJ 1910 82	Lever & Support Holder Assy.	1	
7A	DJ 1910 81	Holder LH	1	
8	DJ 1910 83	Lever Grip Left	1	
9	DL 1910 14	Stud Lever Handle	1	
10	39 1553 04	Bolt Flange M6	1	
11	36 DU19 01	Kit Adjusting Screw	1	N.I
12	DH 1910 08	Hand Grip RH	1	
13	DH 1910 07	Hand Grip LH	1	
14	DS 1910 52	Boot for lever LH	1	N.I
15	DK 1810 43	Handle bar weight	2	
16	39 2427 04	Hex. Soc. Hd. Cap Screw	2	
17	39 1184 15	Nut Nyloc M5 x 0.8	1	N.I
18	JB 4014 02	Switch Assy. Ignition	1	
19	39 1943 04	Flange Bolt	2	
20	DJ 2012 46	Clutch Switch (Transil Diode)	1	
21	DK 1810 82	Handle Bar Tube Assy LH	1	
22	DK 1810 86	Handle Bar Tube Assy RH	1	
23	DH 1910 17	Pipe throttle	1	
24	DH 1811 19	Lock set 3in 1	1	Non EVAP
	DH 1811 30	Lock Set	1	EVAP
25	LA C000 20	Bolt Socket Head *	2	
26	39 1180 11	Washer	2	
27	DK 1810 36	Rubber Plug	2	


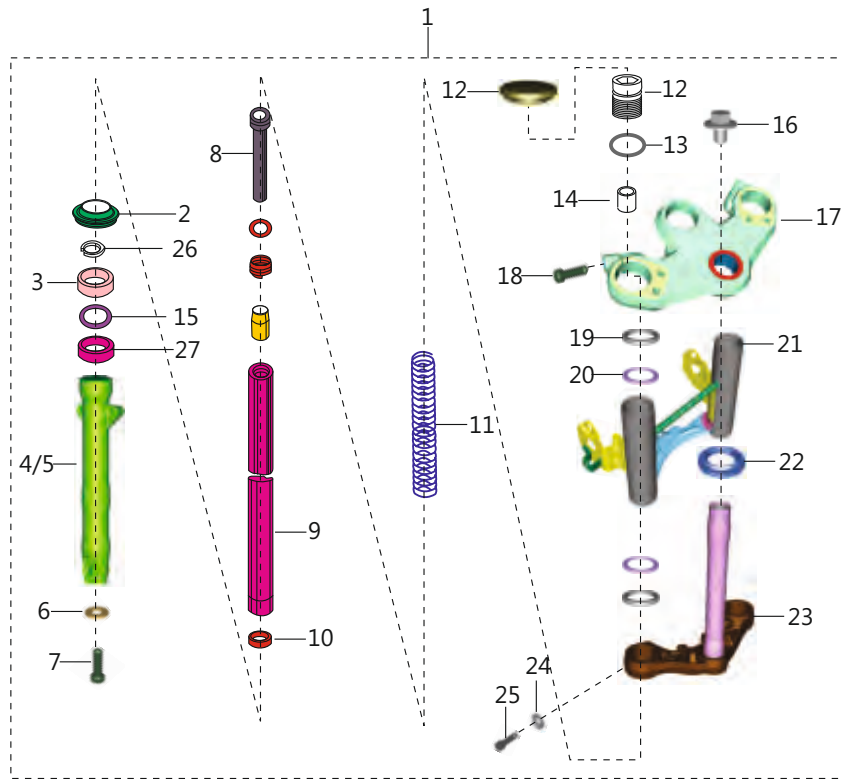


Plate No.: 39

Front Fork

No.	Part No.	Description	Qty	Remarks
1	DK 1810 87	Fork Assembly Front	1	
2	DK 1810 21	Inner Dust Seal	2	
3	DJ 1710 39	Oil Seal	2	
4	DK 1810 90	Outer Tube LH	1	
5	DK 1810 91	Outer Tube RH	1	
6	DK 1810 07	Copper Washer	2	
7	DK 1810 06	Socket Headed Bolt - M10 X1.5x35	2	
8	DK 1810 10	Seat Pipe	2	
9	DK 1810 92	Fork Pipe Spinning	2	
10	DK 1810 11	Slide Bush	2	
11	DK 1810 73	Spring Main Spring	2	
12	DK 1810 22	Bolt fork	2	
13	DK 1810 23	'O' ring	2	
14	DK 1810 93	Spacer Tube	2	
15	DK 1810 18	Washer Seal	2	
16	59 0400 05	Bolt	1	
17	DK 1811 00	Bracket Upper	1	
18	DG 1810 08	Socket Bolt	2	
19	JC 1810 23	Cushion Rubber	2	
20	JC 1810 22	Cover Trail B	4	
21	JC 1810 24	Lamp Shade Assly.	1	
22	DG 1810 45	Bearing cone Upper	1	
23	DK 1810 24	Under Bracket Sub Assembly	1	
24	DK 1810 25	Spring washer	2	
25	DK 1810 28	Bolt	2	
26	DK 1810 20	Oil Seal Stopper	2	
27	DK 1810 17	Guide Bush	2	

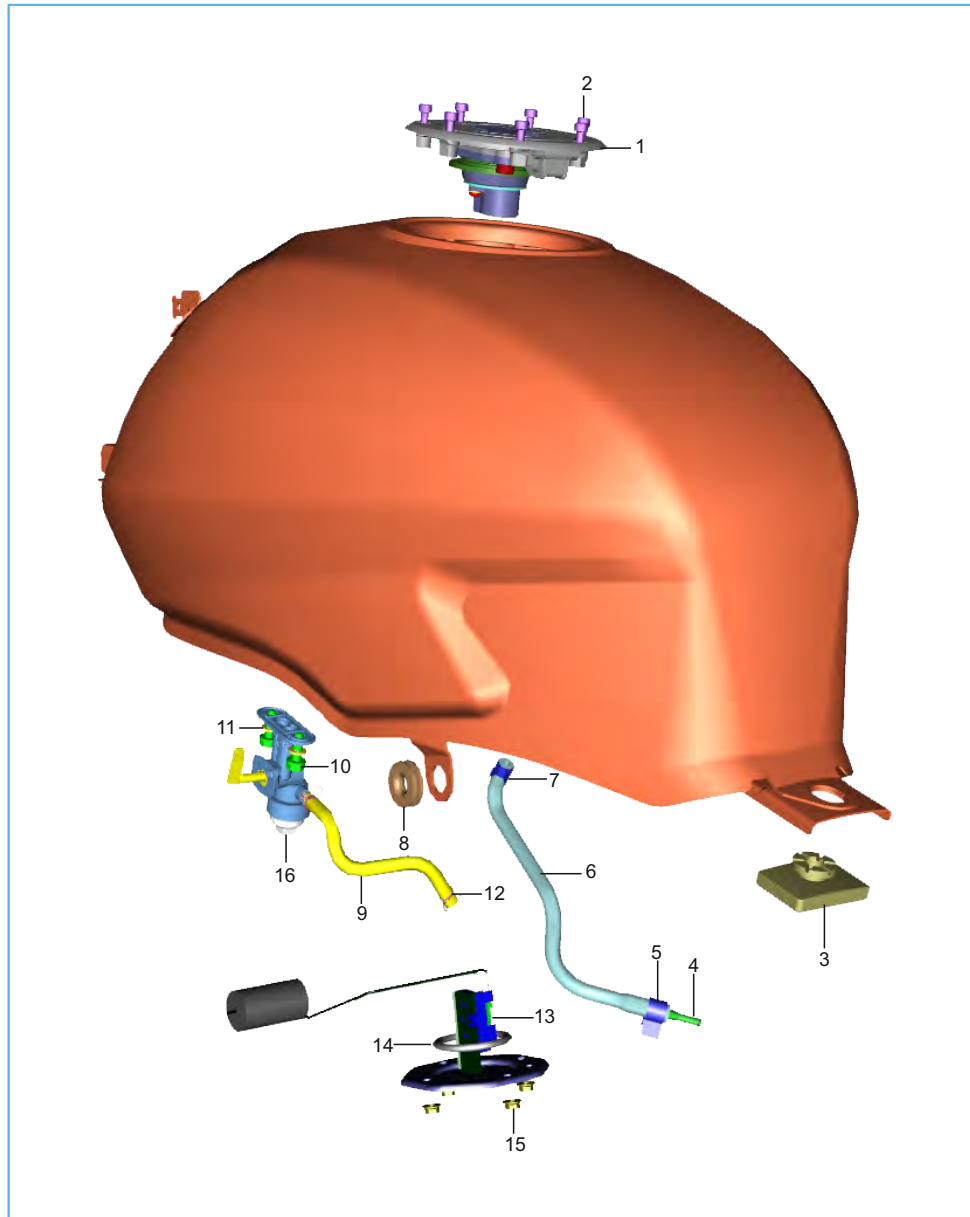

Cap Tank & Gauge Fuel

No.	Part No.	Description	Qty	Remarks
1	DH 1410 50	Cap Tank	1	
2	KA CA05 16	Bolt Socket	7	
3	DH 1410 23	Damper Rear	1	
4	JG 1710 86	Connector Tube EVAP	1	
5	JG 1710 29	Spring Band Clamp	1	
6	DJ 1410 72	Tube Tank To Inline Connector	1	
7	JG 1710 29	Spring Band Clip	1	
8	DH 1611 58	Grommet Side Cover RR	2	
9	52 DJ04 49	Fuel Pipe With Clamp	1	
10	DD 1412 27	Bolt Flange	2	
11	39 0740 11	Washer Plain	2	
12	33 1410 08	Clamp	2	
13	DK 2010 65	Tank Unit	1	
14	DK 1410 28	O Ring	1	
15	KC GA05 05	Nut	4	
16	DJ 1410 56	Fuel Cock	1	


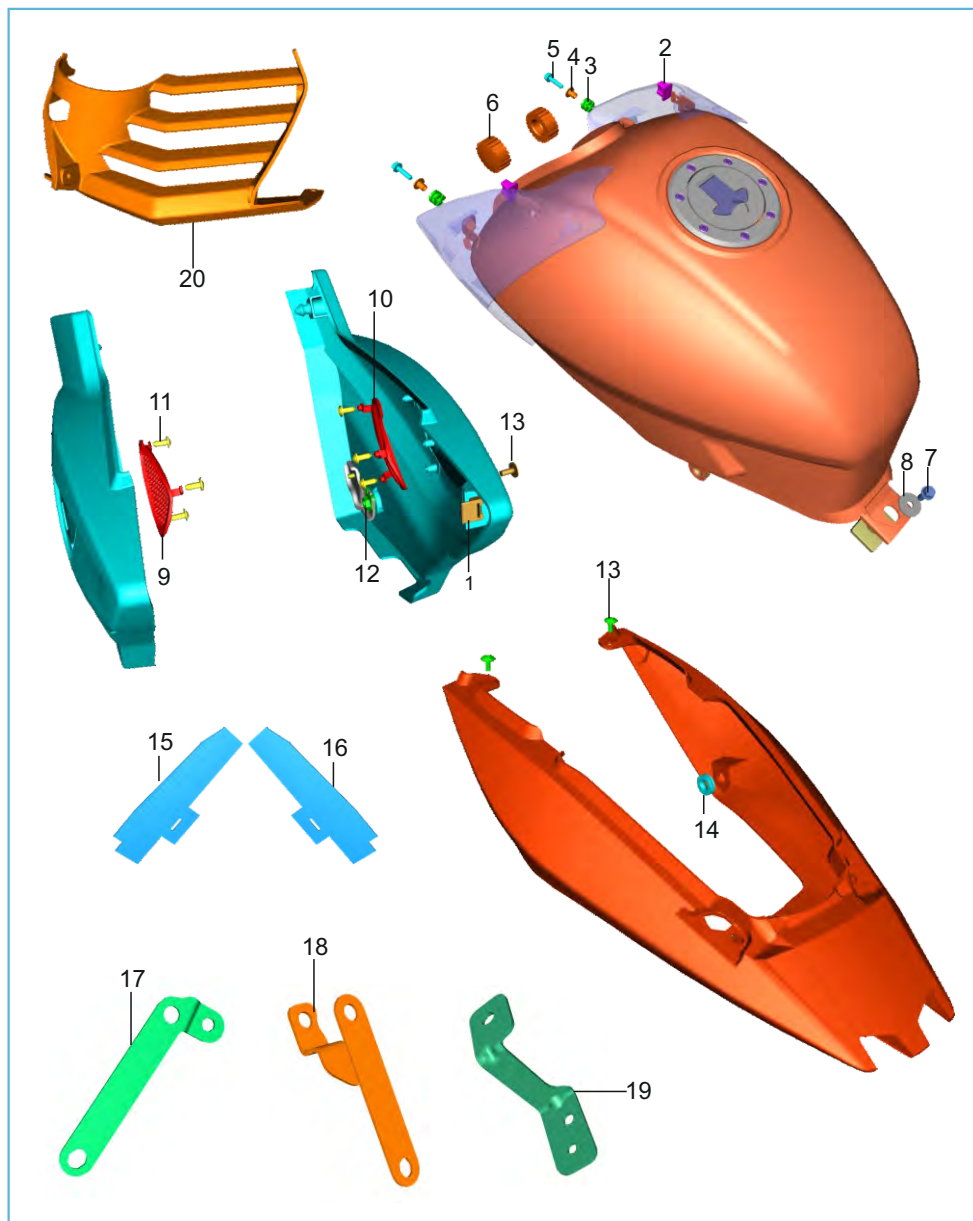


Plate No.: 41


Fittings - Fuel Tank, Side Cover & Cover Seat

No.	Part No.	Description	Qty	Remarks
1	DH 1611 33	Grommet Side Cover Rear	2	
2	JC 1410 17	Grommet II	2	
3	JC 1410 15	Grommet	2	
4	JC 1410 16	Collar	2	
5	39 1902 04	Flanged Bolt	2	
6	DJ 1410 08	Damper Front	2	
7	39 1556 04	Flange Bolt	1	
8	39 2424 11	Plain Washer	1	
9	DK 1611 23	Cover Side Mesh LH	1	
10	DK 1611 24	Cover Side Mesh RH	1	
11	59 0200 01	Self Tap Screw	6	
12	DJ 1810 65	Clip Nut	2	
13	DG 1611 21	Screw	3	
14	DH 1611 58	Grommet Side Cover RR	1	
15	DK 1611 71	Rubber Flap LH for Seat Cowl	1	
16	DK 1611 72	Rubber Flap RH for Seat Cowl	1	
17	DK 1614 43	Bracket Belly Pan Front LH	1	Ref.Cir.IB-347
18	DK 1614 44	Bracket Belly Pan Front RH	1	Ref.Cir.IB-347
19	DK 1614 47	Bracket Belly Pan Rear RH	1	Ref.Cir.IB-347
20	DJ 1614 40	Belly Pan Middle	1	

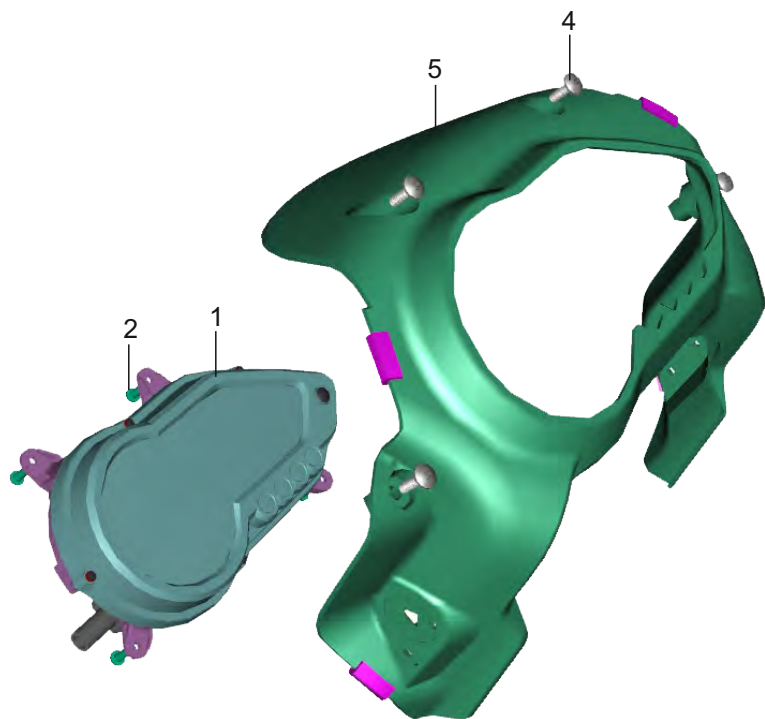

Meter Assembly


No.	Part No.	Description	Qty	Remarks
1	DJ 1910 85	Speedometer Assly	1	
2	39 1778 02	Self Tapping Screw	4	
3	DJ 2011 37	Dust Cover Electronic Cluster	1	N.I.
4	39 1907 01	Mushroom Head Screw	4	
5	DJ 1811 19	Speedo Meter Cover	1	
6	YD H190 02	Top Cover With Sealing Ring	1	N.I.

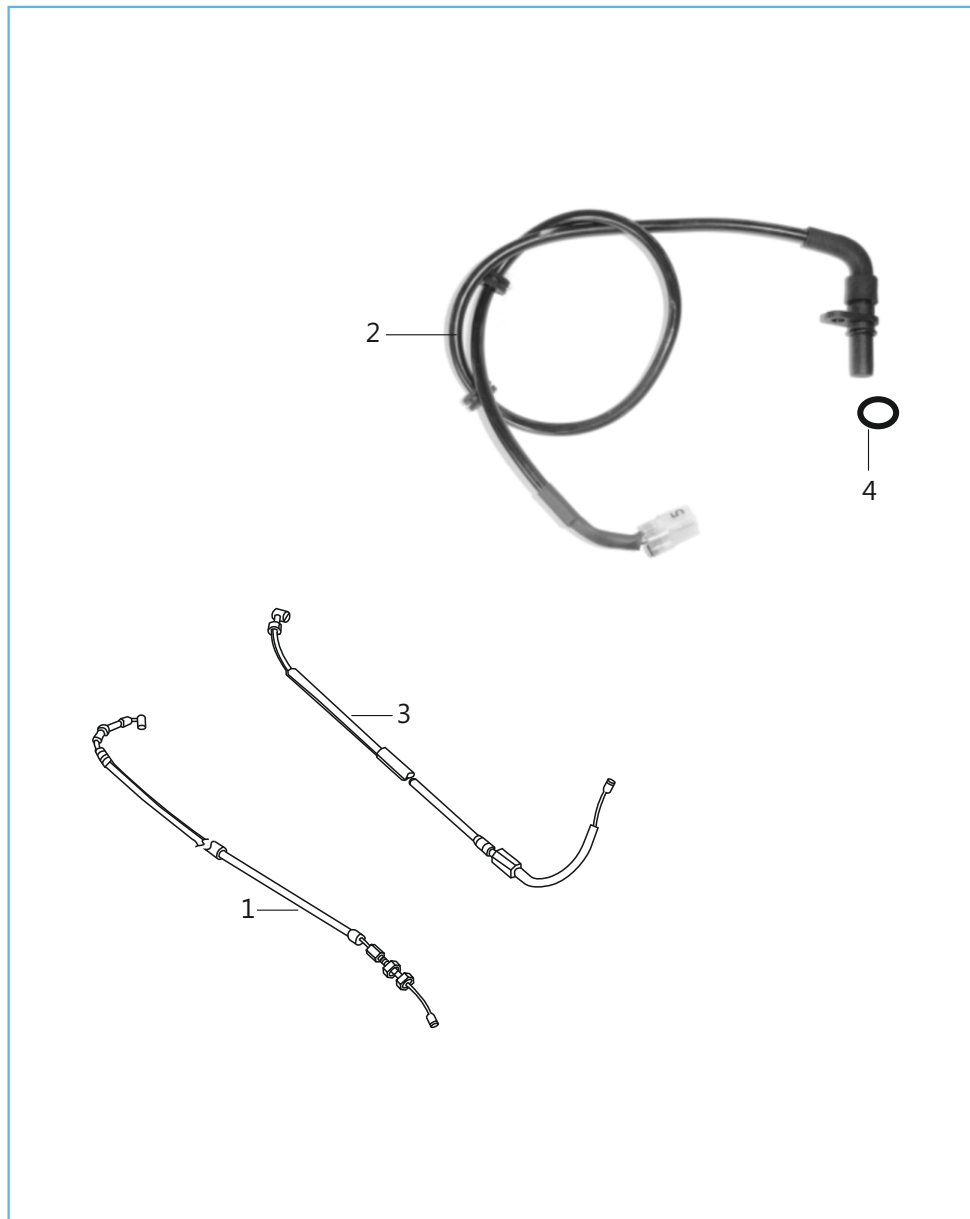

Control Cables

No.	Part No.	Description	Qty	Remarks
1	DJ 1910 61	Cable Accelerator	1	
2	JC 2010 43	Speedo Sensor With Cable 'O' Ring	1	
3	JC 1910 04	Cable Clutch	1	
4	59 2100 19	'O' Ring	1	

Chain Case

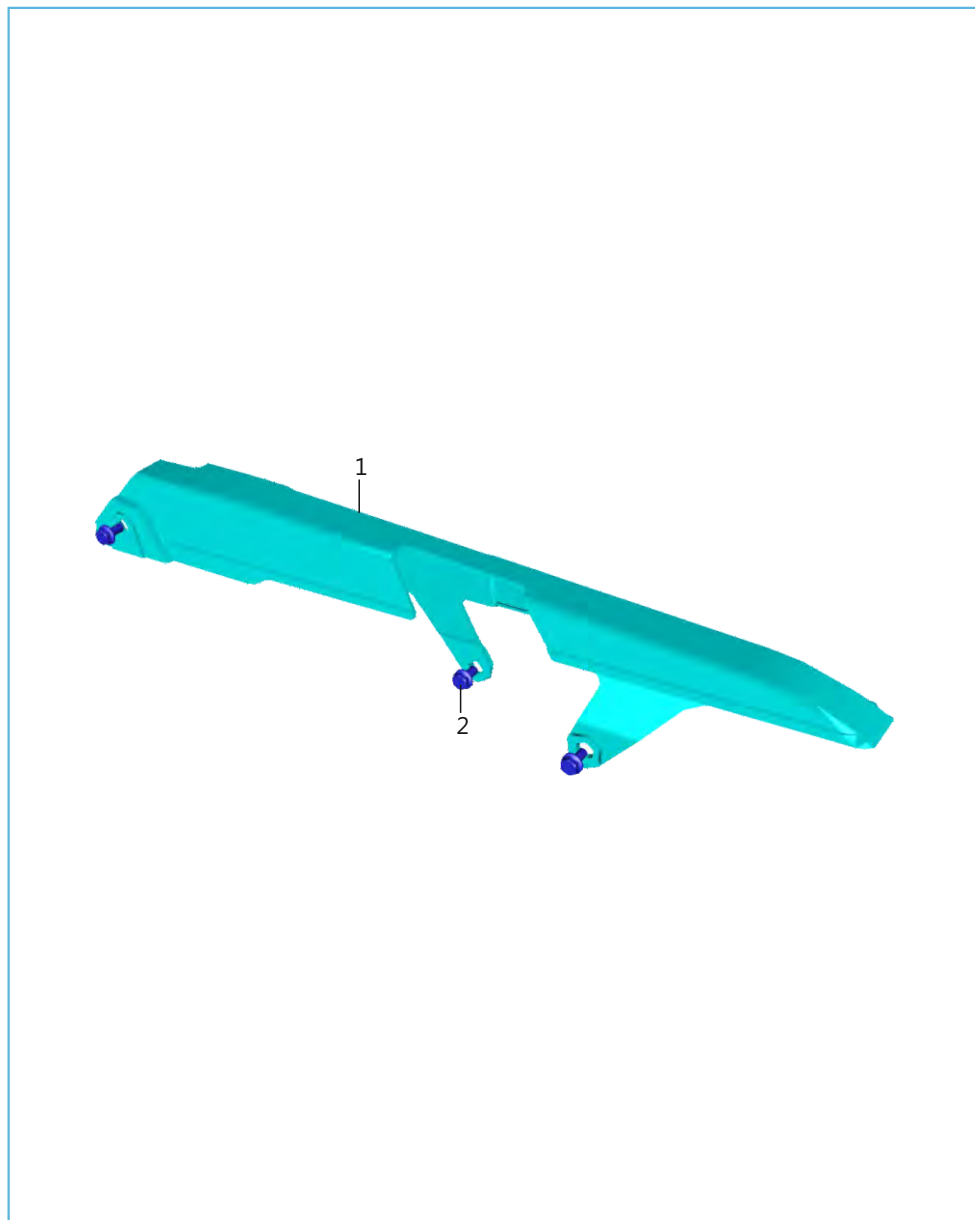

No.	Part No.	Description	Qty	Remarks
1	DK 1612 50	Cover Chain Integral	1	N.I
2	JC 1610 23	Instruction Label	1	
3	KA DD06 12	Bolt Flanged	3	


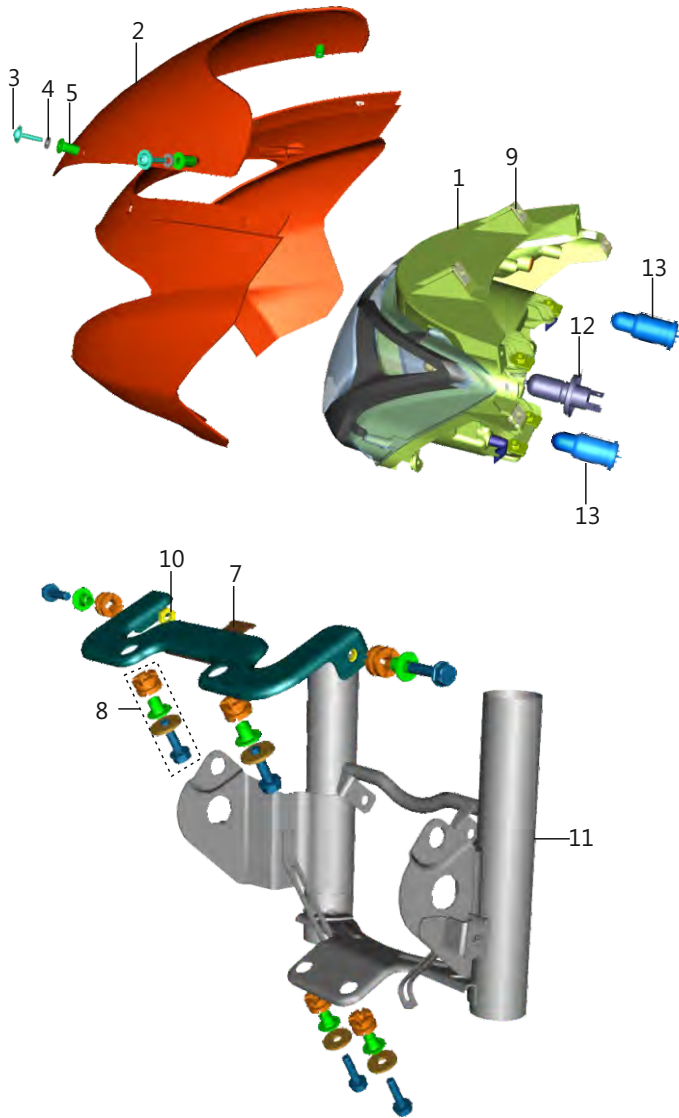


Plate No.: 45

Head Lamp & Fairing

No.	Part No.	Description	Qty	Remarks
1	JC 2010 51	Head Lamp Assly.	1	
2	DJ 1810 33	Wind Shield	1	
3	DF 1810 98	Bolt M-5	4	
4	39 2141 24	Non Metallic Washer	4	
5	DL 1810 10	Well Nut	4	
6	DJ 1810 37	Decal Wind Shield	1	N.I
7	DH 1810 52	Fairing Mounting Upper Bracket	1	
8	36 DH40 20	Kit Hardware Mtg. Bracket	1	
9	DJ 1612 29	Clip Nut	4	
10	KC BA06 05	Nut Hex Thin	2	
11	JC 1810 24	Lamp Shade Assembly	1	
12	CL 2010 23	Lamp 12V 35/35W-HS1	1	
13	DJ 2010 72	Lamp Position 12V/ / 5W	2	
14	DJ 1811 20	Head Lamp Mask	1	N.I.

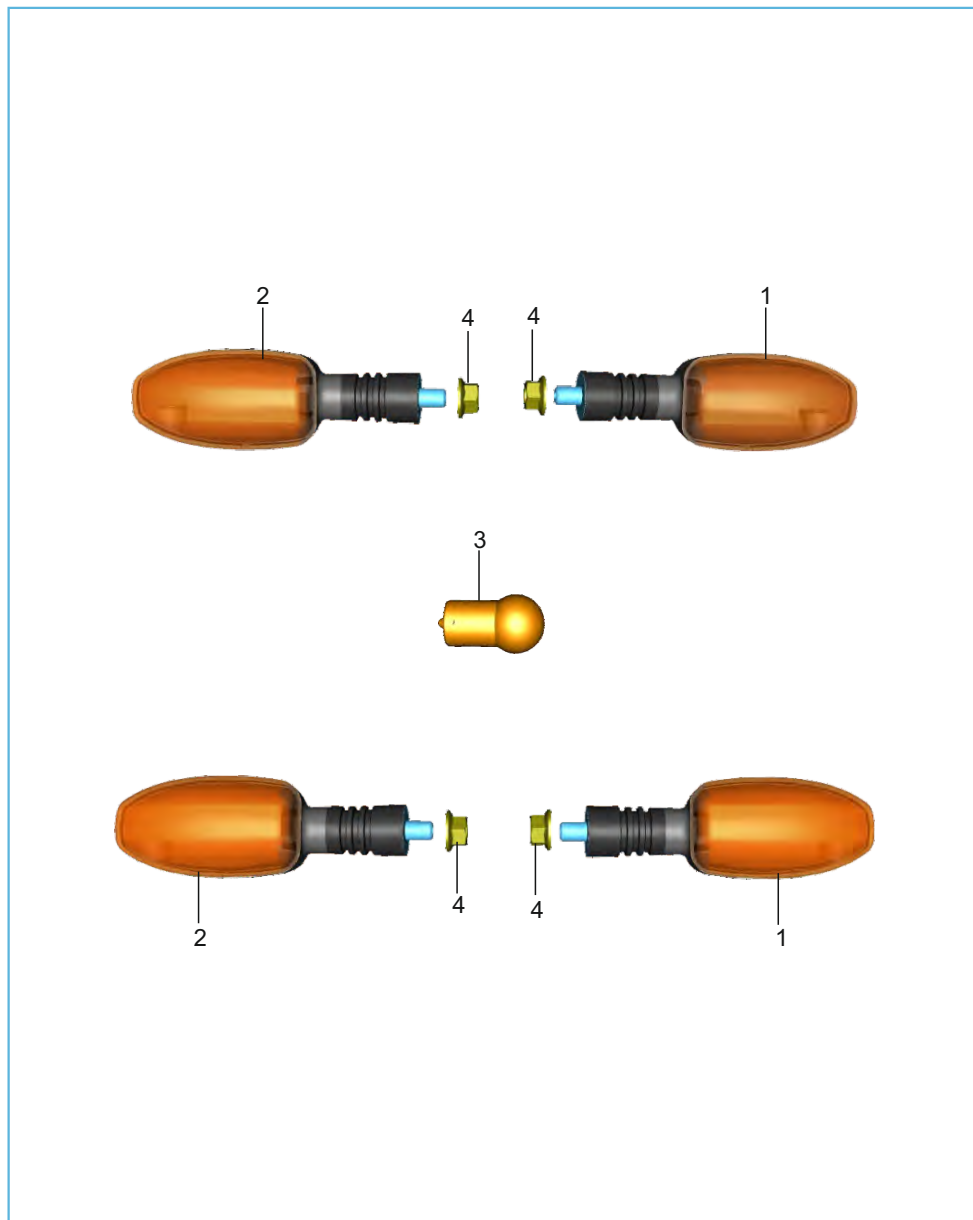

Indicator Light Assembly

No.	Part No.	Description	Qty	Remarks
1	DJ 2012 07	Blinker FR LH / RR RH	1	N.I.
2	DJ 2012 06	Blinker FR RH / RR LH	1	
3	GH 2010 12	Lamp 12V / 10W	4	
4	39 1225 15	Hex Nut Flange	4	
5	DK 1611 64	Indicator Mtg Bkt Rear	1	

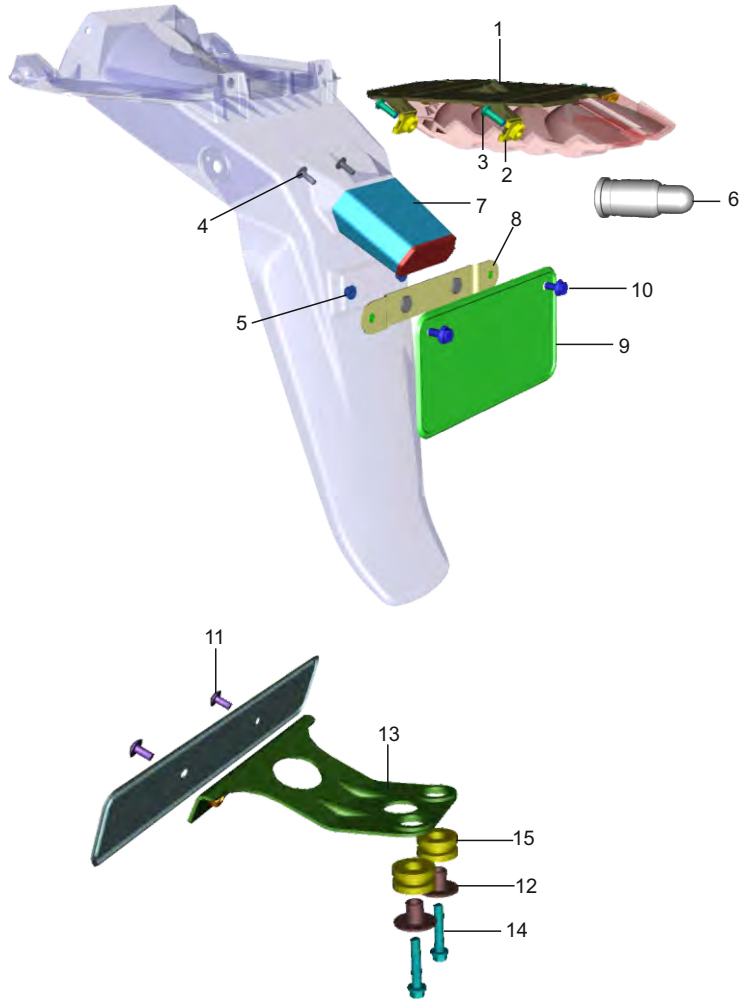


Plate No.: 47

Tail Lamp Assly / FR & RR No. Plate

No.	Part No.	Description	Qty	Remarks
1	DK 2010 03	LED Tail Lamp Assly	1	
2	DK 1611 53	Clip Nut	4	
3	39 2592 01	Screw Pan Cross	4	
4	39 1907 01	Truss Screw	2	
5	39 1972 15	Bolt Flange	2	
6	DJ 2010 72	Lamp 12V-4W	1	
7	JW 4010 11	No. Plate Illumination	1	
8	DJ 1610 72	Rear No. Plate Bkt.	1	
9	DF 1612 52	Plate - Number :- Rear In Black	1	
10	KA DD06 12	Bolt Flanged	2	
11	39 1783 01	Truss Screw	2	
12	30 2110 05	Collar	2	
13	JC 1810 26	No. Plate Mounting Bracket	1	
14	39 1074 04	Bolt Flange	2	
15	DH 1612 93	Grommet For Number Plate Mtg	2	



Tool Kit

No.	Part No.	Description	Qty	Remarks
1	DJ 2210 19	Tool Kit	1	
2	DK 2210 24	O-Ring (Band Tool Kit)	2	


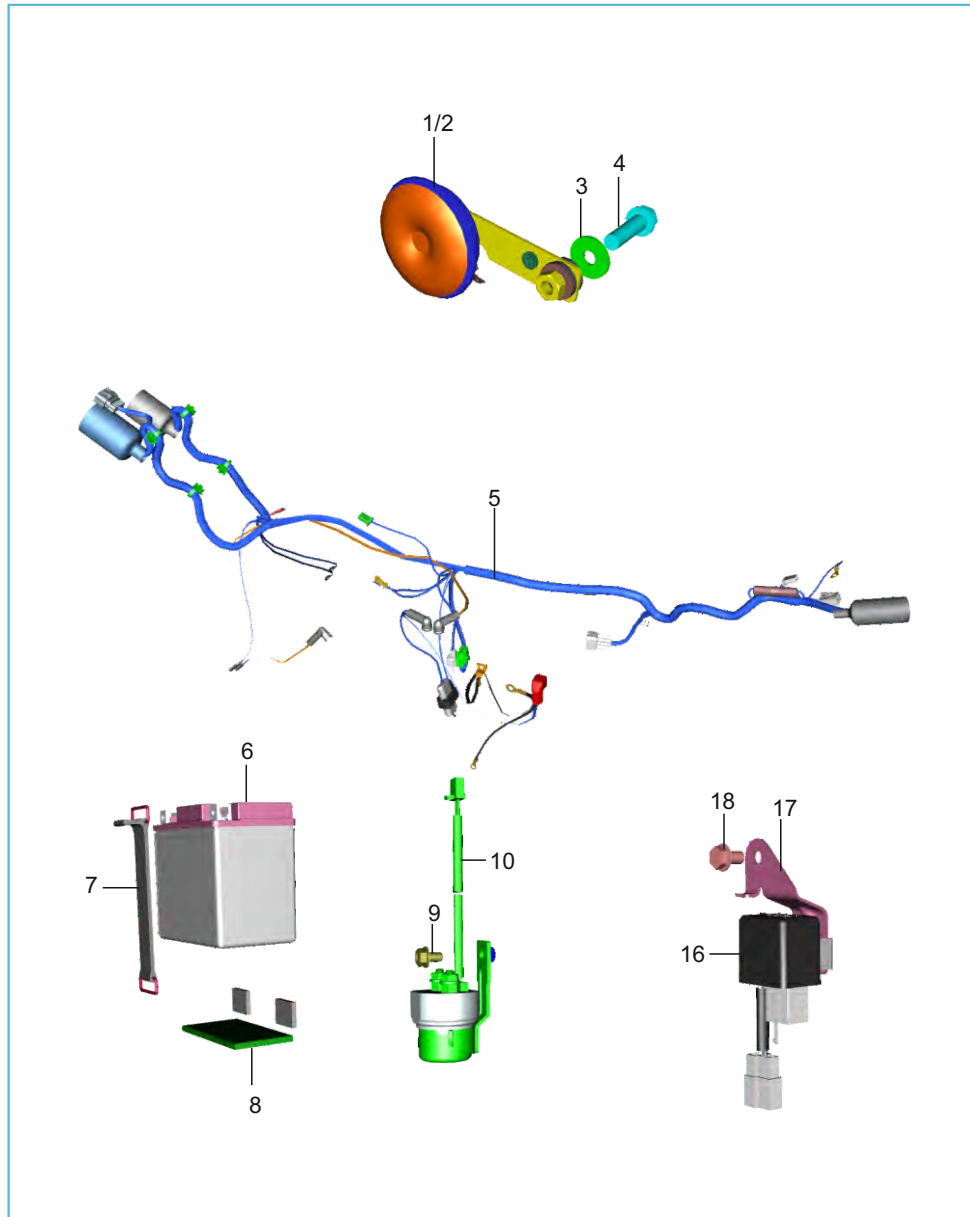


Plate No.: 49

Electrical Equipments


No.	Part No.	Description	Qty	Remarks
1	DK 2010 37	Horn	1	
2	DK 2010 38	Horn	1	
3	39 1507 11	Plain Washer	1	
4	LA D000 18	Bolt Flanged M5x0.8x10	1	
5	DJ 2012 61	Wiring Harness	1	
6	DJ 2012 41	Battery 12v 9AH Mf Dry Charged	1	
7	DJ 1612 47	Band Battery	1	
8	DJ 1610 07	Pad II - Rubber :- Battery Bracket	3	
9	39 1944 04	Flange Bolt	1	
10	DK 2010 78	Starter Relay	1	
11	DJ 2011 40	Cable Assly. (Battery To Earth)	1	N.I
12	GF 2010 36	Fuse Box Assly.	1	
13	06 2012 84	Fuse 10 Amp	2	N.I
14	DJ 2011 40	Cable Assly. (Battery To St. Relay)	1	N.I
15	30 1910 48	Cable Tie Lock	4	N.I
16	DJ 2012 02	Assy. Regulator	1	
17	DJ 1613 27	Bkt LCM Mtg	1	
18	39 1944 04	Bolt for BKT Mtg (UG-5)	1	

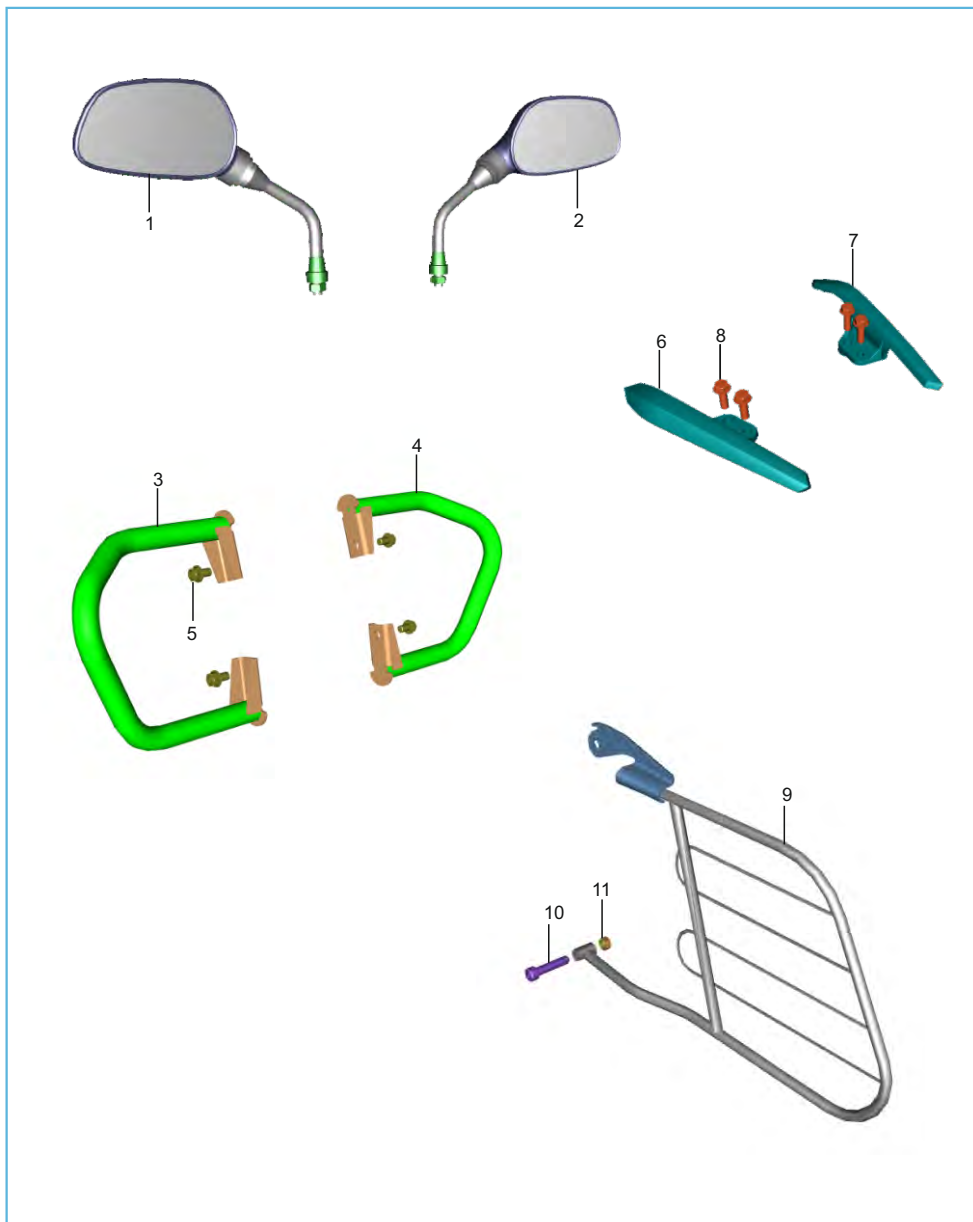

Accessories / Grab Handle


No.	Part No.	Description	Qty	Remarks
1	DJ 2210 03	Mirror Assembly - LH	1	
2	DJ 2210 04	Mirror Assembly - RH	1	
3	DJ 2210 20	Leg Guard LH	1	
4	DJ 2210 21	Leg Guard RH	1	
5	KA DA08 14	Bolt Flanged	2	
6	56 DJ5U 9J	Grab Handle LH (DK161432)	1	Satin Red
7	56 DJ5V 9J	Grab Handle RH (DK161433)	1	Satin Red
8	KA DD08 25	Bolt Flange	4	
9	DK 1611 76	Saree Guard	1	
10	39 1608 04	Hex Socket Head Bolt	1	
11	39 0296 15	Nut	1	

Painted Parts & Decals

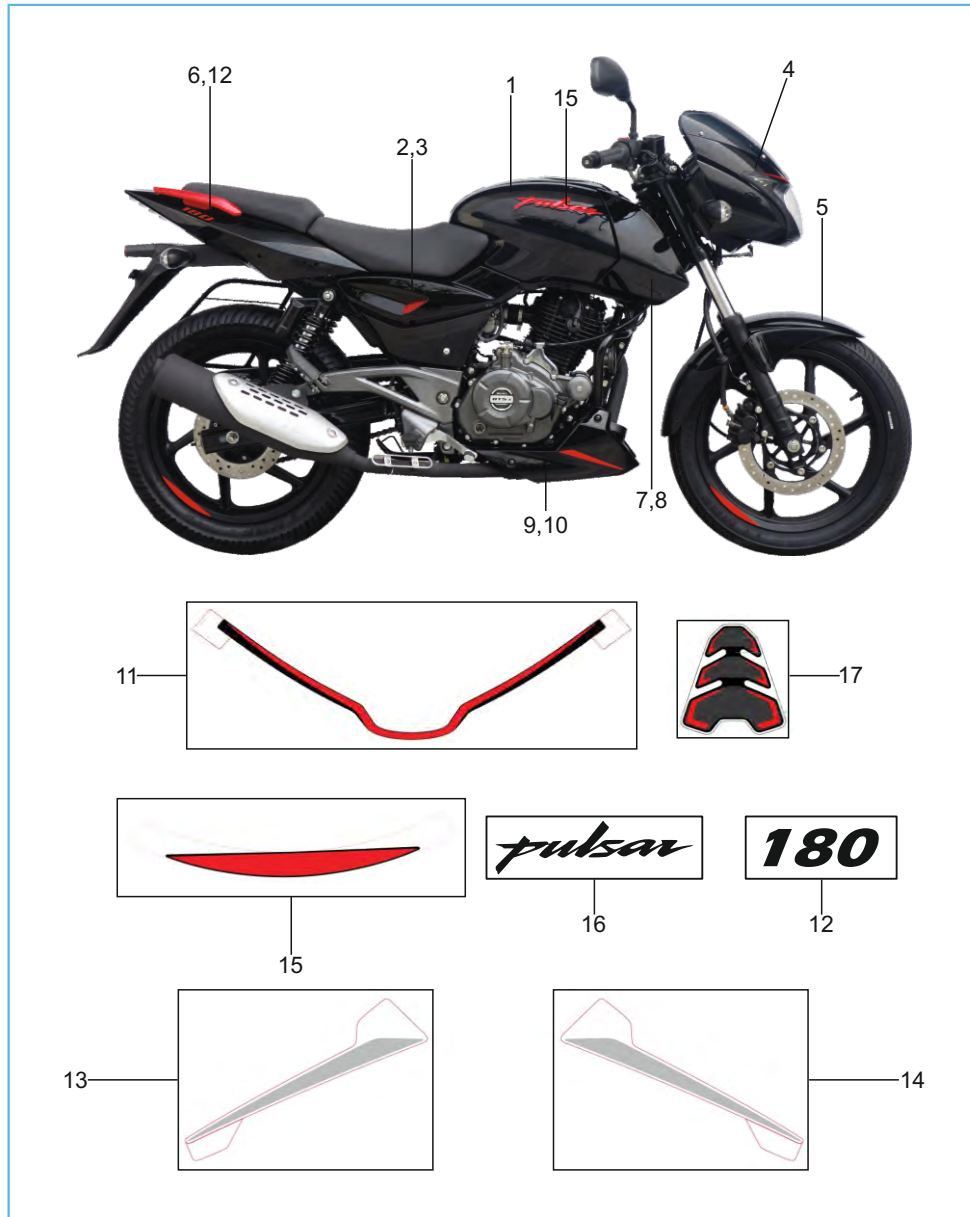

No.	Part No.	Description	Qty	Remarks
1	52 DJ18 03	Fuel Tank EB.Black+P.Red 3D Decal	1	EB Black Red & EB Pla.Silver
	52 DJ18 09	Fuel Tank EB.Black+P.Silver 3D Decal	1	
	52 DJ18 18	Fuel Tank CH.Black+S.Oran. 3D Decal	1	
2	52 DH23 89	Side Cover LH Assly. Passion Red	1	
	52 DH24 47	Side Cover LH Assly. Platinum Silver	1	
	52 DH25 48	Side Cover LH Assly. B.Sporty Orange	1	
3	52 DH23 90	Side Cover RH Assly. Passion Red	1	
	52 DH24 48	Side Cover RH Assly. Platinum Silver	1	
	52 DH25 49	Side Cover RH Assly. B.Sporty Orange	1	
4	56 DJ04 X3	Front Fairing Ebony Black	1	
	56 DJ04 A7	Front Fairing Matt Volcanic Red	1	
5	52 DJ16 33	Front Fender In Charcoal Black	1	
6	52 DJ18 00	Seat Cowl EB Black+P.Red 3D Decal	1	
	52 DJ18 06	Seat Cowl EB Black+P.Silver 3D Decal	1	
	52 DJ18 12	Seat Cowl CH.Black+Sport.Orag.Decal	1	
7	52 DH32 29	Tank Flap LH Charcoal Black	1	
8	52 DH32 30	Tank Flap RH Assly.Ch.Blk W/o Decal	1	
9	52 DJ18 01	Belly Pan LH EB Black+Red Decal	1	
	52 DJ18 07	Belly Pan LH EB Black+P.Silver Decal	1	
	52 DJ18 13	Belly Pan LH Charcoal Black+Decal	1	
10	52 DJ18 02	Belly Pan RH EB Black+Red Decal	1	
	52 DJ18 08	Belly Pan RH EB Black+P.Silver Decal	1	
	52 DJ18 14	Belly Pan RH Charcoal Black+decal	1	

Painted Parts & Decals

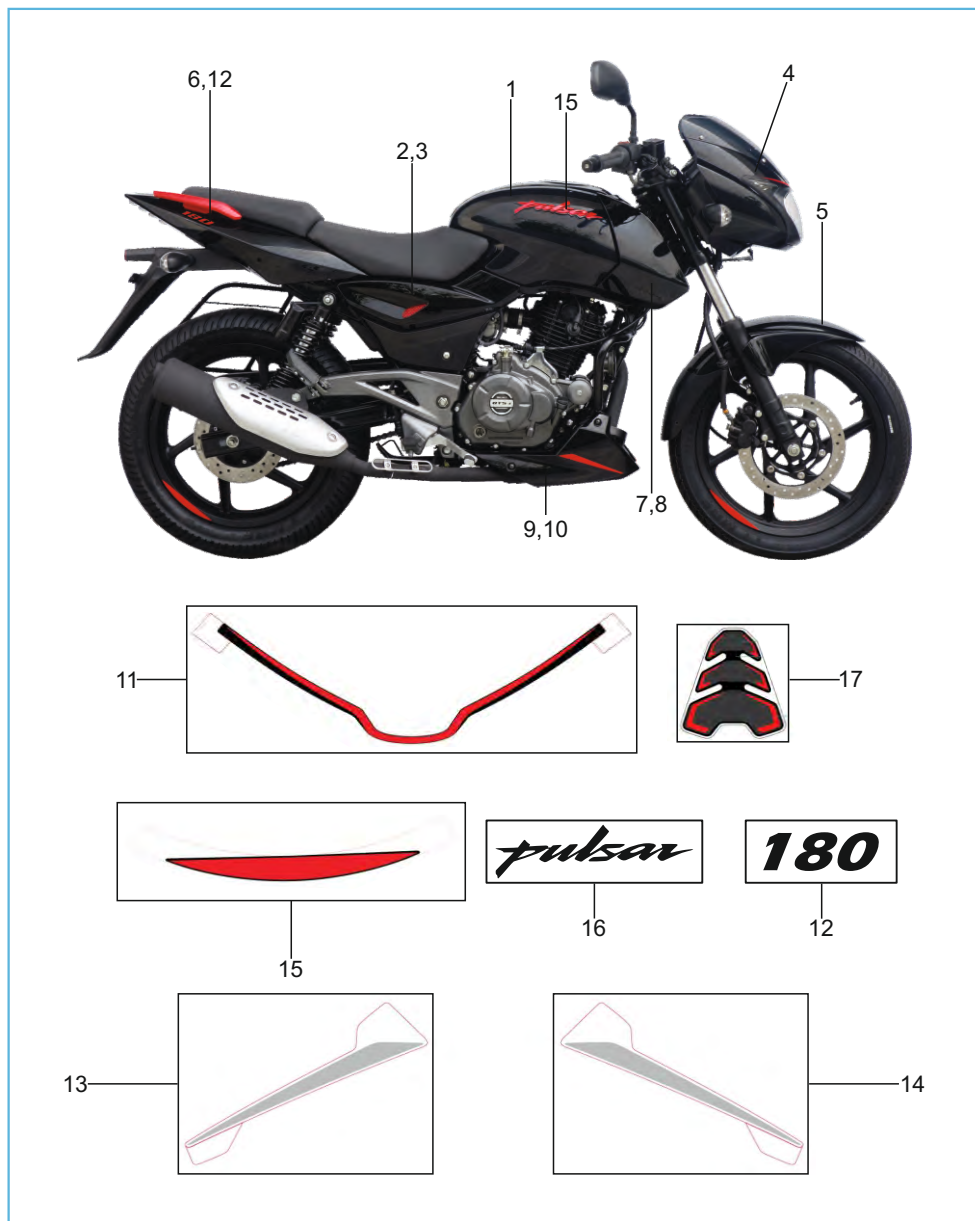

No.	Part No.	Description	Qty	Remarks
11	DH 0103 82	Decal Fairing Front Passion Red	1	
	DH 0104 01	Decal Fairing Platinum Silver	1	
	DH 0104 15	Decal Fairing Front S Orange	1	
12	DJ 0101 99	Decal Cowl Seat Ebony Black Red	2	
	DJ 0102 00	Decal Cowl Seat E Black P Silver	2	
	DJ 0102 01	Decal Cowl Seat C Black S Orange	2	
13	DJ 0101 96	Decal Belly Pan LH Ebony Black Red	1	
	DJ 0101 97	Decal Belly Pan LH E Blk P Silver	1	
	DJ 0101 98	Decal Belly Pan LH C Blk S Orang	1	
14	DJ 0102 02	Decal Belly Pan RH E Black Red	1	
	DJ 0102 03	Decal Belly Pan RH E Black P Silver	1	
	DJ 0102 04	Decal Belly Pan RH C Black S Orange	1	
15	DH 0103 84	Decal Wheel Passion Red	4	
	DH 0104 02	Decal Wheel Platinum Silver	4	
	DH 0104 16	Decal Wheel Sporty Orange	4	
16	DH 0103 88	Decal 3D Passion Red	2	
	DH 0104 05	Decal 3D Platinum Silver	2	
	DH 0104 19	Decal 3D Sporty Orange	2	
17	DH 0103 90	Label Dome Tank Passion Red	1	
	DH 0104 03	Decal Dome Tank Platinum Silver	1	
	DH 0104 17	Decal Pad Tank Sporty Orange	1	

Kit List



Sr. No.	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty./Kit
1	36DJ1004	Valve Kit Pulsar Dts-i 180	DJ101124	Valve - Intake	1
			DJ101125	Valve - Exhaust	1
2	36DH4030	Kit Chain Guide Pulsar-150	DK101059	Guide Chain (Slack)	1
			DH101923	Guide Cam Chain Tight Side	1
3	36PD0030	Kit Friction Plate-A101	DK101566	Clutch Friction Disk (CFD)	1
			PD551419	Disk C Friction Clutch	1
			DK101568	Clutch Friction Disk-b	1
4	36DK0007	Kit Centrifugal Oil Filter	39220011	Washer - Plain (Primary Drive Gear)	1
			DH101234	Gasket -Centrifugal Oil Filter	1
			39226701	Screw - Slotted & Cross Recess Csk	3
			DH101066	Joint - Oil Delivery :- B	1
			DH101067	Spring - Oil Delivery :- B	1
			39219908	Pin - Snap (Oil Delivery Joint B)	1
5	36DK0038	Kit Set Primary Drive & Driven	DH101628	Gear Primary Drive	1
			DK101561	Housing Comp. Clutch	1
6	36PD0012	Kit Assly. Clutch Cover-A102	PD541228	Cover Clutch	1
			DK101738	Decal Cover RH	1
			39199020	Bearing - Needle	1
			39104119	Seal - Oil	1
			CB101220	Plug - Taper :- 6 X 7	2
7	36DK0076	Kit Starter Clutch Assembly	DK101595	Body Starter Clutch	1
			DK101596	Spring Starter Clutch	5
			39084914	Washer - Lock :- Toothed	3
8	36DK0159	Kit St. Cone With Grease	DK181050	Cage Bearing Steering Top	1
			DG181045	Bearing Cone :- Upper	1
			DG181005	Bearing Cone	1
			DG181003	Washer	1
			DG181004	Seal - Oil	1
			DK181051	Cage Bearing Steering Bottom	1
			DG181047	Bearing Race - Lower	1
			DG181046	Bearing Race - Upper	1
9	36DK0013	Kit Hardware Pillion Sup	DJ161186	Washer	2
			DH161061	Pin - Pillion Step	2
			30141031	Ring - O	2
			39104011	Washer - Plain	2
			39078408	Pin - Split	2
10	36DU1901	Cable Adj.kit - CT 100	30191017	Nut	2
			DD191147	Screw For Cable Adjuster	2

Kit List



Sr. No.	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty./Kit
11	36DH4020	Kit Hardware Fairing Mounting	DJ181029	Collar - Fairing Mounting	6
			DJ181064	Grommet - Fairing Mounting	6
			39021111	Washer - Plain	4
			39155204	Bolt - Flange :- M6	4
12	36DJ4108	Belly Pan Dcl Kit EB Blk P.red	DJ010202	Decal Belly Pan RH E Black Red	1
			DJ010196	Decal Belly Pan LH Ebony Blk Red	1
13	36DJ4110	Belly Pan Dcl Kit EB Plt Silver	DJ010203	Decal Belly Pan RH E Blk P. Silver	1
			DJ010197	Decal Belly Pan LH E Blk P. Silver	1
14	36DJ4109	Belly Pan Dcl Kit CH.blck Spt Org	DJ010204	Decal Belly Pan RH C Blk S Orang	1
			DJ010198	Decal Belly Pan LH C Blk S Orang	1

BAJAJ
pulsar *DTS-i*
180 BS IV

Page No.	Fig. No.	Old Part No.	New Part No.	Description	Update Date	Remarks

BAJAJ
pulsar *DTS-i*
180 BS IV

Page No.	Fig. No.	Old Part No.	New Part No.	Description	Updation Date	Remarks

Part Index

BAJAJ
pulsar **180 BS IV**

Part No.	Figure No.	Page No.
22150241	10	52
30151082	17	68
30161157	2	58
30191048	15	98
30211005	12	94
31101173	4	14
31121006	8	12
31201079	8	74
33141008	3	4
33141008	12	80
39020111	7	38
39029615	11	100
39042215	10	58
39071111	6	56
39071411	15	52
39074011	11	80
39075201	3	26
39078708	3	58
39079815	7	56
39090012	4	62
39096315	14	54
39097204	10	46
39099906	10	28
39104119	3	28
39104119	18	28
39106204	24	18
39106901	9	54
39107404	14	94
39118011	26	76
39118415	17	76
39119704	6	20
39122515	4	92
39128321	5	6
39128321	11	6
39150711	3	98
39155304	10	76

Part No.	Figure No.	Page No.
39155604	7	82
39160804	10	100
39162011	9	16
39166005	1	6
39167304	12	10
39167704	16	26
39168606	8	16
39168606	4	42
39177802	2	84
39178001	11	34
39178001	14	36
39178301	11	94
39182912	16	52
39188020	3	10
39190204	8	22
39190204	5	40
39190204	5	82
39190701	4	84
39190701	4	94
39193120	6	14
39194304	19	76
39194404	10	44
39194404	18	44
39194404	9	98
39194404	18	98
39196704	3	48
39197015	5	38
39197015	5	48
39197215	5	94
39199020	11	32
39199715	9	52
39199819	13	22
39201719	5	8
39203804	15	68
39213217	5	12
39214124	4	90

Part Index

BAJAJ
pulsar **180 BS IV**

Part No.	Figure No.	Page No.
39215220	5	16
39215220	9	24
39215704	9	48
39215811	2	18
39215911	10	18
39215911	15	18
39216011	9	18
39216511	3	14
39218106	2	12
39218819	7	26
39219019	15	26
39219421	6	42
39220011	16	32
39220307	8	14
39231204	10	48
39236615	17	52
39238315	14	22
39239121	3	2
39242411	8	82
39242704	16	76
39244011	9	8
39244311	17	28
39247504	9	74
39248104	5	70
39253204	8	2
39254220	2	10
39258320	17	26
39259201	3	94
39260120	6	24
39260320	18	26
39260607	7	20
39260801	10	6
39264715	6	2
39266921	14	10
59020001	11	82
59040005	16	78

Part No.	Figure No.	Page No.
59040041	8	48
59040048	2	66
59050008	2	26
59100002	1	44
59200006	5	24
59200007	23	26
59200007	9	46
59200028	12	16
59200029	19	26
59210006	5	26
59210019	4	86
06201284	13	98
36DH4020	8	90
36DH4030	4	10
36DJ1004	7	8
36DK0007	7	14
36DK0013	5	54
36DK0036	6	68
36DK0038	9	14
36DK0069	2	72
36DK0070	2A	72
36DK0071	4	72
36DK0076	1	46
36DK0159	4	50
36DU1901	11	76
36PD0012	1	28
36PD0030	6	32
52DH0169	1	42
52DH0177	10	16
52DH1317	1	30
52DH2389	2	102
52DH2390	3	102
52DH2447	2	102
52DH2448	3	102
52DH2548	2	102
52DH2549	3	102

Part Index

BAJAJ
Pulsar 180 BS IV

Part No.	Figure No.	Page No.
52DH3229	7	102
52DH3230	8	102
52DJ0449	9	80
52DJ1633	5	102
52DJ1800	6	102
52DJ1801	9	102
52DJ1802	10	102
52DJ1803	1	102
52DJ1806	6	102
52DJ1807	9	102
52DJ1808	10	102
52DJ1809	1	102
52DJ1812	6	102
52DJ1813	9	102
52DJ1814	10	102
52DJ1818	1	102
52JC0209	2	24
52JC0210	1	26
52JN0136	2	2
56DJ04A7	4	102
56DJ04X3	4	102
56DJ3X1Y	1	54
56DJ3Y1Y	2	54
56DJ3Z1Y	4	30
56DJ4E1Y	25	28
56DJ4E1Y	13	46
56DJ5U9J	6	100
56DJ5V9J	7	100
AA101437	8	24
AA141048	12	36
AP101043	5	30
CL201023	12	90
CS101128	13	10
DD101062	15	10
DD111012	15	44
DD121007	9	12

Part No.	Figure No.	Page No.
DD141227	10	80
DD161071	9	38
DD161071	13	54
DE151037	6	66
DE151043	7	66
DE151046	4	66
DE151046	10	72
DE151047	5	66
DE151047	11	72
DE151048	3	66
DE191010	5	64
DE191028	14	64
DE191029	13	64
DE191030	10	64
DE191033	6	64
DE191036	15	64
DE191043	1	64
DF161102	9	58
DF161102	12	58
DF161252	9	94
DF181098	3	90
DG101029	4	8
DG101339	2	74
DG101418	7	28
DG101418	2	30
DG101456	21	26
DG101498	11	2
DG101498	10	26
DG111008	8	44
DG121002	10	36
DG151005	8	62
DG151007	9	62
DG151008	12	62
DG151008	2	68
DG161121	13	82
DG161124	10	38

Part Index

BAJAJ
Pulsar 180 BS IV

Part No.	Figure No.	Page No.
DG171018	5	52
DG171019	3	52
DG171022	8	52
DG171034	6	52
DG171038	14	52
DG181008	2	56
DG181008	18	78
DG181045	22	78
DH010382	11	104
DH010384	15	104
DH010388	16	104
DH010390	17	104
DH010401	11	104
DH010402	15	104
DH010403	17	104
DH010405	16	104
DH010415	11	104
DH010416	15	104
DH010417	17	104
DH010419	16	104
DH101048	7	10
DH101050	9	10
DH101064	10	14
DH101072	2	16
DH101079	4	18
DH101084	8	18
DH101111	12	18
DH101141	4	28
DH101142	5	28
DH101146	3	20
DH101152	23	28
DH101154	12	28
DH101163	16	46
DH101172	7	46
DH101195	11	14
DH101197	2	28

Part No.	Figure No.	Page No.
DH101199	6	44
DH101203	20	26
DH101235	5	18
DH101275	20	28
DH101275	1	32
DH101295	8	8
DH101319	17	18
DH101355	12	14
DH101380	7	44
DH101381	5	44
DH101385	3	16
DH101385	9	26
DH101385	14	26
DH101385	5	46
DH101386	4	44
DH101389	14	46
DH101392	10	10
DH101393	3	22
DH101394	10	24
DH101396	2	14
DH101412	6	10
DH101424	6	16
DH101487	7	24
DH101493	4	20
DH101496	9	20
DH101508	3	6
DH101544	16	28
DH101581	8	26
DH101581	4	46
DH101607	12	38
DH101648	15	32
DH101714	15	22
DH101719	22	26
DH101719	6	36
DH101896	3	24
DH101916	10	2

Part Index

BAJAJ
Pulsar **180 BS IV**

Part No.	Figure No.	Page No.
DH102125	8	10
DH102174	7	4
DH102175	8	4
DH102180	9	4
DH102180	4	6
DH102189	8	20
DH102201	5	2
DH102349	2	38
DH102351	11	38
DH111013	16	44
DH111015	14	44
DH111016	17	44
DH111081	2	44
DH111114	11	46
DH121010	3	42
DH121011	14	28
DH121012	15	28
DH121035	5	42
DH121038	7	6
DH121093	12	34
DH121162	7	34
DH121168	13	34
DH121169	3	34
DH121171	2	34
DH121190	8	36
DH141023	3	80
DH141050	1	80
DH161046	2	40
DH161066	7	58
DH161100	15	54
DH161121	4	58
DH161133	1	82
DH161145	5	58
DH161146	8	58
DH161155	8	38
DH161155	11	54

Part No.	Figure No.	Page No.
DH161158	8	80
DH161158	14	82
DH161189	11	48
DH161190	12	48
DH161293	15	94
DH161416	13	36
DH171019	7	52
DH171019	13	62
DH171019	20	68
DH181052	7	90
DH181119	24	76
DH181130	24	76
DH191007	13	76
DH191008	12	76
DH191017	23	76
DH201065	9	34
DH201065	13	58
DJ010196	13	104
DJ010197	13	104
DJ010198	13	104
DJ010199	12	104
DJ010200	12	104
DJ010201	12	104
DJ010202	14	104
DJ010203	14	104
DJ010204	14	104
DJ101012	2	6
DJ101064	4	38
DJ101158	3	12
DJ101312	23	18
DJ101350	3	32
DJ101371	6	12
DJ101373	1	10
DJ101689	1	16
DJ101717	1	2
DJ101738	9	6

Part Index

BAJAJ
Pulsar **180 BS IV**

Part No.	Figure No.	Page No.
DJ101743	1	24
DJ101745	1	38
DJ111098	9	44
DJ121044	4	34
DJ121053	5	34
DJ121054	6	34
DJ121056	8	34
DJ121059	14	34
DJ121070	10	34
DJ121081	7	36
DJ121082	3	36
DJ121087	1	36
DJ121089	5	4
DJ121094	1	34
DJ121096	6	6
DJ141008	13	48
DJ141008	6	82
DJ141056	16	80
DJ141072	6	80
DJ151073	8	66
DJ151074	9	66
DJ151075	10	66
DJ151076	2	64
DJ161007	8	98
DJ161069	4	56
DJ161072	8	94
DJ161126	3	54
DJ161127	4	54
DJ161128	7	54
DJ161129	8	54
DJ161186	6	54
DJ161228	8	30
DJ161229	9	90
DJ161247	7	98
DJ161278	12	54
DJ161327	17	98

Part No.	Figure No.	Page No.
DJ161420	1	50
DJ161440	20	82
DJ171039	3	78
DJ171044	12	52
DJ181033	2	90
DJ181037	6	90
DJ181065	12	82
DJ181119	5	84
DJ181120	14	90
DJ191025	7	70
DJ191026	8	70
DJ191028	7	64
DJ191029	8	64
DJ191030	9	64
DJ191056	11	64
DJ191057	3	64
DJ191061	1	86
DJ191081	7A	76
DJ191082	7	76
DJ191083	8	76
DJ191085	1	84
DJ201072	13	90
DJ201072	6	94
DJ201109	12	64
DJ201137	3	84
DJ201140	11	98
DJ201140	14	98
DJ201202	11	44
DJ201202	16	98
DJ201206	2	92
DJ201207	1	92
DJ201241	6	98
DJ201246	20	76
DJ201261	5	98
DJ221003	1	100
DJ221004	2	100

Part Index

BAJAJ
pulsar **180 BS IV**

Part No.	Figure No.	Page No.
DJ221019	1	96
DJ221020	3	100
DJ221021	4	100
DK101063	1	12
DK101072	13	32
DK101094	4	26
DK101097	6	26
DK101102	6	18
DK101103	3	18
DK101104	7	18
DK101105	14	18
DK101126	14	32
DK101135	10	20
DK101144	19	18
DK101159	1	20
DK101160	2	20
DK101176	6	46
DK101177	16	22
DK101180	9	22
DK101182	6	22
DK101185	11	22
DK101185	4	74
DK101186	10	22
DK101186	3	74
DK101187	12	22
DK101187	5	74
DK101245	21	18
DK101251	6	28
DK101253	4	22
DK101314	6	38
DK101314	10	54
DK101326	6	8
DK101352	20	18
DK101380	13	26
DK101471	1	18
DK101480	13	28

Part No.	Figure No.	Page No.
DK101569	5	32
DK101570	17	32
DK101571	18	32
DK101573	12	32
DK101574	10	32
DK101592	7	12
DK101596	15	46
DK101605	2	46
DK101717	11	18
DK101718	13	18
DK101719	18	18
DK101721	16	18
DK101722	2	22
DK101725	5	22
DK101732	5	20
DK101733	1	22
DK101738	19	28
DK101738	6	30
DK101748	1	8
DK101751	2	8
DK101755	3	8
DK121009	5	36
DK121015	4	36
DK121091	6	4
DK141028	14	80
DK151009	1	68
DK151012	3	68
DK151015	11	68
DK151022	13	68
DK151026	3	60
DK151028	7	62
DK151031	1	72
DK151034	2	70
DK151039	2	60
DK151040	5	60
DK151041	9	72

Part Index

BAJAJ
pulsar **180 BS IV**

Part No.	Figure No.	Page No.
DK151042	5	72
DK151045	4	70
DK151050	4	60
DK151063	6	70
DK151069	4	64
DK151070	3	72
DK151081	19	68
DK151082	18	68
DK151084	9	70
DK151085	12	72
DK151088	13	72
DK151089	6	72
DK151090	7	72
DK151095	1	62
DK151096	10	62
DK151097	14	68
DK151122	8	72
DK161085	8	56
DK161096	14	48
DK161098	1	56
DK161122	1	58
DK161123	9	82
DK161124	10	82
DK161153	2	94
DK161161	6	48
DK161163	7	74
DK161164	5	92
DK161171	15	82
DK161172	16	82
DK161176	9	100
DK161250	1	88
DK161338	5	56
DK161415	1	48
DK161416	2	48
DK161443	17	82
DK161444	18	82

Part No.	Figure No.	Page No.
DK161447	19	82
DK171003	2	52
DK171006	4	52
DK171011	1	52
DK171014	13	52
DK181006	7	78
DK181007	6	78
DK181010	8	78
DK181011	10	78
DK181012	4	12
DK181017	27	78
DK181018	15	78
DK181020	26	78
DK181021	2	78
DK181022	12	78
DK181023	13	78
DK181024	23	78
DK181025	24	78
DK181028	25	78
DK181036	27	76
DK181043	15	76
DK181050	5	50
DK181051	6	50
DK181073	11	78
DK181075	2	50
DK181076	3	50
DK181082	21	76
DK181086	22	76
DK181087	1	78
DK181090	4	78
DK181091	5	78
DK181092	9	78
DK181093	14	78
DK181100	1	76
DK181100	17	78
DK181102	3	76

Part Index

BAJAJ
Pulsar 180 BS IV

Part No.	Figure No.	Page No.	Part No.	Figure No.	Page No.
DK181104	2	76	JC101001	1	14
DK191012	1	74	JC101034	11	10
DK191014	6	74	JC101112	3	46
DK201003	1	94	JC101145	8	46
DK201037	1	98	JC111022	12	44
DK201038	2	98	JC111023	13	44
DK201065	13	80	JC111028	3	44
DK201078	10	98	JC141015	3	82
DK211008	4	40	JC141016	4	82
DK211012	1	40	JC141017	2	82
DK211014	3	40	JC151013	1	60
DK221024	2	96	JC151016	9	68
DL181010	5	90	JC151019	2	62
DL191014	9	76	JC161017	6	58
DS101071	24	28	JC161023	2	88
DS101084	7	2	JC181022	20	78
DS101154	5	14	JC181023	19	78
DS101166	4	2	JC181024	21	78
DS101215	8	28	JC181024	11	90
DS101353	12	46	JC181026	13	94
DS121116	15	36	JC191004	3	86
DS121117	9	36	JC201039	11	58
DS121126	11	36	JC201043	2	86
DS151073	8	68	JC201046	5	62
DS161125	3	56	JC201051	1	90
DS191052	14	76	JD113814	11	4
DS211004	6	40	JD113815	12	4
DT561205	7	22	JD401400	6	76
DU101223	11	26	JF401400	5	76
DV101042	3	30	JG131219	10	68
DV101048	22	18	JG131821	1	70
GF201036	12	98	JG171029	5	80
GH201012	3	92	JG171029	7	80
JA581406	2	42	JG171086	4	80
JB401402	18	76	JL581065	4	4
JB591068	13	38	JL581066	2	4

Part Index

BAJAJ
Pulsar 180 BS IV

Part No.	Figure No.	Page No.	Part No.	Figure No.	Page No.
JM171004	11	52	LCA00002	4	68
JW401011	7	94	PD131803	11	62
JW591028	3	38	PD131853	1	66
KACA0516	2	80	PD511229	5	10
KADA0814	5	100	PD531029	13	14
KADD0612	3	88	PD531229	4	16
KADD0612	10	94	PD541279	21	28
KADD0825	8	100	PD541279	2	32
KADF0630	13	4	PD541280	11	28
KADF0825	7	48	PD551421	4	32
KADF0825	3	70	PD551427	8	32
KADF0880	4	48	PD551439	7	32
KAED0625	11	16	PD582200	1	4
KAED0625	22	28	PF131220	5	68
KAED0625	9	32	YDH19002	6	84
KAED0635	9	2			
KAEG0614	10	4			
KAEG0614	8	6			
KBBA0408	3	62			
KBBA0525	2	36			
KCBA0605	10	90			
KCGA0505	15	80			
KCGF0606	14	4			
KEAB1010	7	16			
KJAB1019	12	26			
KJAC1824	11a	6			
KPAC6005	7	68			
KPAF6004	4	24			
KPBC6202	6	62			
KPBC6202	12	68			
KPBC6302	16	68			
LAC00020	25	76			
LAC00059	4	76			
LAD00018	4	98			
LAE00018	9	28			
LAE00018	7	30			